Nokia Customer Care

Service Manual

RM-209 (Nokia 7373)

Mobile Terminal

Part No: 9254061 (Issue 1)

COMPANY CONFIDENTIAL

NOKIA

Copyright © 2006 Nokia. All rights reserved.

Amendment Record Sheet

Amendment No	Date	Inserted By	Comments
Original issue	09/2006	J Bryman	

Copyright © 2006 Nokia. All rights reserved.

Copyright

Copyright © 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

IMPORTANT

This document is intended for use by qualified service personnel only.

Copyright © 2006 Nokia. All rights reserved.

Warnings and cautions

Warnings

- IF THE DEVICE CAN BE INSTALLED IN A VEHICLE, CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/ MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
- THE PRODUCT MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, FOR EXAMPLE, PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
- OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.
- BEFORE MAKING ANY TEST CONNECTIONS, MAKE SURE YOU HAVE SWITCHED OFF ALL EQUIPMENT.

Cautions

- Servicing and alignment must be undertaken by qualified personnel only.
- Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
- Ensure solder, wire, or foreign matter does not enter the telephone as damage may result.
- Use only approved components as specified in the parts list.
- Ensure all components, modules, screws and insulators are correctly re-fitted after servicing and alignment.
- Ensure all cables and wires are repositioned correctly.
- Never test a mobile phone WCDMA transmitter with full Tx power, if there is no possibility to perform the measurements in a good performance RF-shielded room. Even low power WCDMA transmitters may disturb nearby WCDMA networks and cause problems to 3G cellular phone communication in a wide area.
- During testing never activate the GSM or WCDMA transmitter without a proper antenna load, otherwise GSM or WCDMA PA may be damaged.

Copyright © 2006 Nokia. All rights reserved.

For your safety

QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.

ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.

CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Copyright © 2006 Nokia. All rights reserved.

Care and maintenance

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

Copyright © 2006 Nokia. All rights reserved.

ESD protection

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages MUST NOT be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

Copyright © 2006 Nokia. All rights reserved.

Battery information

Note: A new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMh batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product). Do not attempt to discharge the battery by any other means.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

Copyright © 2006 Nokia. All rights reserved.

Company Policy

Our policy is of continuous development; details of all technical modifications will be included with service bulletins.

While every endeavour has been made to ensure the accuracy of this document, some errors may exist. If any errors are found by the reader, NOKIA MOBILE PHONES Business Group should be notified in writing/e-mail.

Please state:

- Title of the Document + Issue Number/Date of publication
- Latest Amendment Number (if applicable)
- Page(s) and/or Figure(s) in error

Please send to:

NOKIA CORPORATION
Nokia Mobile Phones Business Group
Nokia Customer Care
PO Box 86
FIN-24101 SALO
Finland
E-mail: Service.Manuals@nokia.com

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Nokia 7373 Service Manual Structure

1 General information
2 Parts and layouts
3 Service Software Instructions
4 Service Tools and Service Concepts
5 Disassembly and reassembly instructions
6 BB Troubleshooting and Manual Tuning Guide
7 RF Troubleshooting and Manual Tuning Guide
8 System module
9 Schematics
Glossary

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

1 — General information

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Product selection....1–5
Features....1–6
Phone features....1–6
Software and User interface features....1–6
Accessories....1–8

List of Tables

Table 1 Battery and chargers....1–8
Table 2 Car accessories....1–8
Table 3 Audio....1–8
Table 4 Connectivity....1–9
Table 5 Imaging and lifestyle....1–9

List of Figures

Figure 1 RM-209 product picture....1–5

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Product selection

The RM-209 (Nokia 7373) is a triple band transceiver unit designed for the GSM900/1800/1900 networks, including EGSM.

Figure 1 RM-209 product picture

Key Features:

- 180-degree rotator design with ergonomic tilt
- EDGE tri-band phone
- 2-megapixel camera with full-screen landscape camera mode, 8x digital zoom, and dedicated key
- 2.0" display screen with 100% active area and up to 262,144 colors
- Take pictures in colour, black and white, and sepia
- Video ringing tones
- FM visual stereo radio with integrated 3D stereo speakers
- µSD MMC card

Copyright © 2006 Nokia. All rights reserved.

Features

Phone features

Display and keypad features

- 262 K colour QVGA 240 x 320 pixels display
- 5-way scroll key, 2 soft keys, send and end keys, Camera Key, Volume/Zoom key
- Dedicated key for landscape video camera mode

Hardware features

- Svivel phone
- 2-megapixel camera with full-screen landscape camera mode and 8x digital zoom
- Bluetooth
- PopPort™
- 2 mm charger plug interface
- FM radio
- MP3 player
- Internal vibrator
- Plug-in SIM (1.8 V and 3.0 V)
- Real time clock
- µSD MMC card

RF features

- EDGE tri-band GSM 900/1800/1900
- EDGE*: Class B, multislot class 10
- GPRS: Class B, multislot class 10
- HSCSD

Software and User interface features

Software features

- ISA OS 8.0s Platform
- Nokia Series 40 User interface (UI): Java MIDP 2.0

UI features

Imaging	• Integrated 2-megapixel camera with full-screen landscape camera mode, with up to 8x digital zoom • Black and white, sepia, negative, and multi-shot modes • Use saved pictures as screensavers • Video recorder and player • Supported image formats: JPEG, GIF, WBMP, BMP, PNG • MPEG video playback and streaming
Video	• Supported video files: MP4 and 3GP

Copyright © 2006 Nokia. All rights reserved.

Multimedia	• Visual Radio: Listen to music and interact with your favorite radio stations - Find out what song is playing, who sings it, and other artist information - Enter contests and answer surveys, vote for your favorite songs - Download the songs you buy direct to your phone • Digital music supported for the following media type: MP3, AMR, MIDI • Video playback formats: H.263 video, MPEG-4 • FM stereo radio with integrated 3D stereo speakers • Integrated music player for MP3/AAC/M4A formats
Memory functions	• 5 MB built-in memory free for user purposes • µSD MMC card (in box)
Messaging	• Multimedia messaging: MMS for creating, receiving, editing, and sending videos and pictures with AMR voice clips • Email: Supports SMTP, POP3, IMAP4, and APOP protocols. Support for attachments (view jpeg, 3gp, MP3) • Text messaging: Supports concatenated SMS, picture messaging, SMS distribution list • Presence-enhanced contacts: Check the status of your friends before you call them • Support adding attachments up to 100 kB and for receiving up to 50 kB
Games	• Pre-installed on µSD card
Applications	• Java™ MIDP 2.0 • Visual Radio, world clock, size converter, converter, email 3, translator
Ringing tones	• Supported file formats: Video ringing tones, MP3, AAC, 64-chord/voice polyphonic MIDI ringing tones
Connectivity	• Pop-Port™ interface to USB • Bluetooth • Remote over-the-air (OTA) synchronization with SyncML • Local synchronization with PC using PC Suite
Browsing	• WAP* 2.0 xHTML/HTML multimode browser • OMA Digital DRM 2.0
Data transfer	• EDGE: Class B, multislot class 10 • GPRS: Class B, multislot class 10 • HSCSD (high-speed circuit-switched data)
Voice features	• Voice dialing • Voice recorder • Integrated handsfree speaker
Digital services	• Video streaming services • Exclusive UI themes

Copyright © 2006 Nokia. All rights reserved.

Accessories

Table 1 Battery and chargers

Type	Name
Note: This phone is charged through the smaller Nokia standard interface (2.0 mm plug). The 3.5 mm standard charger can be used together with the CA-44 charger adapter.	
AC-3	Compact charger
AC-4	Travel performance charger
AC-5	Travel charger
BL-4B	Battery 700 mAh Li-Ion
CA-44	Charger adapter (from 3.5 mm -> 2 mm)

Table 2 Car accessories

Type	Name
CK-1W	Wireless car kit
CK-7W	Basic universal car kit
CR-39	Universal car holder
DC-4	Mobile charger
HF-6W	Wireless plug-in handsfree
HF-31W	Wireless plug-in car handsgree
N616	Car kit

Table 3 Audio

Type	Name
AD-15	Audio adapter
AD-46	Audio adapter
HDA-10	Phone adapter
HDW-3	Wireless headset
HS-4W	Wireless boom headset
HS-6	Display headset
HS-11W	Wireless headset
HS-20/AD-41	Stereo headset
HS-21W	Wireless clip-on headset
HS-23	Stereo headset
HS-31	Fashion stereo headset
HS-34W	Wireless stereo headset

Copyright © 2006 Nokia. All rights reserved.

Type	Name
LPS-4	Loopset
MD-1	Music stand
MK-3	Music pack

Table 4 Connectivity

Type	Name
CA-53	USB cable

Table 5 Imaging and lifestyle

Type	Name
MU-22	1 GB µSD card
MU-25	64 MB µSD card
MU-26	128 MB µSD card
MU-27	256 MB µSD card
MU-28	512 MB µSD card

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

2 — Parts and layouts

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Exploded view....2–5
Spare parts overview....2–6
Mechanical parts list....2–7
Swap phones....2–8
Component parts list....2–10
Non replaceable parts....2–24
Component layouts....2–25

List of Tables

Table 6 Swap units....2–8
Table 7 Light swap units....2–9
Table 8 Spare component parts (1yga_30a)....2–10

List of Figures

Figure 2 RM-209 Main board component layout, bottom (1yga_20a)....2–25
Figure 3 RM-209 Main board component layout, top (1yga_20a)....2–26

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Exploded view

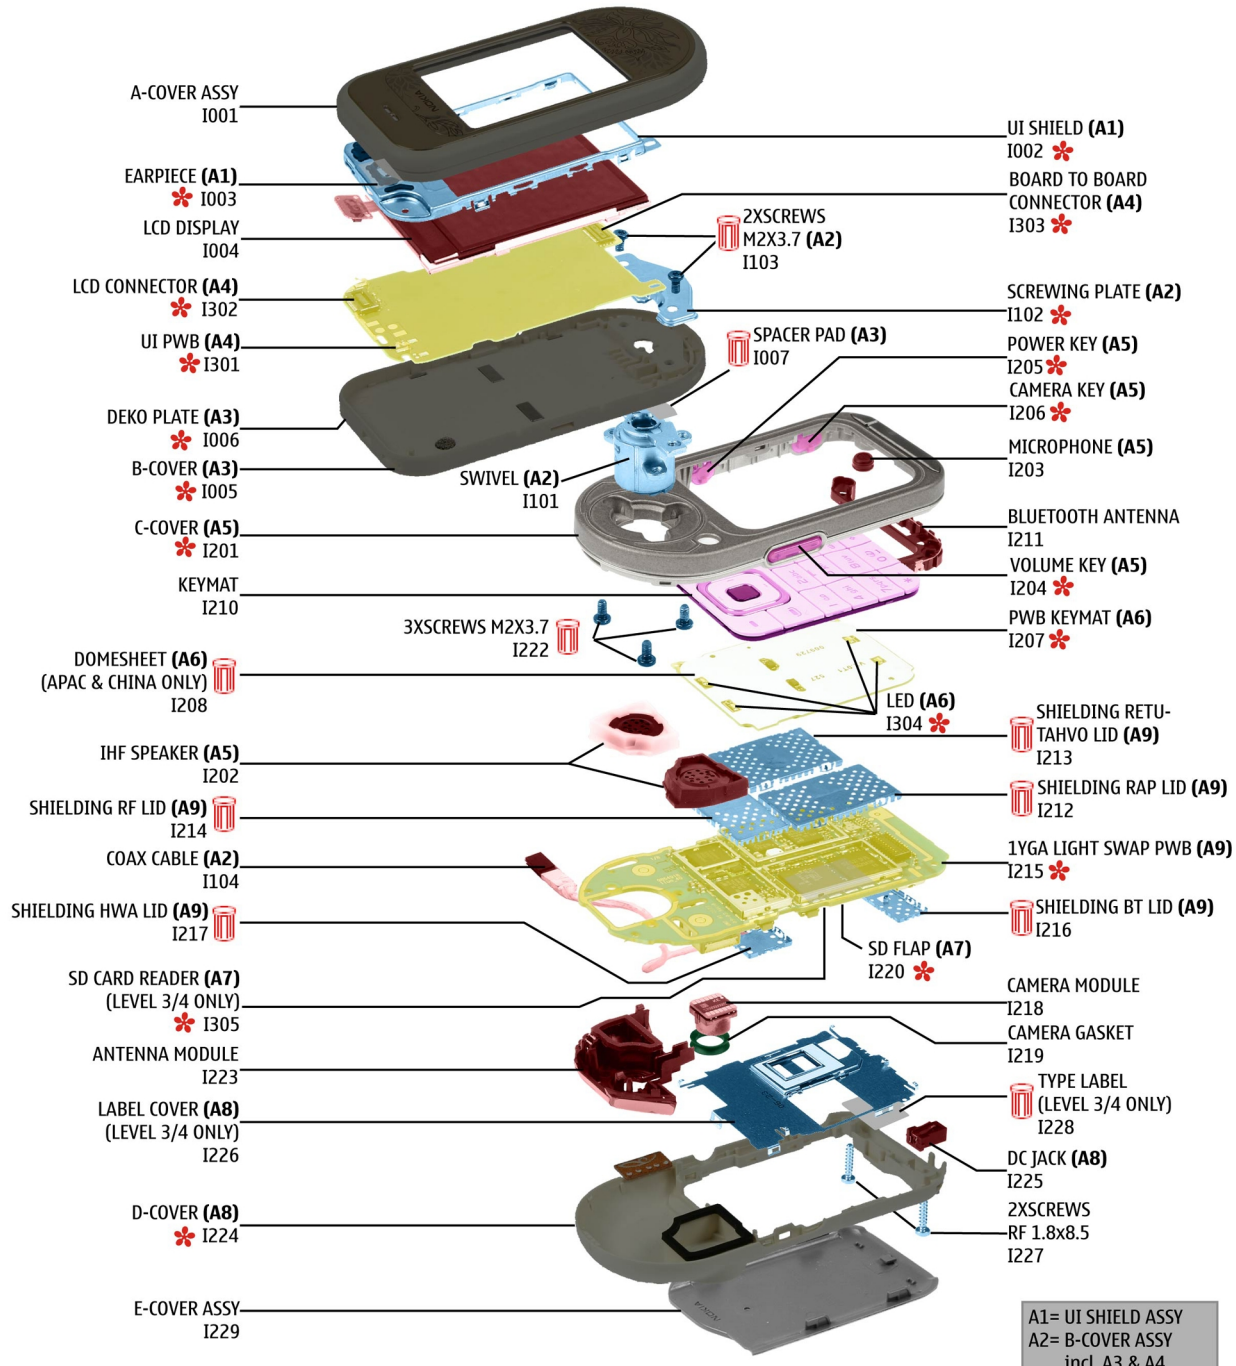

= These parts can not be reused after removal.

A1= UI SHIELD ASSY
A2= B-COVER ASSY incl. A3 & A4
A3= B-COVER SERVICE ASSY
A4= UI PWB ASSY
A5= C-COVER ASSY
A6= PWB KEYMAT ASSY
A7= SD CARD READER ASSY
A8= D-COVER ASSY
A9= 1YGA LIGHT SWAP PACKAGE INCL. A7

= only available as assembly

Ver. 1.0 ELECTRO SILICON METAL PLASTIC PWB COVER

Copyright © 2006 Nokia. All rights reserved.

Spare parts overview

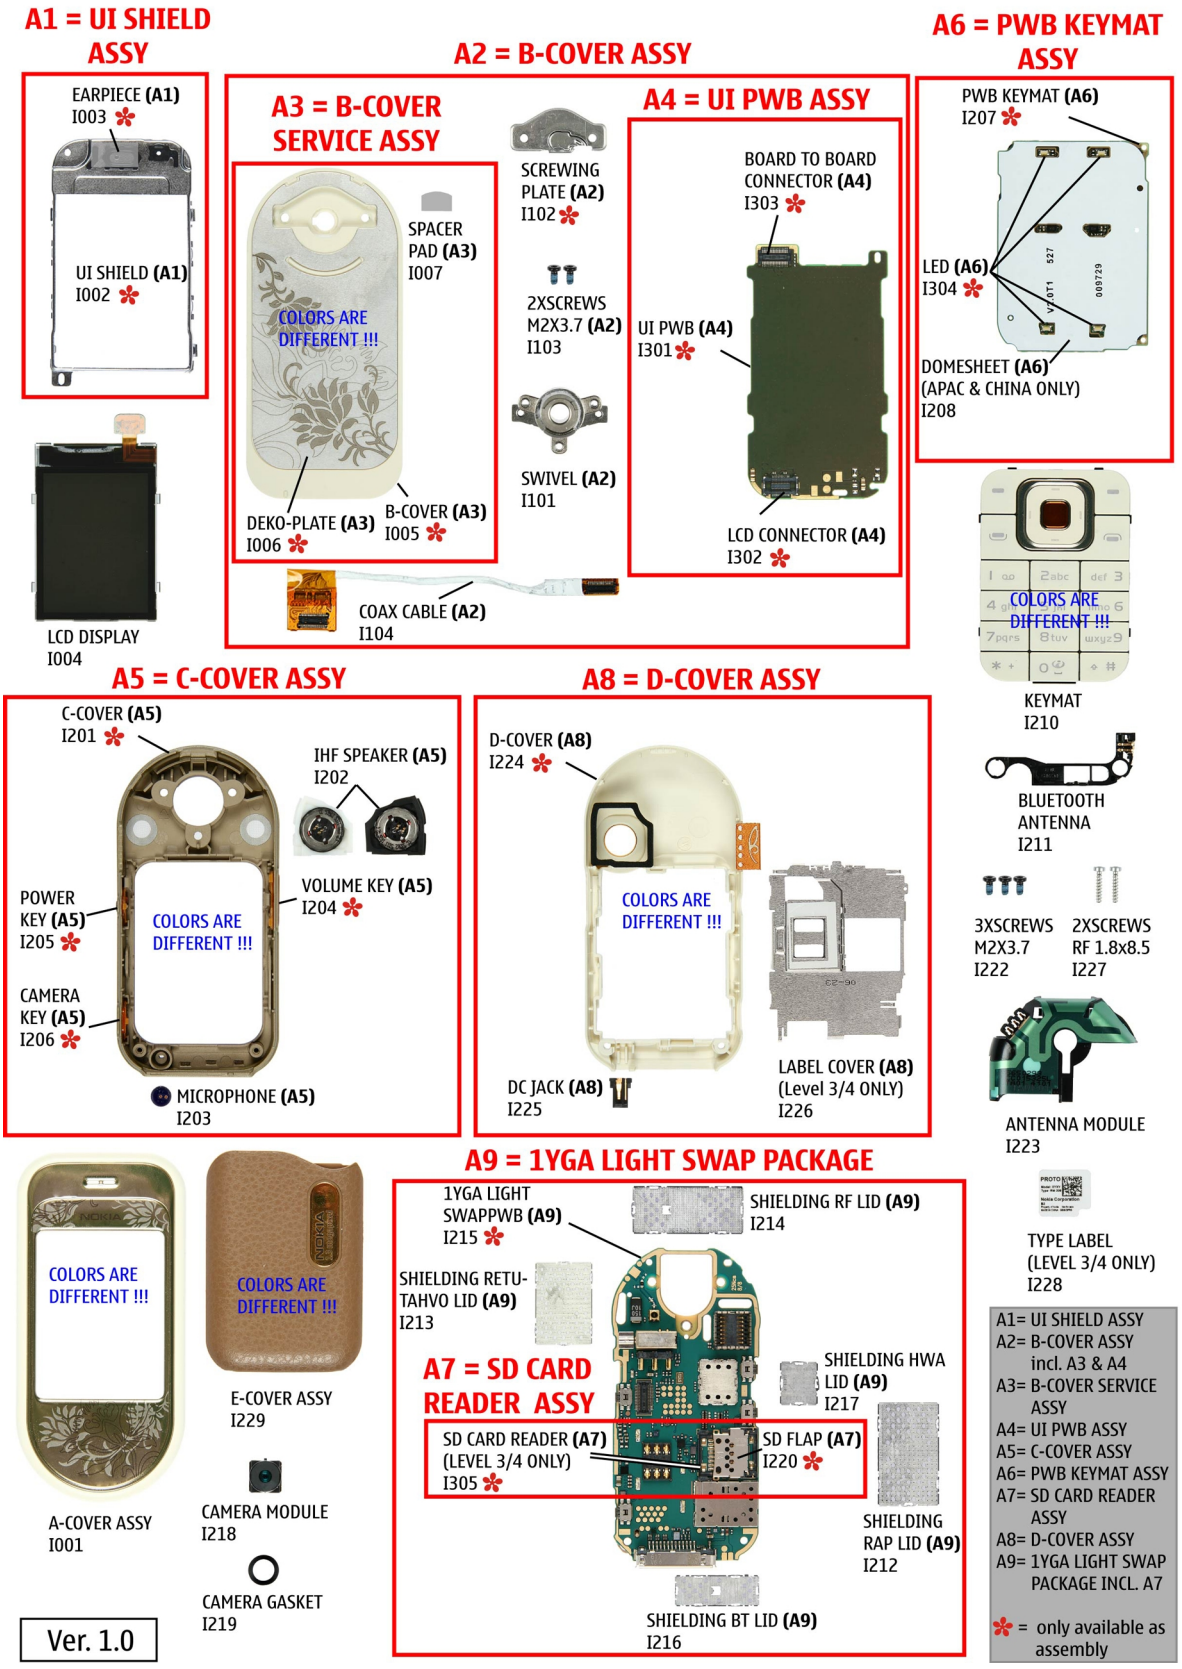

Copyright © 2006 Nokia. All rights reserved.

Mechanical parts list

Note: For product codes, please refer to the Service bulletin.

ITEM	QTY	SPARE PART DESCRIPTION	Comment
** = Not available as spare part*			
I001	1	A-COVER ASSY	
A1	1	UI-SHIELD ASSY (I002 - I003)	
I002*	1	UI SHIELD	
I003*	1	EARPIECE	
I004	1	LCD DISPLAY	
A2	1	B-COVER ASSY(I005 - I007, I101 - I104, I301 - I303)	
A3	1	B-COVER SERVICE ASSY(I005 - I007)	
I005*	1	B-COVER	
I006*	1	DEKO-PLATE	
I007	1	SPACER PAD	Must be replaced after disassembly
I101	1	SWIVEL	
I102	1	SCREWING PLATE	
I103	2	SCREWS M2 x 3.7	Must be replaced after disassembly
I104	1	COAX CABLE	
A4	1	UI PWB ASSY (I301 - I303)	
I301*	1	UI PWB	
I302*	1	LCD CONNECTOR	
I303*	1	BOARD TO BOARD CONNECTOR	
A5	1	C-COVER ASSY(I201 - I206)	
I201*	1	C-COVER	
I202	2	IHF SPEAKER	
I203	1	MICROPHONE	
I204*	1	VOLUME KEY	
I205*	1	POWER KEY	
I206*	1	CAMERA KEY	
A6	1	PWB KEYMAT ASSY(I207, I208 -I304)	
I207*	1	PWB KEYMAT	
I208	1	DOMESHEET (APAC & CHINA only)	Must be replaced after disassembly
I304*	4	LED	

Copyright © 2006 Nokia. All rights reserved.

ITEM	QTY	SPARE PART DESCRIPTION	Comment
I210	1	KEYMAT	
I211	1	BLUETOOTH ANTENNA	
A9	1	1YGA LIGHT SWAP PACKAGE	
I212	1	SHIELDING RAP LID	Must be replaced after disassembly
I213	1	SHIELDING RETU-TAHVO LID	Must be replaced after disassembly
I214	1	SHIELDING RF LID	Must be replaced after disassembly
I215*	1	1YGA LIGHT SWAP PWB	
I216	1	SHIELDING BT LID	Must be replaced after disassembly
I217	1	SHIELDING HWA LID	Must be replaced after disassembly
A7	1	SD CARD READER ASSY(I220 - I305)	
I220*	1	SD FLAP	
I305*	1	SD CARD READER	
I228	1	TYPE LABEL	Must be replaced after disassembly
I218	1	CAMERA MODULE	
I219	1	CAMERA GASKET	
I222	3	SCREWS M2 x 3.7	Must be replaced after disassembly
I223	1	ANTENNA MODULE	
A8	1	D-COVER ASSY (I224- I226)	
I224*	1	D-COVER	
I225	1	DC JACK	
I226	1	LABEL COVER	
I227	2	SCREWS RF 1.8 x 8.5	
I229	1	E-COVER	

Swap phones

Table 6 Swap units

Pink
RM-209 SWAP TRX EURO-C PINK
RM-209 SWAP TRX EURO-C FRANCE PINK
RM-209 SWAP TRX EURO-C TURKEY PINK
RM-209 SWAP TRX EURO-I BELARUS PINK
RM-209 SWAP TRX EURO-I UKRAINE PINK
RM-209 SWAP TRX EURO-I RUSSIA PINK

Copyright © 2006 Nokia. All rights reserved.

RM-209 SWAP TRX MEA-13 SA PINK
Bronze
RM-209 SWAP TRX EURO-C BRONZE
RM-209 SWAP TRX EURO-C FRANCE BRONZE
RM-209 SWAP TRX EURO-C TURKEY BRONZE
RM-209 SWAP TRX EURO-I BELARUS BRONZE
RM-209 SWAP TRX EURO-I UKRAINE BRONZE
RM-209 SWAP TRX EURO-I RUSSIA BRONZE
RM-209 SWAP TRX MEA-13 SA BRONZE
Black-chrome
RM-209 SWAP TRX EURO-C BLA-CR
RM-209 SWAP TRX EURO-C FRANCE BLA-CR
RM-209 SWAP TRX EURO-C TURKEY BLA-CR
RM-209 SWAP TRX EURO-I BELARUS BLA-CR
RM-209 SWAP TRX EURO-I UKRAINE BLA-CR
RM-209 SWAP TRX EURO-I RUSSIA BLA-CR
RM-209 SWAP TRX MEA-13 SA BLA-CR

Table 7 Light swap units

EMEA
RM-209 LIGHT SWAP ENGINE EURO-C
RM-209 LIGHT SWAP ENGINE EURO-C FRANCE
RM-209 LIGHT SWAP ENGINE EURO-C TURKEY
RM-209 LIGHT SWAP ENGINE EURO-I BELARUS
RM-209 LIGHT SWAP ENGINE EURO-I UKRAINE
RM-209 LIGHT SWAP ENGINE EURO-I RUSSIA
RM-209 LIGHT SWAP ENGINE MEA-13 SA
APAC
RM-209 LIGHT SWAP ENGINE APAC-U
RM-209 LIGHT SWAP ENGINE APAC-T PHILLIPINES
China
RM-209 LIGHT SWAP ENGINE CHINA-R
RM-209 LIGHT SWAP ENGINE CHINA-P TAIWAN

Copyright © 2006 Nokia. All rights reserved.

Component parts list

Table 8 Spare component parts (1yga_30a)

Note: For product codes, please refer to the latest Service bulletin.

Item ref	PWB Side	X	Y	Description	Value	
A2400	T	L	7	RETU-TAHVO ASSEMBLY 040-009341 P2465	~	~
A2800	T	L	3	RAP ASSEMBLY 040-009340 P2465	~	~
A3300	B	H	4	HWA ASSEMBLY 040-009339 P2465	~	~
A6150	B	O	3	BT SHIELDING ASSY 040-029885 P2911	~	~
A7000	T	H	5	RF ASSEMBLY 040-009342 P2465	~	~
B2100	T	Q	7	CLAPTON EMC MICROPHONE MOD -42DB	~	~
B2102	T	E	3	IHF SPEAKER SPRING PSS 13MM 8R	~	~
B2103	T	E	8	IHF SPEAKER SPRING PSS 13MM 8R	~	~
B2200	T	N	7	CRYSTAL 32.768KHZ +-20PPM 12.5PF	32.768kHz	~
C2000	B	P	4	Chipcap 5% NP0	27p	50V
C2001	B	P	4	Chipcap X7R 10% 50V 0402	1n0	50V
C2002	T	P	6	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C2003	T	P	6	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2004	T	P	6	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2005	T	P	6	Chipcap X7R 10% 16V 0402	10n	16V
C2006	T	P	6	Chipcap X7R 10% 16V 0402	10n	16V
C2007	T	P	7	Chipcap X7R 10% 16V 0402	10n	16V
C2008	T	P	7	Chipcap X7R 10% 16V 0402	10n	16V
C2009	T	P	7	Chipcap X7R 10% 16V 0402	10n	16V
C2010	T	P	7	Chipcap X7R 10% 16V 0402	10n	16V
C2011	T	P	7	Chipcap 5% NP0	10p	50V
C2012	T	P	7	Chipcap 5% NP0	10p	50V
C2013	T	P	7	Chipcap 5% NP0	10p	50V
C2014	T	P	7	Chipcap 5% NP0	10p	50V
C2015	T	P	6	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2016	B	P	5	CHIPCAP NP0 270P J 25V 0402	270p	25V
C2017	B	Q	4	CHIPCAP X5R 470N K 25V 0603	470n	25V
C2018	B	P	5	Chipcap X7R 10% 16V 0402	10n	16V
C2019	B	P	6	Chipcap X7R 10% 16V 0402	10n	16V
C2020	T	O	8	Chipcap X7R 10% 16V 0402	10n	16V

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
C2070	B	E	8	CHIPTCAP 150U M 10V 6X3.2X1.5	150u_10V	10V
C2071	B	H	7	Chipcap 5% NP0	27p	50V
C2072	T	O	6	Chipcap 5% NP0	27p	50V
C2073	B	H	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2074	B	G	8	Chipcap X7R 10% 16V 0402	10n	16V
C2075	B	H	7	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2076	B	H	7	Chipcap X7R 10% 16V 0402	10n	16V
C2077	B	H	6	Chipcap X7R 10% 16V 0402	10n	16V
C2078	B	E	8	Chipcap 5% NP0	27p	50V
C2079	B	H	8	Chipcap 5% NP0	27p	50V
C2100	T	P	8	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2101	T	P	7	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2102	T	P	8	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C2103	T	O	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2104	T	O	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2105	B	H	6	Chipcap 5% NP0	27p	50V
C2106	B	G	6	Chipcap 5% NP0	27p	50V
C2107	T	G	8	Chipcap 5% NP0	27p	50V
C2108	B	K	9	Chipcap X7R 10% 50V 0402	1n0	50V
C2109	B	K	9	Chipcap X7R 10% 50V 0402	1n0	50V
C2110	B	K	9	Chipcap X7R 10% 50V 0402	1n0	50V
C2111	T	F	5	Chipcap 5% NP0	27p	50V
C2112	B	K	8	Chipcap X7R 10% 50V 0402	1n0	50V
C2113	B	K	9	Chipcap X7R 10% 50V 0402	1n0	50V
C2114	B	K	9	Chipcap X7R 10% 50V 0402	1n0	50V
C2117	B	N	8	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2118	B	M	8	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2119	B	N	8	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2120	B	N	8	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2124	B	M	9	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2126	B	N	9	CHIPCAP X5R 10U M 6V3 0805	10U	6V3
C2127	B	M	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2200	T	M	6	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2201	T	M	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
C2202	T	N	9	Chipcap X7R 10% 50V 0402	1n0	50V
C2203	T	N	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2204	T	N	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2205	T	N	6	Chipcap X7R 10% 50V 0402	1n0	50V
C2206	T	N	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2207	T	N	8	Chipcap X7R 10% 50V 0402	1n0	50V
C2208	T	N	7	Chipcap 5% NP0	27p	50V
C2209	T	N	7	Chipcap 5% NP0	22p	50V
C2210	T	L	8	CHIPCAP X5R 1U K 16V 0603	1u0	16V
C2211	T	L	8	CHIPCAP X5R 4U7 K 10V 0805	4u7	10V
C2212	T	L	7	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2213	T	M	8	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2214	T	M	8	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2215	T	M	8	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2216	T	L	8	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2217	T	N	8	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2218	T	N	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2219	T	N	8	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2220	T	L	7	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2221	T	L	9	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2222	T	L	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2223	T	L	6	Chipcap X7R 10% 16V 0402	10n	16V
C2224	T	N	6	Chipcap X7R 10% 16V 0402	10n	16V
C2225	T	N	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2226	T	M	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2227	T	L	7	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2228	T	M	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2229	T	L	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2230	T	N	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2231	T	L	6	CHIPCAP X5R 10U M 6V3 0805	10U	6V3
C2232	T	L	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2273	T	L	6	Chipcap X7R 10% 50V 0402	1n0	50V
C2274	T	L	7	Chipcap X7R 10% 50V 0402	1n0	50V
C2275	T	L	6	Chipcap X7R 10% 50V 0402	1n0	50V

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
C2281	T	M	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2300	T	J	6	Chipcap X7R 10% 16V 0402	10n	16V
C2301	T	J	6	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2302	T	L	6	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2303	T	J	8	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2304	T	L	7	Chipcap X7R 10% 16V 0402	10n	16V
C2305	T	J	9	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2306	T	I	9	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2307	T	J	7	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2309	T	J	6	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2312	T	J	7	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2313	T	J	7	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2314	T	K	8	CHIPCAP X5R 4U7 K 25V 0805	4u7	25V
C2315	T	K	9	CHIPCAP X5R 4U7 K 25V 0805	4u7	25V
C2400	B	K	7	Chipcap 5% NP0	22p	50V
C2401	B	J	7	Chipcap 5% NP0	22p	50V
C2402	T	P	5	Chipcap 5% NP0	27p	50V
C2403	B	J	8	Chipcap 5% NP0	47p	50V
C2404	B	I	7	Chipcap X7R 10% 25V 0402	4n7	25V
C2405	B	I	7	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2406	B	I	7	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2407	B	I	7	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2408	B	H	7	Chipcap 5% NP0	27p	50V
C2409	T	Q	3	Chipcap X7R 10% 25V 0402	4n7	25V
C2410	T	Q	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2413	B	H	6	Chipcap 5% NP0	27p	50V
C2414	B	I	7	Chipcap 5% NP0	27p	50V
C2415	T	Q	4	Chipcap 5% NP0	27p	50V
C2416	T	Q	5	Chipcap 5% NP0	27p	50V
C2418	B	K	3	Chipcap 5% NP0	22p	50V
C2419	B	J	3	Chipcap 5% NP0	22p	50V
C2420	B	J	4	CHIP ARRAY C0G 4X22P K 16V 0612	4x22p	16V
C2700	B	K	7	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2701	B	K	7	Chipcap 5% NP0	27p	50V

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
C2800	T	L	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2801	T	J	4	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2802	T	K	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2803	T	L	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2804	T	J	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2805	T	M	2	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2807	T	J	5	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2808	T	J	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2809	T	K	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2810	T	L	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2811	T	M	2	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2812	T	K	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2813	T	J	2	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2814	T	J	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2815	T	L	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2816	T	M	5	Chipcap 5% NP0	27p	50V
C2818	T	M	3	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2819	T	M	4	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2820	T	J	3	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2821	T	J	3	Chipcap 5% NP0	27p	50V
C2830	T	J	4	Chipcap X7R 10% 50V 0402	1n0	50V
C2831	T	J	4	Chipcap +-0.25pF NP0	4p7	50V
C3000	T	N	2	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3001	T	N	2	Chipcap X7R 10% 16V 0402	10n	16V
C3002	T	N	2	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3003	T	M	5	Chipcap X7R 10% 16V 0402	10n	16V
C3004	T	M	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3005	T	N	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3006	T	N	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3007	T	N	5	Chipcap X7R 10% 16V 0402	10n	16V
C3008	T	M	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3009	T	N	5	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3100	B	K	6	Chipcap 5% NP0	27p	50V
C3200	B	M	5	CHIPCAP X5R 100N K 10V 0402	100n	10V

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
C3201	B	L	6	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C3202	B	L	5	Chipcap X7R 10% 16V 0402	10n	16V
C3203	B	L	6	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C3210	B	M	5	Chipcap 5% NP0	27p	50V
C3300	B	I	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C3301	B	F	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C3302	B	G	4	Chipcap X5R 10% 6.3V 0402	220n	6.3V
C3303	B	I	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C3304	B	H	4	Chipcap X7R 10% 16V 0402	10n	16V
C3305	B	I	4	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C3306	B	I	4	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C3307	B	I	4	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C3308	B	H	4	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C3309	B	G	4	Chipcap 5% NP0	27p	50V
C3310	B	I	4	Chipcap 5% NP0	27p	50V
C3311	B	I	4	Chipcap 5% NP0	27p	50V
C3313	B	I	4	Chipcap X7R 10% 16V 0402	10n	16V
C3314	B	H	4	Chipcap X7R 10% 16V 0402	10n	16V
C6001	T	P	3	Chipcap +-0.25pF NP0	4p7	50V
C6002	T	P	3	CHIPCAP NP0 0P5 C 50V 0402	0p5	50V
C6031	B	P	2	Chipcap 5% NP0	18p	50V
C6032	B	N	3	Chipcap 5% NP0	100p	50V
C6033	B	N	3	Chipcap X7R 10% 16V 0402	10n	16V
C6034	B	O	3	Chipcap X7R 10% 16V 0402	10n	16V
C6035	B	N	2	Chipcap X7R 10% 16V 0402	10n	16V
C6036	B	N	3	Chipcap X7R 10% 16V 0402	10n	16V
C6037	B	N	2	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6039	B	O	3	Chipcap 5% NP0	18p	50V
C6040	B	N	2	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C6041	B	P	3	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C6042	B	O	2	Chipcap X7R 10% 16V 0402	10n	16V
C6051	B	O	2	Chipcap +-0.25pF NP0	2p7	50V
C6052	B	O	3	Chipcap +-0.25pF NP0	2p7	50V
C6157	B	N	4	Chipcap X7R 10% 16V 0402	10n	16V

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
C6158	B	N	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C6159	B	P	3	CHIPCAP X7R 33N K 10V 0402	33n	10V
C6162	B	N	4	CHIPCAP X7R 33N K 10V 0402	33n	10V
C6163	B	O	5	CHIPCAP X7R 33N K 10V 0402	33n	10V
C6164	B	O	3	CHIPCAP X5R 100N K 10V 0402	100n	10V
C6165	B	P	3	CHIPCAP X7R 33N K 10V 0402	33n	10V
C6167	B	O	5	Chipcap X7R 10% 16V 0402	10n	16V
C6170	B	O	5	Chipcap X7R 10% 16V 0402	10n	16V
C6176	B	P	4	Chipcap 5% NP0	100p	50V
C6178	B	O	5	Chipcap 5% NP0	27p	50V
C6179	B	O	5	Chipcap 5% NP0	47p	50V
C6188	B	P	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C6189	B	P	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C6190	B	N	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C6191	B	N	3	CHIPCAP X5R 100N K 10V 0402	100n	10V
C7501	T	G	4	Chipcap +-0.25pF NP0	2p7	50V
C7502	T	I	4	CHIPCAP NP0 0P5 C 50V 0402	0p5	50V
C7503	T	I	3	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7504	T	G	4	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7505	T	I	3	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C7506	T	I	3	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C7507	T	I	3	Chipcap X7R 10% 16V 0402	10n	16V
C7508	T	I	4	Chipcap 5% NP0	18p	50V
C7509	T	H	3	Chipcap X7R 10% 16V 0402	10n	16V
C7511	T	H	3	CHIPCAP NP0 2N2 G 16V 0603	2n2	16V
C7513	T	I	3	Chipcap X7R 10% 16V 0402	10n	16V
C7515	T	G	3	Chipcap +-0.25pF NP0	4p7	50V
C7516	T	H	3	CHIPCAP NP0 470P J 6V3 0402	470p	6V3
C7518	T	I	4	CHIPCAP X5R 100N K 10V 0402	100n	10V
C7520	T	G	7	Chipcap +-0.25pF NP0	3p3	50V
C7521	T	G	7	Chipcap +-0.25pF NP0	1p5	50V
C7522	T	I	7	Chipcap +-0.25pF NP0	1p8	50V
C7523	T	G	7	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C7524	T	I	6	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
C7525	T	I	8	Chipcap 5% NP0	18p	50V
C7560	T	H	2	Chipcap +-0.25pF NP0	1p2	50V
C7561	T	H	3	Chipcap 5% X7R	820p	50V
C7562	T	I	5	Chipcap 5% NP0	39p	50V
C7563	T	I	4	Chipcap 5% NP0	39p	50V
C7564	T	G	3	Chipcap X7R 10% 16V 0402	10n	16V
C7565	T	I	4	Chipcap 5% NP0	39p	50V
C7566	T	H	3	Chipcap +-0.25pF NP0	4p7	50V
D2200	T	M	7	RETU 3.02 TSA1GJWE TFBGA108	~	~
D2800	T	K	3	RAPGSM V1.1 PA uBGA289	~	~
D3000	T	N	3	COMBO 256M NOR + 128M DDR DRAM FBGA133	256MNOR +128MDDR	~
D3300	B	H	4	HW ACCELERATOR STV0984N	~	~
F2000	B	P	3	SM FUSE F 2.0A 32V	2A	~
G2200	T	O	6	RTC BACUP CAPAC 311 SIZE FOR 2.6V 4UAH	2.6V	~
G7500	T	G	3	VCO 3296-3980MHZ 4-BAND MATSUSHITA	3296-3980MHz	~
G7501	T	I	2	VCTCXO 38.4MHZ 2.5V 2MA	38.4MHz	~
L2000	B	P	3	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2001	B	Q	6	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~
L2002	B	Q	7	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~
L2003	B	Q	7	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~
L2004	T	Q	6	CHIP COIL 68NH J Q12/100MHZ 0603	68nH	~
L2100	B	K	6	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~
L2102	T	F	6	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~
L2103	T	F	5	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~
L2104	B	K	9	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2105	B	K	9	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2106	B	L	9	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
L2107	B	L	8	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2108	T	G	8	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~
L2109	T	G	9	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~
L2111	B	L	9	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2112	B	G	6	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2113	B	G	6	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2202	T	M	9	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2203	T	M	9	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2204	T	N	8	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2205	T	N	9	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2206	T	M	8	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2272	T	L	7	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2273	T	L	6	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2301	T	J	6	FERR.BEAD 220R/100M 2A 0R05 0603	220R/ 100MHz	~
L2302	T	K	6	INDUCT WW 10UH 0A65 0R35 4X4X1.2	10uH	~
L2304	T	J	8	CHOKE 22U M 0R7 0.35A 3.0x3.0x1.5	22uH	~
L2305	T	J	8	FERRITE BEAD 0R5 600R/100MHZ 0603	600R/ 100MHz	~
L2306	T	I	8	FERRITE BEAD 0R5 600R/100MHZ 0603	600R/ 100MHz	~
L2400	B	H	6	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2401	B	H	6	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L2402	T	Q	4	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L2403	T	Q	5	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
L2404	T	O	5	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L3200	B	L	5	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L3201	B	L	6	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L3202	B	L	5	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L3301	B	H	4	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L3303	B	I	3	INDUCT WW 2.2UH 1A2 310 CASE SIZE	2u2H	~
L6030	B	O	2	CHIP COIL 2N7+-0N3 Q29/800M 0402	2n7H	~
L6031	B	O	2	CHIP COIL 2N7+-0N3 Q29/800M 0402	2n7H	~
L6032	B	O	2	CHIP COIL 22N J Q28/800M 0402	22nH	~
L6077	B	P	3	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L6156	B	O	4	CHIP COIL 47N G Q38/200MHZ 0603	47nH	~
L6176	B	P	5	CHIP COIL 120N J Q32/150MHZ 0603	120nH	~
L7000	B	C	8	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L7001	B	C	8	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L7010	B	I	5	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L7011	B	I	5	FERR.BEAD 240R7100M 0.4A 0R4 0402	240R/ 100MHz	~
L7500	T	H	5	CHIP COIL 12N J Q31/800M 0402	12nH	~
L7501	T	H	5	CHIP COIL 12N J Q31/800M 0402	12nH	~
L7502	T	I	4	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
L7503	T	I	7	CHIP COIL 27N J Q27/800M 0402	27nH	~
L7504	T	H	5	CHIP COIL 22N J Q28/800M 0402	22nH	~
L7505	T	H	5	CHIP COIL 22N J Q28/800M 0402	22nH	~
L7515	T	G	3	CHIP COIL 15N J Q30/800M 0402	15nH	~
L7561	T	I	5	CHIP COIL 470NH J 0603	470nH	~
M2100	B	F	7	SMD VIBRA MOTOR 1.3V 80MA 9000RPM	~	~
N2000	T	O	8	TI ANALOG SWITCH TS5A3159DCKR	~	~
N2001	T	P	8	TI ANALOG SWITCH TS5A3159DCKR	~	~

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
N2101	B	M	9	AF AMP TPA2012D2 77DB/217HZ CSP	~	~
N2300	T	K	7	TAHVO V5.2 LF TFBGA84	~	~
N2301	T	K	9	WHITE LED DRIVER 4LEDS 500MW 8BUMP USMD8	~	~
N3200	B	L	6	VREG & LEVEL SHIFT LP3928 USMD16	~	2.8V
N3300	B	I	4	DC/DC CONV LM3671TLX-1.82V USMD5	~	~
N6030	B	O	2	BC4-ROM1.0RDL	~	~
N6156	B	O	4	FM RECEIVER TEA5761UK N4B CSP (TI)	~	~
N7505	T	H	4	AHNE401A TRANCEIVER TFBGA144	~	~
N7520	T	H	7	PA RF9282E6.5 GSM/EDGE 850/900/1800/1900	~	~
R2000	T	P	5	Resistor 5% 63mW	220R	~
R2001	T	P	6	ASIP MIC W/ESD RES+CAP+ZDI BGA11	~	~
R2002	T	P	7	Resistor 5% 63mW	10R	~
R2003	T	P	7	Resistor 5% 63mW	10R	~
R2004	T	P	7	Resistor 5% 63mW	10R	~
R2005	T	P	7	Resistor 5% 63mW	10R	~
R2006	B	P	7	ASIP 4XESD **PB-FREE** BGA5	~	~
R2007	B	Q	6	ASIP SILIC USB OTG / ESD BGA11	~	~
R2008	B	P	6	Resistor 5% 63mW	220k	~
R2009	T	P	6	Resistor 5% 63mW	10k	~
R2010	B	P	5	Resistor 5% 63mW	100R	~
R2017	B	O	8	Resistor 5% 63mW	120k	~
R2070	B	H	6	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2100	T	P	7	ASIP SINGLE ENDED MICROPHONE INTERF BGA8	~	~
R2101	T	Q	8	Resistor 5% 63mW	220R	~
R2102	T	O	7	Chipres 0W06 jumper 0402	0R	~
R2103	T	O	7	Chipres 0W06 jumper 0402	0R	~
R2104	B	K	6	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2105	B	J	6	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2106	T	G	6	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2107	T	G	5	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2114	T	G	8	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2115	T	G	9	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2200	T	N	9	Resistor 5% 63mW	100k	~
R2201	T	N	8	Resistor 5% 63mW	120k	~

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
R2202	T	M	6	Resistor 5% 63mW	1k0	~
R2203	T	N	6	Resistor 5% 63mW	1k0	~
R2204	T	N	6	Resistor 5% 63mW	1k0	~
R2205	T	N	6	Resistor 5% 63mW	1k0	~
R2206	T	N	6	Chipres 0W06 jumper 0402	0R	~
R2207	T	N	6	Chipres 0W06 jumper 0402	0R	~
R2208	T	N	6	Chipres 0W06 jumper 0402	0R	~
R2209	T	N	6	Chipres 0W06 jumper 0402	0R	~
R2212	T	M	6	Resistor 5% 63mW	470R	~
R2213	T	N	8	Resistor 5% 63mW	4k7	~
R2214	T	N	8	Resistor 5% 63mW	4k7	~
R2216	T	N	8	CHIPRES 0W06 2M2 J 0402	2M2	~
R2307	T	H	8	Resistor 5% 63mW	100R	~
R2401	T	O	5	Resistor 5% 63mW	100k	~
R2404	B	J	9	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2405	B	J	3	ASIP SIM INTERFACE **LOW CAP**BGA8	~	~
R2406	B	J	9	Resistor 5% 63mW	27k	~
R2407	T	P	9	Resistor 5% 63mW	220R	~
R2408	T	P	9	Resistor 5% 63mW	10k	~
R2409	B	N	9	ASIP SIM INTERFACE **LOW CAP**BGA8	~	~
R2410	B	J	8	Chipres 0W06 jumper 0402	0R	~
R2411	B	J	3	Resistor 5% 63mW	33R	~
R2412	B	J	3	Resistor 5% 63mW	33R	~
R2413	B	J	3	RES NETWORK 0W03 4X33R J 0804	4x33R	~
R2414	B	J	4	RES NETWORK 0W03 4X100R J 0804	4x100R	~
R2415	B	K	4	RES NETWORK 0W03 4X100R J 0804	4x100R	~
R2417	T	P	6	NTC RES 47K J B=4050+-3% 0402	47k	~
R2421	B	K	8	Resistor 5% 63mW	33R	~
R2700	B	K	7	ASIP SIM INTERFACE **LOW CAP**BGA8	~	~
R2701	B	K	7	Chipres 0W06 jumper 0402	0R	~
R2801	T	K	5	Chipres 0W06 jumper 0402	0R	~
R2803	T	L	5	Resistor 5% 63mW	100R	~
R2804	T	L	5	Resistor 5% 63mW	100R	~
R3000	T	M	2	Resistor 5% 63mW	4k7	~

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
R3002	T	K	5	Resistor 5% 63mW	10R	~
R3003	T	M	3	Resistor 5% 63mW	4k7	~
R3004	T	M	4	Resistor 5% 63mW	4k7	~
R3200	B	L	5	ASIP EMIF04-MMC02F2**PB-FREE**	~	~
R3201	B	K	5	Resistor 5% 63mW	22k	~
R3202	B	K	6	Resistor 5% 63mW	22k	~
R3203	B	M	5	Resistor 5% 63mW	1k2	~
R3204	B	M	5	Resistor 5% 63mW	680R	~
R3300	B	H	3	Resistor 5% 63mW	4k7	~
R3301	B	H	3	Resistor 5% 63mW	4k7	~
R3306	B	H	3	Resistor 5% 63mW	100R	~
R3307	B	H	3	Resistor 5% 63mW	100R	~
R3312	T	O	5	Resistor 5% 63mW	1k0	~
R3313	T	O	5	Resistor 5% 63mW	1k0	~
R3314	T	M	2	Resistor 5% 63mW	47R	~
R6030	B	N	3	Resistor 5% 63mW	10k	~
R6031	B	O	2	Resistor 5% 63mW	10k	~
R6032	B	N	2	CHIPRES 0W06 2R2 J 0402	2R2	~
R6034	B	O	3	Resistor 5% 63mW	10k	~
R6040	B	O	2	Resistor 5% 63mW	100k	~
R6041	B	K	4	Resistor 5% 63mW	100k	~
R6156	B	O	3	Chipres 0W06 jumper 0402	0R	~
R6159	B	N	4	Resistor 5% 63mW	10k	~
R6160	B	N	4	Resistor 5% 63mW	100k	~
R6161	B	P	4	Chipres 0W06 jumper 0402	0R	~
R7000	B	C	8	CHIPRES JUMPER 0603	0R	~
R7501	T	H	3	Resistor 5% 63mW	2k2	~
R7502	T	G	4	CHIPRES 0W06 10K F 0402	10k	~
R7503	T	I	4	Resistor 5% 63mW	4k7	~
R7505	T	H	3	CHIPRES 0W06 8K2 F 0402	8k2	~
R7506	T	H	4	Resistor 5% 63mW	10R	~
R7507	T	G	4	Resistor 5% 63mW	10R	~
R7508	T	H	3	Resistor 5% 63mW	10R	~
R7509	T	I	3	Resistor 5% 63mW	22k	~

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
R7510	T	I	7	Resistor 5% 63mW	15R	~
R7522	T	I	7	Resistor 5% 63mW	27k	~
R7523	T	G	7	Chipres 0W06 jumper 0402	0R	~
R7560	T	I	5	Resistor 5% 63mW	220R	~
S2401	B	H	2	SM SW TACT SPST 12V 50MA SIDE KEY	~	~
S2402	B	J	2	SM SW TACT SPST 12V 50MA SIDE KEY	~	~
S2403	B	I	9	SM SW TACT SPST 12V 50MA SIDE KEY	~	~
S2404	B	O	9	SM SW TACT SPST 12V 50MA SIDE KEY	~	~
T7501	T	H	3	TRANSF BALUN 3800+-550MHZ 0805	~	~
T7520	T	G	8	TRANSF BALUN 1800+-100mhz 2x1.25	~	~
V2000	B	P	4	ASIP TVS BGA4	~	~
V2001	T	O	6	TR DTC143ZM N RB=4K7 RBE=47K VMT3	~	~
V2302	T	I	8	SCH DI 30V 2A SOD323F	~	~
V2401	T	P	9	TRX2 BIPOLAR 2XPNP 40V 0A1 0W12 SOT666	~	~
V2402	T	O	9	TR DTC143ZM N RB=4K7 RBE=47K VMT3	~	~
X2000	B	Q	3	CONN DC-JACK 2.0MM 3POL SPR 90DEG	~	~
X2001	B	Q	6	SM SYSTEM CONNECTOR 14POL	~	~
X2060	B	H	6	MODULE ID COMPONENT 2.8X1.8X0.3	~	~
X2070	B	G	7	CONN BATT 3.5V 2A P3.7 H4.5MM	~	~
X2400	T	P	4	SM CONN 20P P0.47 PWB/PWB	~	~
X2402	B	I	8	SM B2B 2X17 P0.4 F 30V 0.3A FEMALE	~	~
X2700	B	M	7	SM SIM CONN 6POL P2.54 H1.05	~	~
X2705	B	K	8	SPRING CONTACT 012210 P2465	~	~
X2706	B	N	8	SPRING CONTACT 012210 P2465	~	~
X2707	B	M	5	SPRING CONTACT 012210 P2465	~	~
X2708	B	O	5	SPRING CONTACT 012210 P2465	~	~
X3200	B	L	3	CONN MICRO SD HINGE	~	~
X3300	B	F	3	SMIA85 SOCKET	~	~
X7000	B	E	7	SM CONN RF JACK 50R 2W 6GHZ	~	~
Z2000	B	Q	5	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
Z2001	B	Q	6	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~
Z2003	B	Q	5	FERRITE BEAD 0.6R 600R/100MHZ 0402	600R/ 100MHz	~

Copyright © 2006 Nokia. All rights reserved.

Item ref	PWB Side	X	Y	Description	Value	
Z2400	T	O	3	ASIP 10-CH ESD EMI FILTER BGA25	~	~
Z6030	B	P	2	LTCC FILT 2441.75+-41.75MHZ 2.5X2	2441.75MHz	~
Z7001	B	D	7	PHASE SHIFTER GSM1800/1900 TX TDK	1800/1900MHz	~
Z7002	B	D	7	PHASE SHIFTER GSM1800/1900 TX TDK	1800/1900MHz	~
Z7501	T	G	6	DUAL RX SAW FILTER 1800/1900MHZ 2016	1800/1900MHz	~
Z7503	T	I	6	TX SAW MODULE GSM 850/900MHZ 4.5X3.2	850/900 MHz	~
Z7504	T	H	6	DUAL RX SAW FILTER 850/900MHZ 2016	850/900 MHz	~
Z7520	T	G	6	FERRITE BEAD 0R01 28R/100MHZ 0603	28R/ 100MHz	~

Non replaceable parts

These parts must not be replaced:

No.	Item	Name	Comment
1	D2800	RAP GSM	
2	G7500	VCO	Placed under shielding and is therefore critical and difficult to replace.
3	X2060	Module ID component	Only used in production.

Copyright © 2006 Nokia. All rights reserved.

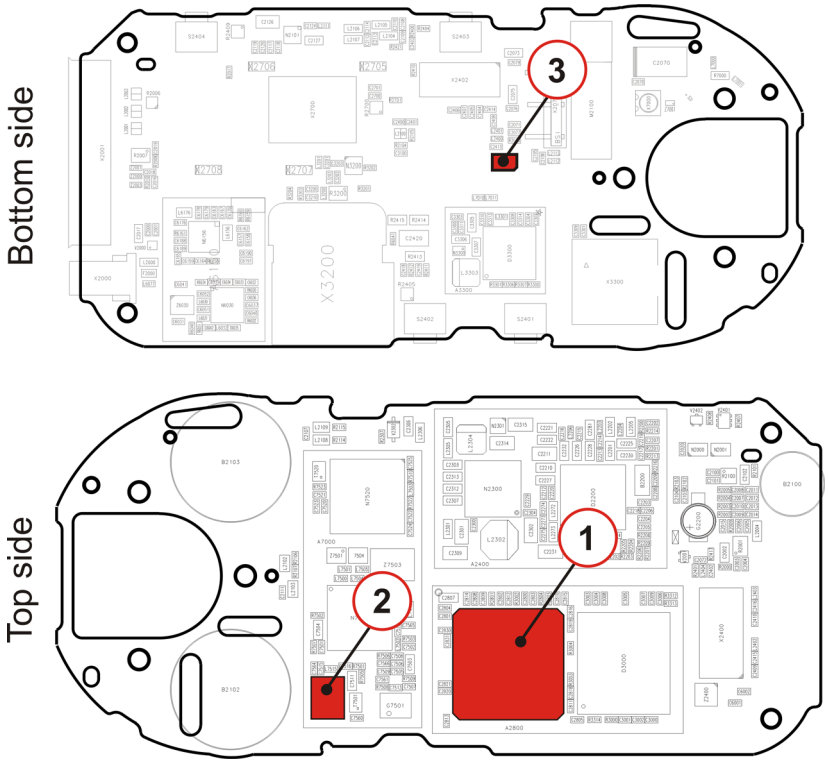

Component layouts

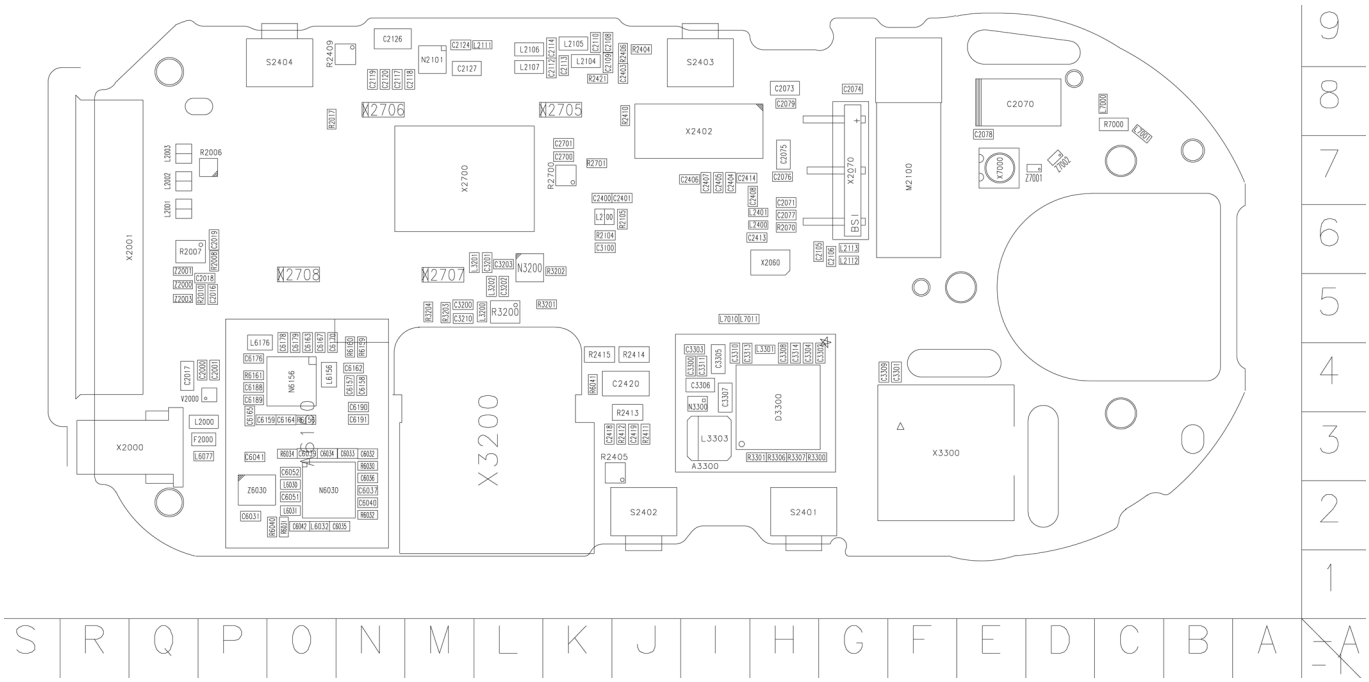

Figure 2 RM-209 Main board component layout, bottom (1yga_20a)

Copyright © 2006 Nokia. All rights reserved.

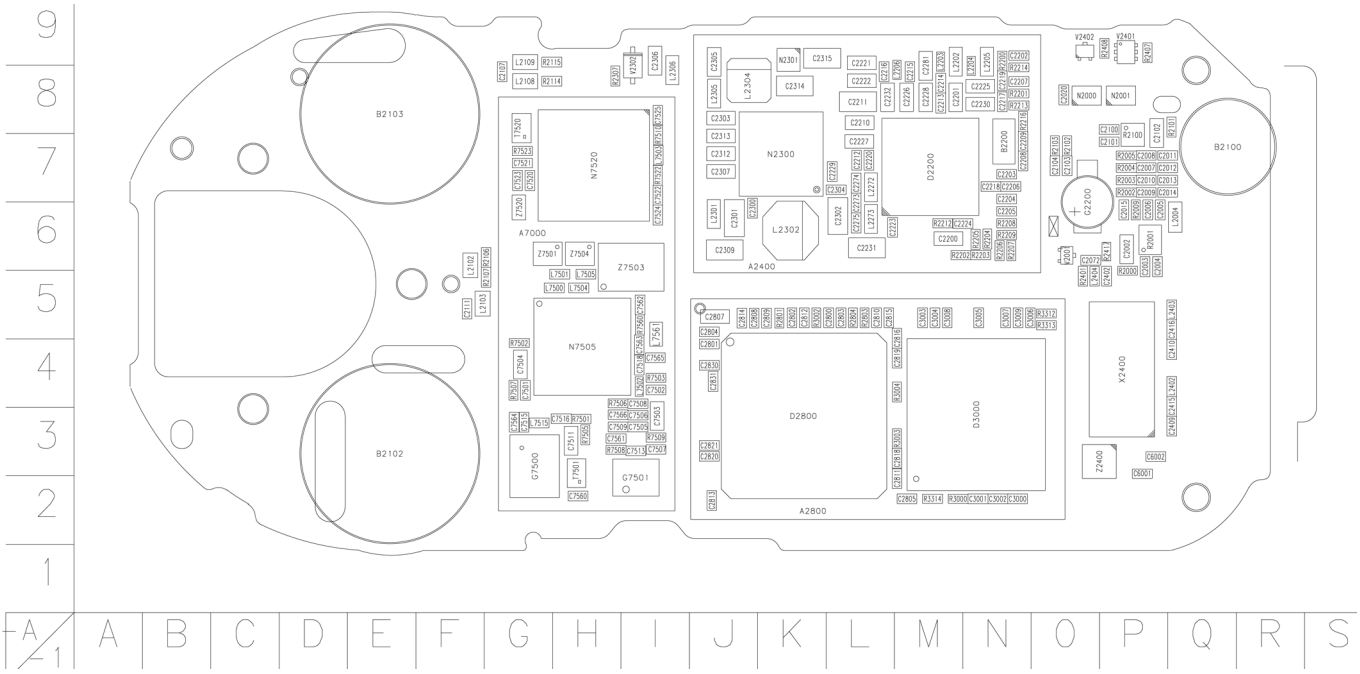

Figure 3 RM-209 Main board component layout, top (1yga_20a)

Copyright © 2006 Nokia. All rights reserved.

3 — Service Software Instructions

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Phoenix installation steps in brief....3–5
Installing Phoenix....3–6
Updating Phoenix installation....3–8
Uninstalling Phoenix....3–9
Repairing Phoenix installation....3–11
Phone data package overview....3–11
Installing phone data package....3–12
Uninstalling phone data package....3–15
Configuring users in Phoenix....3–17
Managing connections in Phoenix....3–17
Installing flash support files for FPS-8 and FPS-10....3–19
Updating FPS-8 and FPS-10 flash prommer software....3–22
Activating FPS-8....3–23
Deactivating FPS-8....3–24

List of Figures

Figure 4 Dongle not found....3–6
Figure 5 Disclaimer text....3–7
Figure 6 InstallShield Wizard Complete....3–8
Figure 7 Installation interrupted....3–9
Figure 8 Remove program....3–10
Figure 9 Finish uninstallation....3–10
Figure 10 Repair program....3–11
Figure 11 Data package setup information....3–13
Figure 12 Data package destination folder....3–14
Figure 13 InstallShield Wizard Complete....3–15
Figure 14 Uninstalling phone data package....3–16
Figure 15 Finishing data package uninstallation....3–16
Figure 16 Phoenix login....3–17
Figure 17 New user configured....3–17
Figure 18 Select mode: Manual....3–18
Figure 19 Connections list....3–19
Figure 20 Connection information....3–19
Figure 21 Product support module information (example from RM-1)....3–19
Figure 22 Flash update welcome dialog....3–20
Figure 23 Flash installation interrupted....3–20
Figure 24 Flash destination folder....3–21
Figure 25 Finish flash update....3–22
Figure 26 Flash directory window....3–22
Figure 27 Prommer software update finished....3–23
Figure 28 Prommer Maintenance window....3–23
Figure 29 Box activation....3–24
Figure 30 Deactivation warning....3–24

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Phoenix installation steps in brief

Prerequisites

Recommended hardware requirements:

- Computer processor: Pentium 700 MHz or higher
- RAM 256 MB
- Disk space 100-300 MB

Supported operating systems:

- *Windows 2000* Service Pack 3 or higher
- *Windows XP* Service Pack 1 or higher

Context

Phoenix is a service software for reprogramming, testing and tuning phones.

Phoenix installation contains:

- Service software support for all phone models included in the package
- Flash update package files for programming devices
- All needed drivers for:
  - PKD-1 (DK2) dongle
  - DKU-2 USB cable

    Note: Separate installation packages for flash update files and drivers are also available, but it is not necessary to use them unless there are updates between *Phoenix* service software releases. If separate update packages are used, they should be used after *Phoenix* and data packages have been installed.

The phone model specific data package includes all changing product specific data:

- Product software binary files
- Files for type label printing
- Validation file for the faultlog repair data reporting system
- All product specific configuration files for *Phoenix* software components

  Note: *Phoenix* and phone data packages should only be used as complete installation packages. Uninstallation should be made from the *Windows* Control Panel.

To use *Phoenix*, you need to:

Steps

1. Connect a PKD-1 (DK2) dongle to the computer parallel port.
2. Install *Phoenix*.
3. Install the phone-specific data package.
4. Configure users.
5. Manage connection settings (depends on the tools you are using).

If you use FPS-8:	• Update FPS-8 software • Activate FPS-8

Copyright © 2006 Nokia. All rights reserved.

If you use FPS-10:	• Update FPS-10 software **Note:** There is no need to activate FPS-10. • Activate SX-4 smart card, if you need tuning and testing functions. **Note:** When FPS-10 is used only for product software updates, SX-4 smart card is not needed.

Results

Phoenix is ready to be used with FPS-8 or FPS-10 flash prommers and other service tools.

Installing *Phoenix*

Prerequisites

- Check that a dongle is attached to the parallel port of your computer.
- Download the *Phoenix* installation package (for example, *phoenix_service_sw_2004_39_x_xx.exe*) to your computer (in *C:|TEMP*, for instance).
- Close all other programs.
- Depending on your operating system, administrator rights may be required to install *Phoenix*.
- If uninstalling or rebooting is needed at any point, you will be prompted by the InstallShield program.

Context

At some point during the installation procedure, you may get the following message:

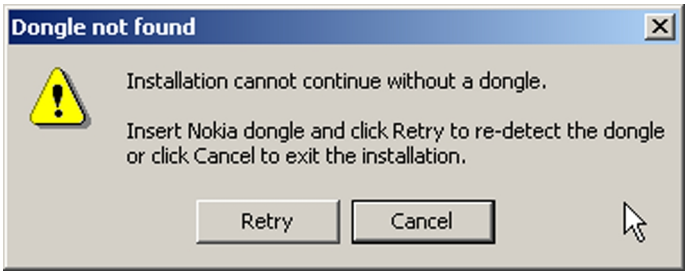

Figure 4 Dongle not found

This may be a result of a defective or too old PKD-1 dongle.

Check the COM/parallel ports used. After correcting the problem, you can restart the installation.

For more detailed information, please refer to *Phoenix* Help files.

> **Tip:** Each feature in *Phoenix* has its own Help function, which can be activated while running the program. Press the **F1** key or the feature's **Help** button to activate a Help file.

Steps

1. To start the installation, run the application file (for example,*phoenix_service_sw_2004_39_x_xx.exe*).
2. In the *Welcome* dialogue, click **Next**.

Copyright © 2006 Nokia. All rights reserved.

3. Read the disclaimer text carefully and click **Yes**.

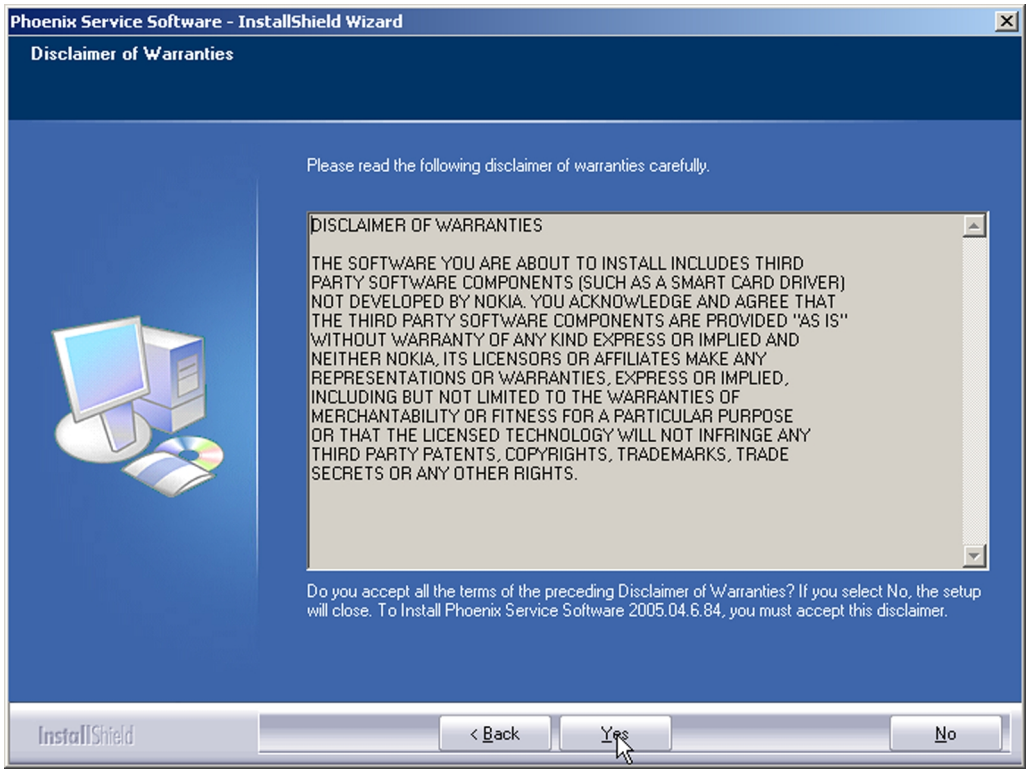

Figure 5 Disclaimer text

4. Choose the destination folder.
   The default folder *C:|ProgramFiles|Nokia|Phoenix* is recommended.
5. To continue, click **Next.**
   To choose another location, click **Browse** (not recommended).
6. Wait for the components to be copied.
   The progress of the installation is shown in the *Setup Status* window.
7. Wait for the drivers to be installed and updated.
   The process may take several minutes to complete.
   If the operating system does not require rebooting, the PC components are registered right away.
   If the operating system requires restarting your computer, the Install Shield Wizard will notifies about it.
   Select **Yes...** to reboot the PC immediately or **No...** to reboot the PC manually afterwards.
   After the reboot, all components are registered.

   Note: *Phoenix* does not work, if the components have not been registered.

Copyright © 2006 Nokia. All rights reserved.

8. To end the installation, click **Finish**.

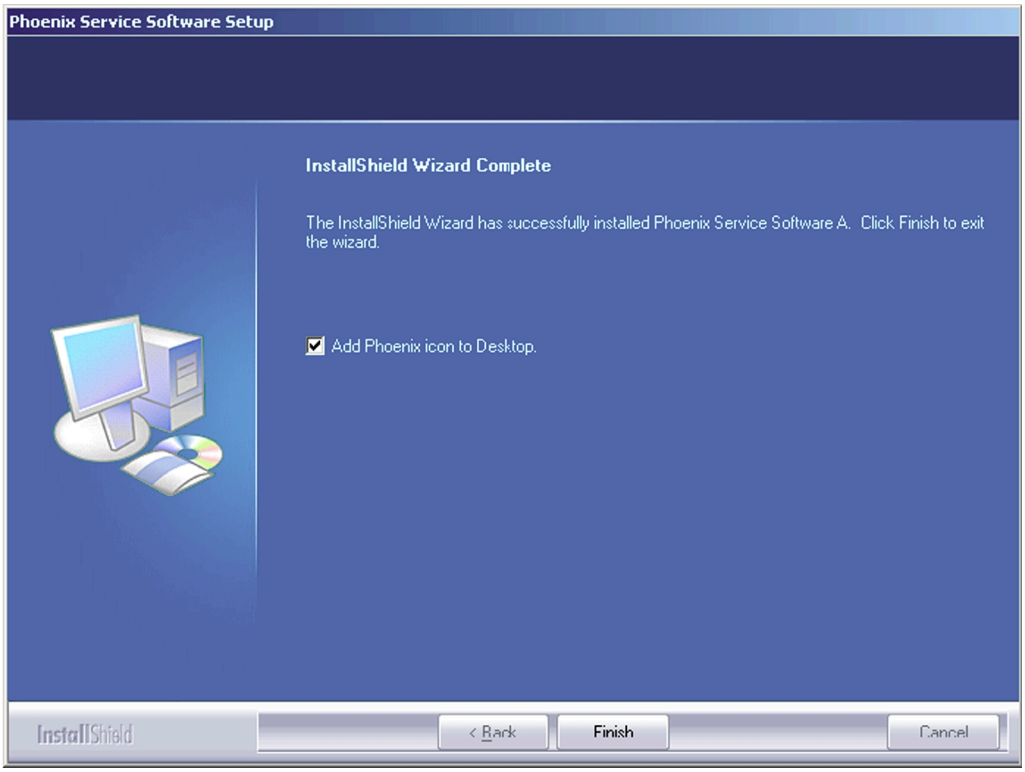

Figure 6 InstallShield Wizard Complete

Next actions

After the installation, *Phoenix* can be used after:

- installing phone model specific data package for *Phoenix*
- configuring users and connections

FPS-8 and FPS-10 flash prommers can be used after updating their flash update package files.

Updating *Phoenix* installation

Context

- If you already have the *Phoenix* service software installed on your computer, you need to update the software when new versions are released.
- To update *Phoenix*, you need to follow the same steps as when installing it for the first time.
- When you are updating, for example, from version **a14_2004_16_4_47** to **a15_2004_24_7_55**, the update will take place automatically without uninstallation.
- Always use the latest available versions of both *Phoenix* and the phone-specific data package. Instructions can be found in the phone model specific Technical Bulletins and phone data package *readme.txt* files (shown during installation).
- If you try to update *Phoenix* with the same version you already have (for example, **a15_2004_24_7_55** to **a15_2004_24_7_55**), you are asked if you want to uninstall the existing version. In this case you can choose between a total uninstallation or a repair installation in a similar way when choosing to uninstall the application from the *Windows* Control Panel.
- If you try to install an older version (for example, downgrade from **a15_2004_24_7_55** to **a14_2004_16_4_47**), installation will be interrupted.

Copyright © 2006 Nokia. All rights reserved.

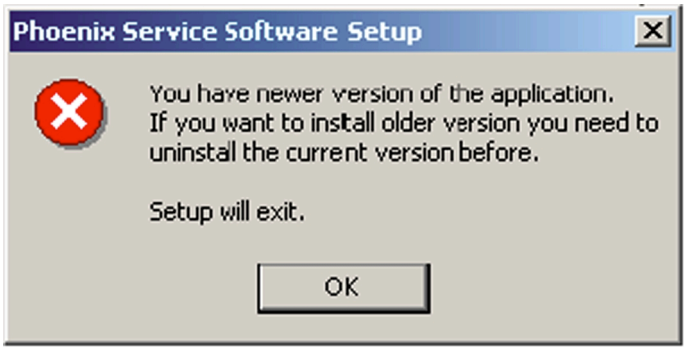

Figure 7 Installation interrupted

- Always follow the instructions on the screen.

Steps

1. Download the installation package to your computer hard disk.
2. Close all other programs.
3. Run the application file (for example, *phoenix_service_sw_2004_39_x_xx.exe*).

Results

A new *Phoenix* version is installed and driver versions are checked and updated.

Uninstalling *Phoenix*

Context

You can uninstall *Phoenix* service software manually from the *Windows* Control Panel.

Steps

1. Open the **Windows Control Panel**, and choose **Add/Remove Programs**.

Copyright © 2006 Nokia. All rights reserved.

2. To uninstall *Phoenix*, choose **Phoenix Service Software→Change/Remove→Remove** .

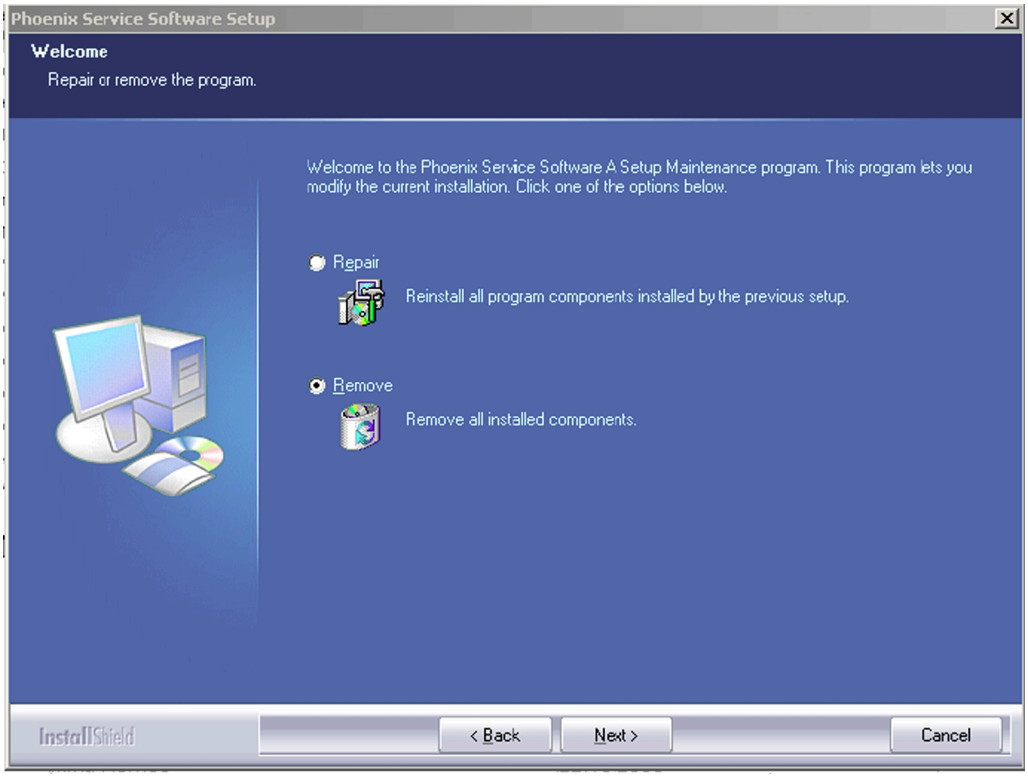

Figure 8 Remove program

The progress of the uninstallation is shown.

3. If the operating system does not require rebooting, click **Finish** to complete.

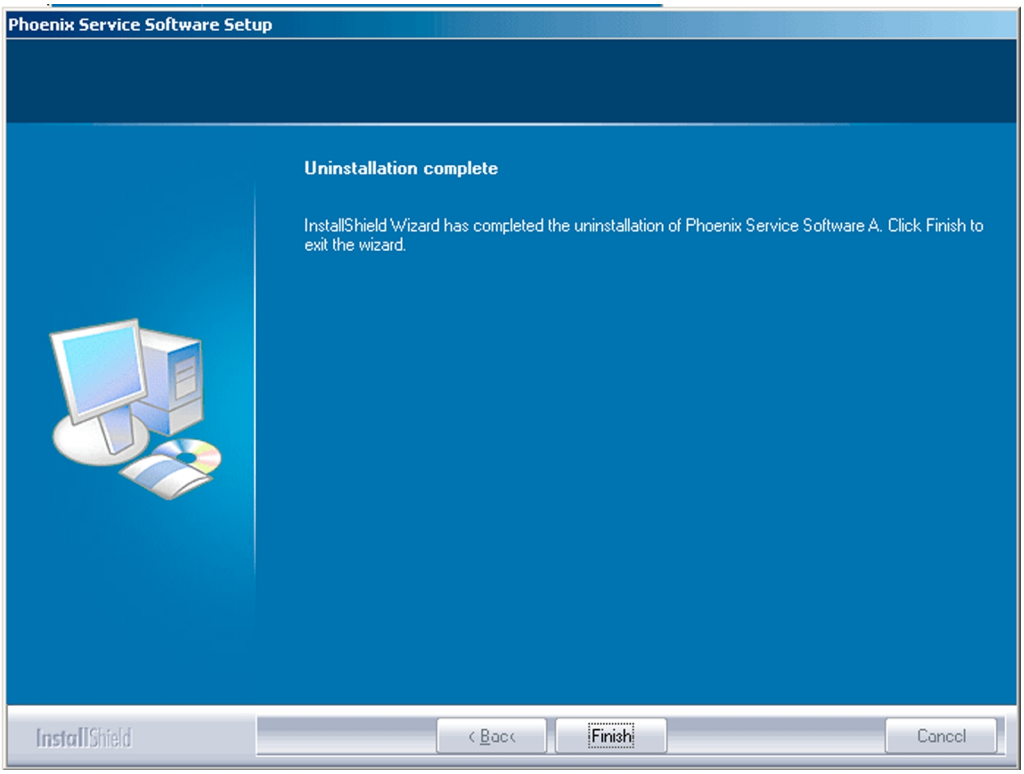

Figure 9 Finish uninstallation

Copyright © 2006 Nokia. All rights reserved.

If the operating system requires rebooting, InstallShield Wizard will notify you. Select **Yes...** to reboot the PC immediately and **No...** to reboot the PC manually afterwards.

Repairing *Phoenix* installation

Context

If you experience any problems with the service software or suspect that files have been lost, use the repair function before completely reinstalling *Phoenix*.

Note: The original installation package (for example, *phoenix_service_sw_a15_2004_24_7_55.exe*) must be found on your PC when you run the repair setup.

Steps

1. Open **Windows Control Panel→Add/Remove Programs** .
2. Choose **Phoenix Service Software→Change/Remove** .
3. In the following view, select **Repair**.

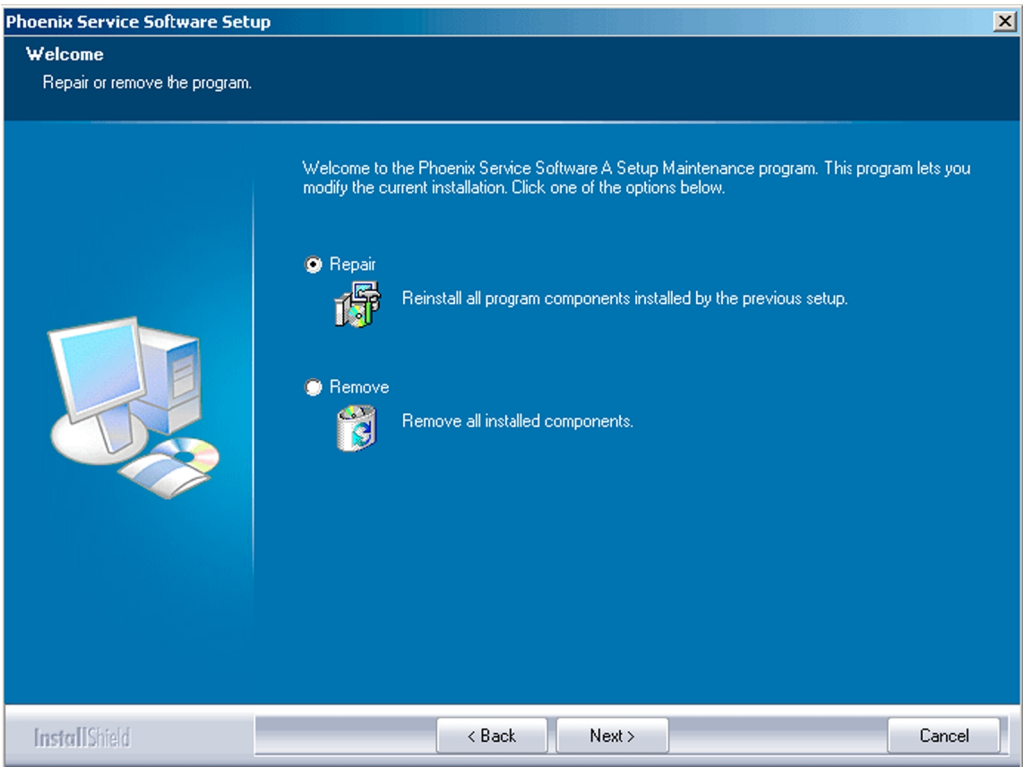

Figure 10 Repair program

Phoenix reinstalls components and registers them.

The procedure is the same as when updating *Phoenix*.

4. To complete the repair, click **Finish**.

Phone data package overview

Each product has its own data package (DP). The product data package contains all product-specific data files to make the Phoenix service software and tools usable with a certain phone model.

The phone data package contains the following:

- Product software binary files

Copyright © 2006 Nokia. All rights reserved.

- Files for type label printing
- Validation file for the fault log repair data reporting system
- All product-specific configuration files for Phoenix software components

Data files are stored in **C:\Program Files\Nokia\Phoenix** (default).

Installing phone data package

Prerequisites

- A phone-specific data package contains all data required for the *Phoenix* service software and service tools to be used with a certain phone model.
- Check that a dongle is attached to the parallel port of your computer.
- Install *Phoenix* service software.
- Download the installation package (for example, *XX-XX_dp_EA_v_1_0.exe*) to your computer (for example, in C:\TEMP).
- Close all other programs.

(XX-XX = type designator of the product)

If you already have *Phoenix* installed on your computer, you will need to update it when a new version is released.

> **Note:** Often *Phoenix* and the phone-specific data package come in pairs, meaning that a certain version of *Phoenix* can only be used with a certain version of a data package. Always use the latest available versions of both. Instructions can be found in phone-specific Technical Bulletins and *readme.txt* files of data packages.

Steps

1. To start the installation, run the application file (for example, *XX-XX_dp_EA_ v_1_0.exe*),

   Wait for the installation files to be extracted.

Copyright © 2006 Nokia. All rights reserved.

2. Click **Next**.

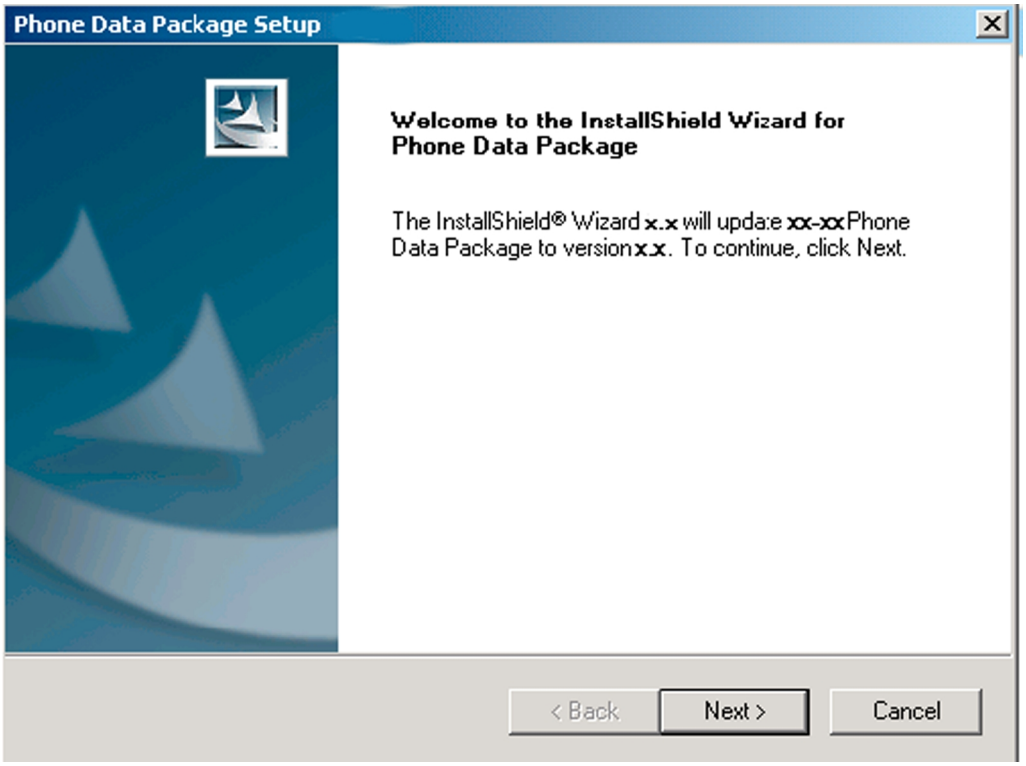

3. In the following view you can see the contents of the data package. Read the text carefully. There is information about the *Phoenix* version required with this data package.

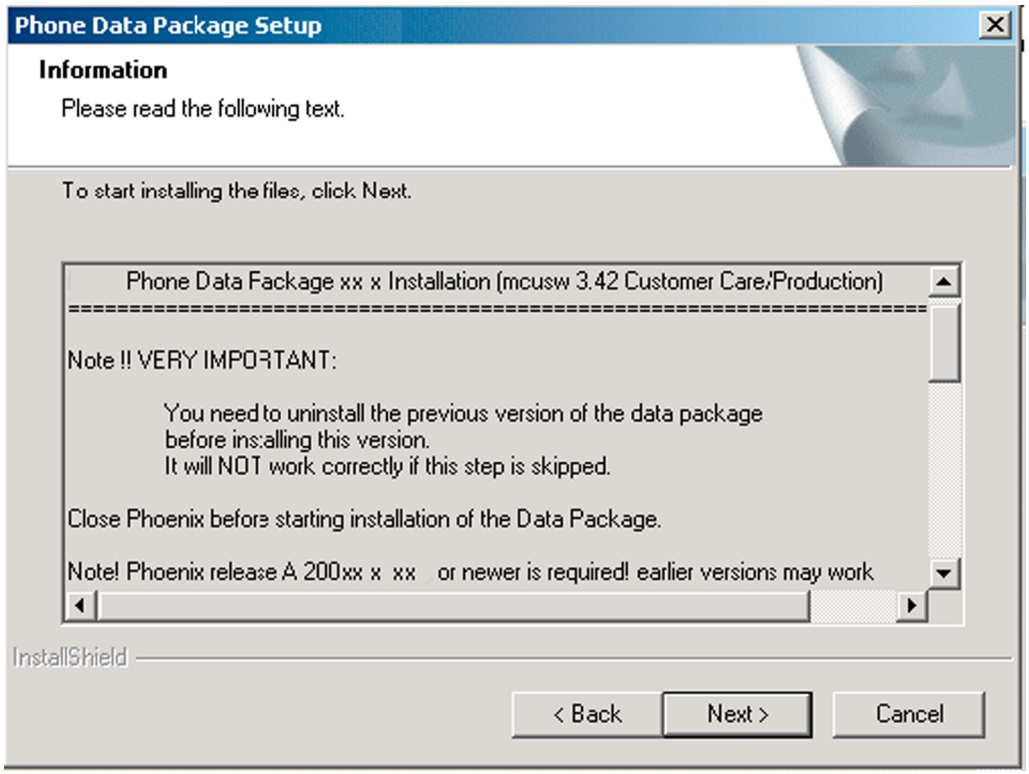

Figure 11 Data package setup information

4. To continue, click **Next**.

Copyright © 2006 Nokia. All rights reserved.

5. Choose the destination folder, and click **Next** to continue.

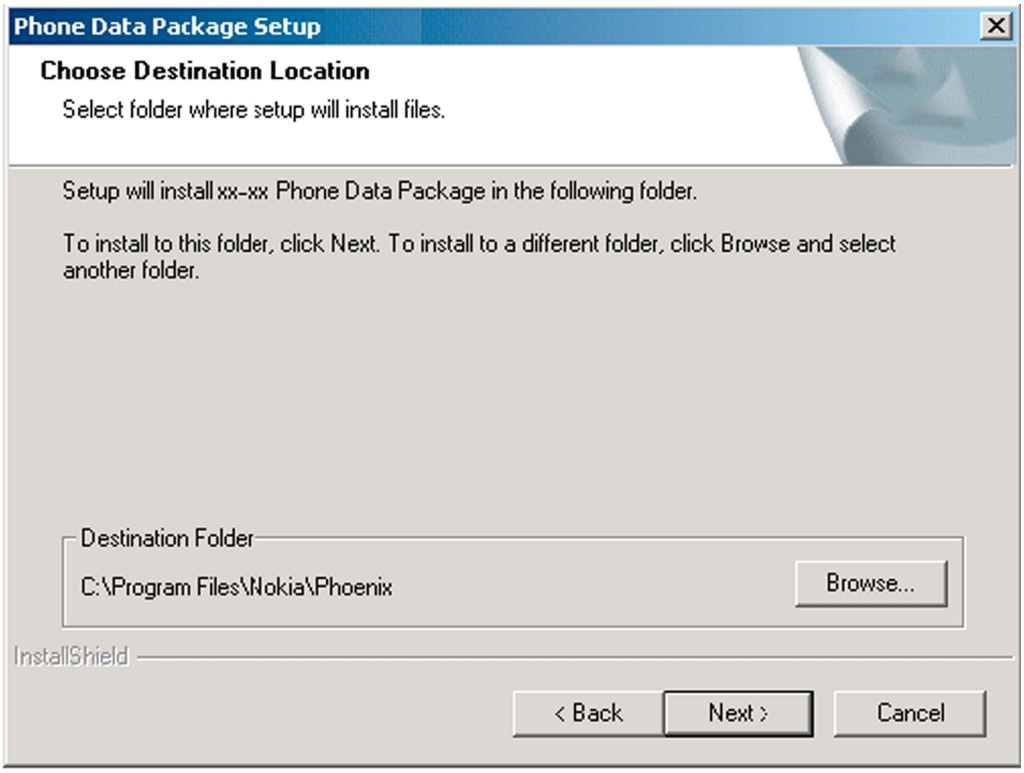

Figure 12 Data package destination folder

The InstallShield Wizard checks where *Phoenix* is installed, and the directory is shown.

6. To start copying the files, click **Next**.

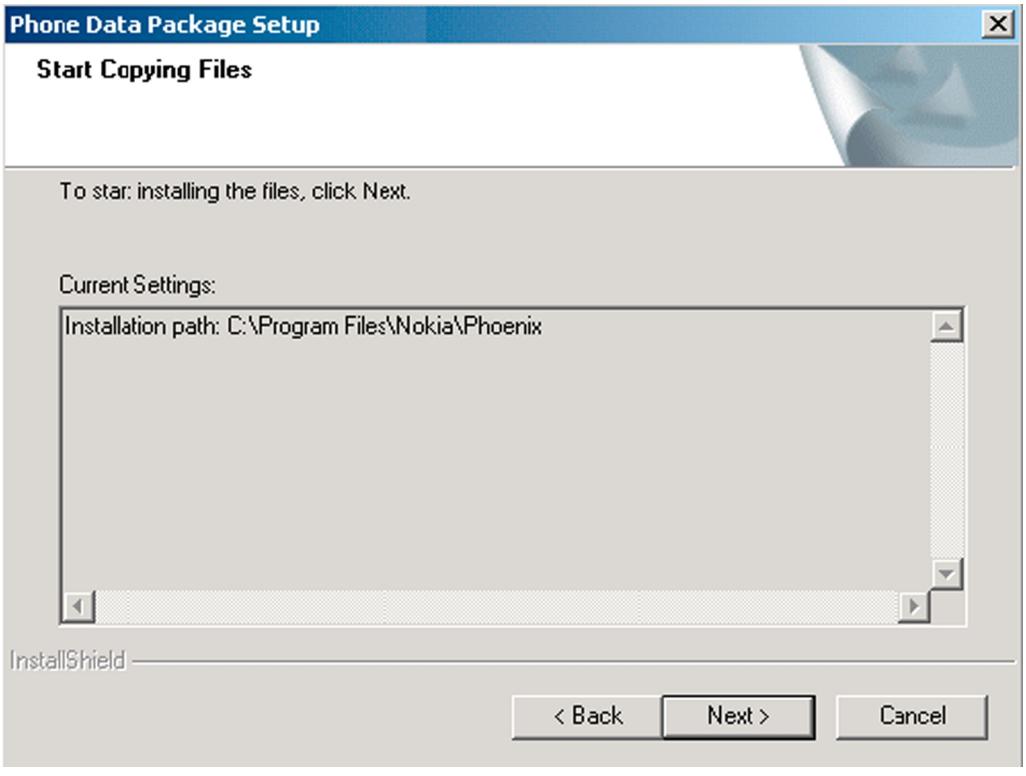

Copyright © 2006 Nokia. All rights reserved.

Phone model specific files are installed. Please wait.

7. To complete the installation, click **Finish**.

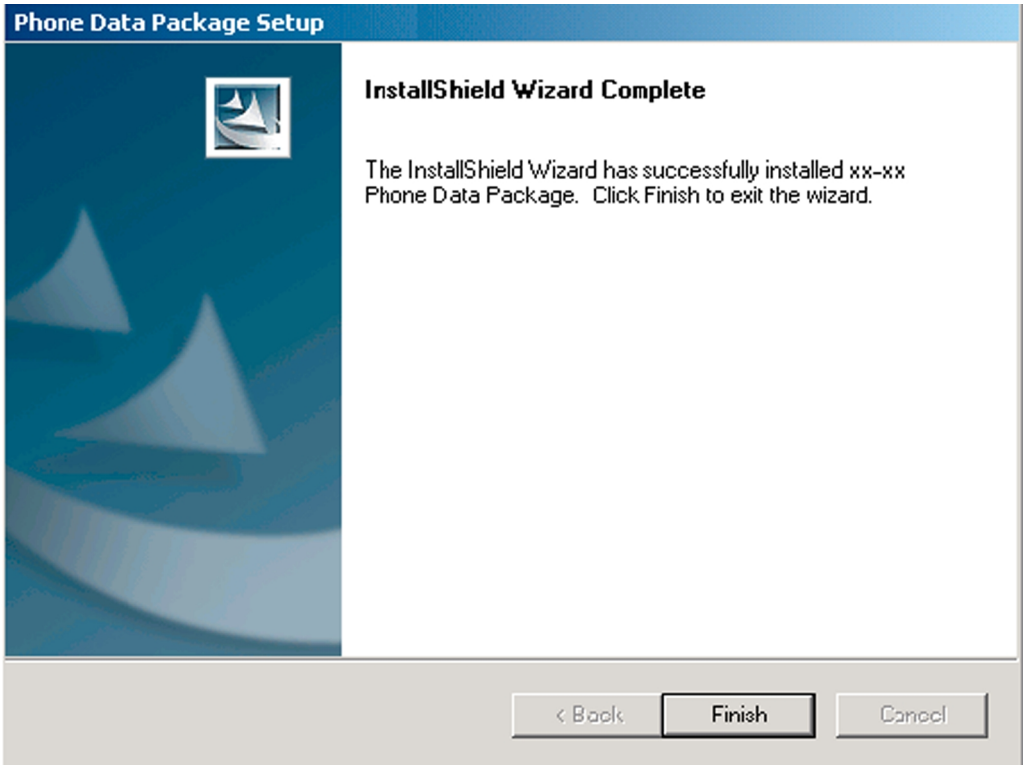

Figure 13 InstallShield Wizard Complete

Next actions

Phoenix can be used for flashing phones and printing type labels after:

- Configuring users
- Managing connections

FPS-8 and FPS-10 can be used after updating their flash update package files.

Uninstalling phone data package

Context

There is no need to uninstall an older version of a data package, unless instructions to do so are given in the *readme.txt* file of the data package and bulletins related to the release.

Please read all related documents carefully.

Steps

1. Locate the data package installation file (e.g. *XX-XX_dp_EA_v_1_0.exe*) from your computer.
2. To start the uninstallation procedure, double-click the data package installation file.

Copyright © 2006 Nokia. All rights reserved.

3. To uninstall the data package, click **OK** or to interrupt the uninstallation, click **Cancel**.

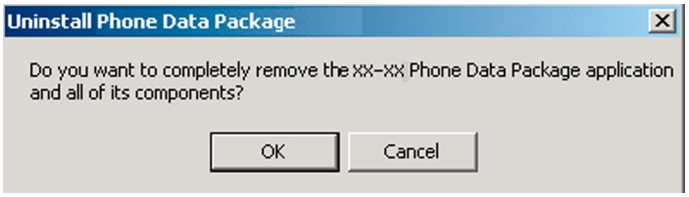

Figure 14 Uninstalling phone data package

4. When the data package is uninstalled, click **Finish**.

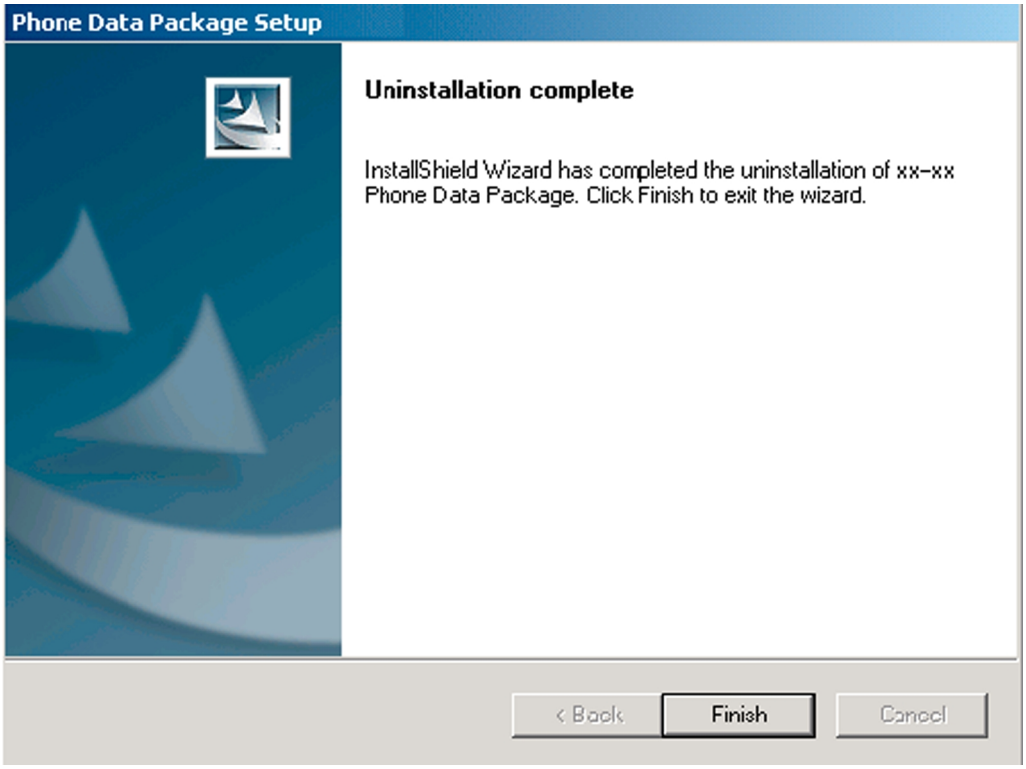

Figure 15 Finishing data package uninstallation

Alternative steps

- You can also uninstall the data package manually from **Control Panel→Add/Remove Programs→xx-xx* Phone Data Package** . (*= type designator of the phone).

Copyright © 2006 Nokia. All rights reserved.

Configuring users in *Phoenix*

Steps

1. Start *Phoenix* service software, and log in.

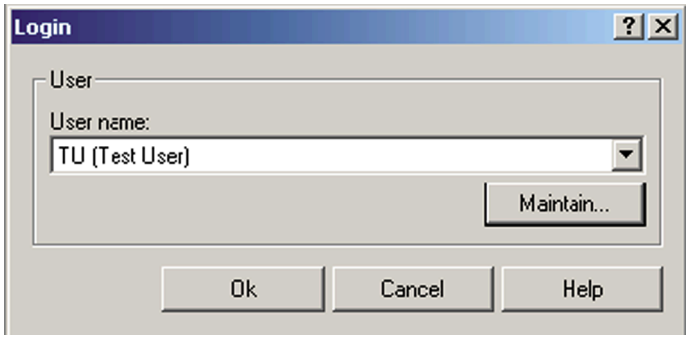

Figure 16 Phoenix login

   If the user ID is already configured, select s/he from the *User name* drop-down list, and click **OK**.
2. To add a new user, or to edit existing ones, click **Maintain**.
3. To add a new user, click **New**.
4. Type in the name and initials of the user, and click **OK**.
   The user is added to the user name list.
5. Select the desired user from the *User name* drop-down list, and click **OK**.

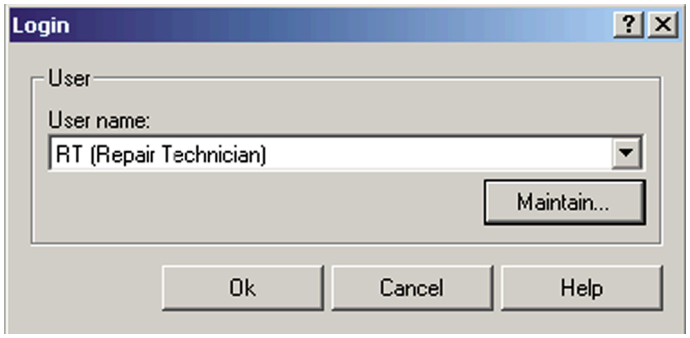

Figure 17 New user configured

Managing connections in *Phoenix*

Context

With the **Manage Connections** feature you can edit and delete existing connections or create new ones.

> **Note:** After choosing the desired connection, and connecting the phone to a PC for the first time, allow the PC to install the USB device drivers first. Please note that this may take some time to complete.
>
> If there are problems after the driver installation, check that the USB connection is active from the **Windows Control Panel**. If the problem persists, contact the local PC support.

Steps

1. Start *Phoenix*, and log in.
2. Choose **File→Manage Connections...** .

Copyright © 2006 Nokia. All rights reserved.

3. To add a new connection, click **Add**.

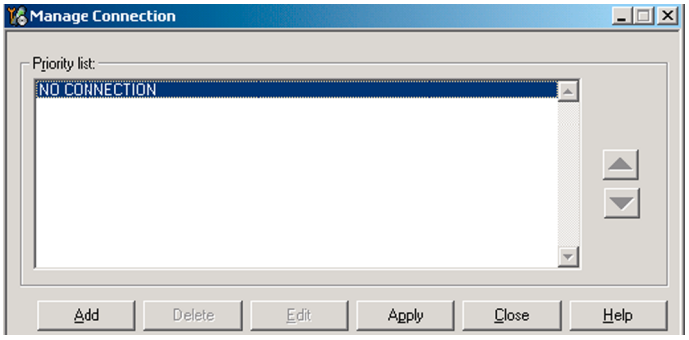

4. Select **Manual** mode, and click **Next** to continue.

   If you want to create the connection using the Connection Wizard, connect the tools and a phone to your PC. The wizard will automatically try to configure the correct connection.

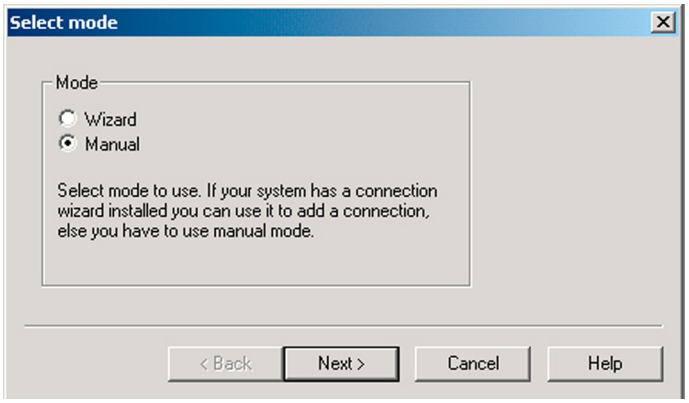

Figure 18 Select mode: Manual

i For an FPS-10 flash prommer with a **USB Connection**, choose the following connection settings:
   - Media: **FPS-10 USB**
   - DEVICE_INDEX: **0**
   - SERIAL_NUM: See Serial No from the label attached to the bottom of FPS-10
   - ACTIVE_MEDIA: **USB**

ii For an FPS-10 flash prommer with a **LAN connection**, choose the following connection settings:
   - Media: **FPS-10 TCP/IP**
   - NET_SERV_NAME: Click **Scan...**. Choose your own FPS-10 device based on the correct MAC address. See Serial No from the label attached to the bottom of your FPS-10.
   - PORT_NUM: Use the default value, and click **Next**.
   - PROTOCOL_FAMILY: Use the default value, and click **Next**.
   - SOCKET TYPE: Use the default value, and click **Next**.
   - TX_BUFFER_SIZE: Use the default value, and click **Next**.
   - RX_BUFFER_SIZE: Use the default value, and click **Next**.

iii For an FPS-8 flash prommer, choose the following connection settings:
   - Media: FPS-8
   - PORT_NUM: COM Port where FPS-8 is connected
   - COMBOX_DEF_MEDIA: **FBUS**

Copyright © 2006 Nokia. All rights reserved.

iv For a plain **USB connection**, choose the following connection settings:

Note: First connect the DKU-2 USB cable between the PC USB port and phone.

- Media: USB

5. To complete the configuration, click **Finish**.
6. Click the connection you want to activate. Use the up/down arrows located on the right hand side to move it on top of the list, then click **Apply**.

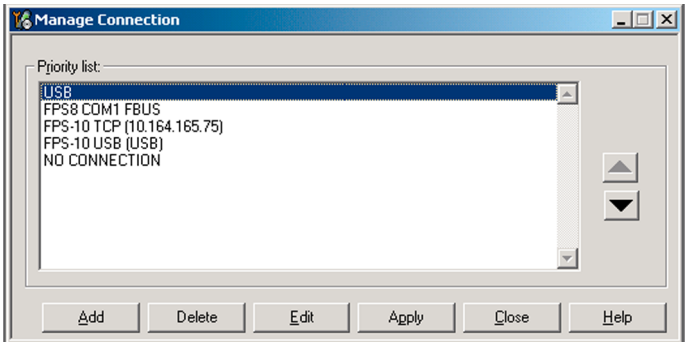

Figure 19 Connections list

The connection is activated, and it can be used after closing the *Manage Connection* window.

The connection information is shown at the right hand bottom corner of the screen.

Figure 20 Connection information

7. To use the connection, connect the phone to your PC with correct service tools. Make sure the phone is switched on, and then choose **File→Scan Product** .

Results

The product support module information appears in the status bar:

Figure 21 Product support module information (example from RM-1)

Installing flash support files for FPS-8 and FPS-10

Prerequisites

- Install *Phoenix* service software.
- Install phone model specific data package for *Phoenix*.
- If you want to update the flash support files, they are delivered in the same installation package with *Phoenix* or newer *Phoenix* packages beginning from December 2004.

  In case you want to update the MCU files, install the latest data package (see Technical Bulletins for information on the latest one).

  Normally, it is enough to install *Phoenix* and the phone-specific data package because the installation always includes the latest flash update package files for FPS-8 and FPS-10.
- A separate installation package for flash support files is available. The files can be updated according to these instructions, if updates appear between *Phoenix* data package releases.

Copyright © 2006 Nokia. All rights reserved.

Context

If you are not using a separate installation package, you can skip this section and continue with "Updating FPS-8 and FPS-10 flash prommer software" (page 3–22) after installing a new phone data package.

Steps

1. To begin the installation, double-click the flash update file (for example, *flash_update_03_183_0014.exe*).

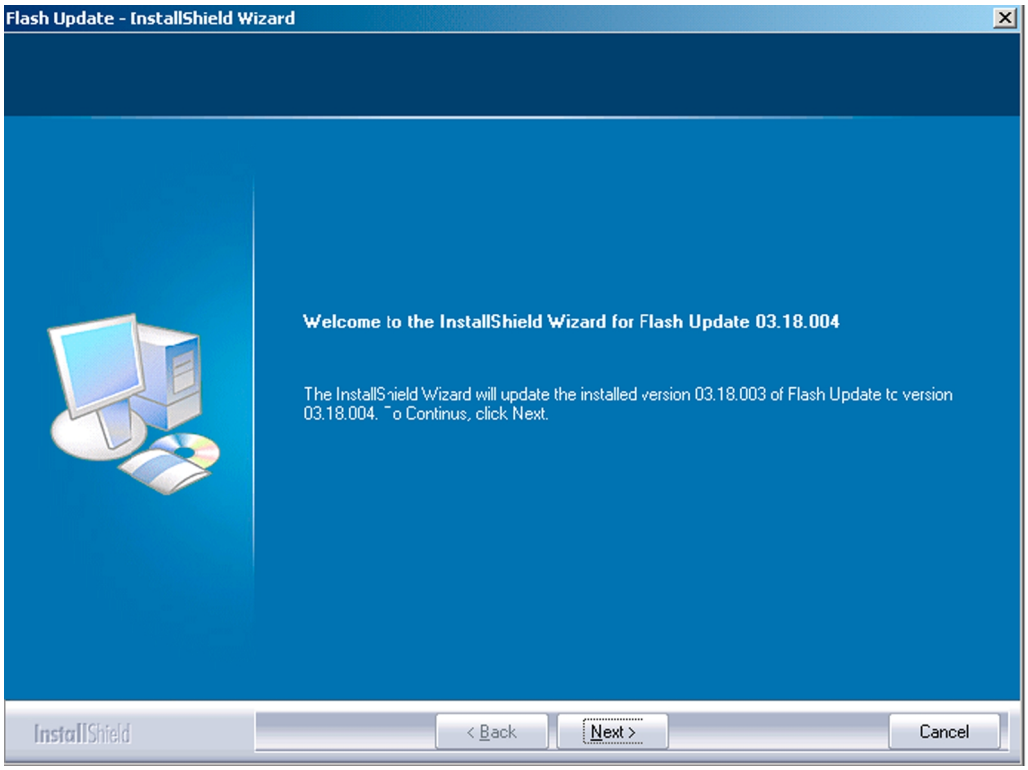

Figure 22 Flash update welcome dialog

   If the same version of the flash update package already exists, and you want to reinstall it, the previous package is first uninstalled.

   Restart installation again after the uninstallation.

2. If you try to downgrade the existing version to older ones, the setup will be aborted. If there is a need to downgrade the version, uninstall newer files manually from the **Windows Control Panel**, and then rerun the installation.

Figure 23 Flash installation interrupted

   If an older version exists on your PC and it needs to be updated, click **Next** to continue installation.

Copyright © 2006 Nokia. All rights reserved.

3. It is recommended to install the files to the default destination folder *C:|Program Files|Nokia|Phoenix*. To continue, click **Next**.

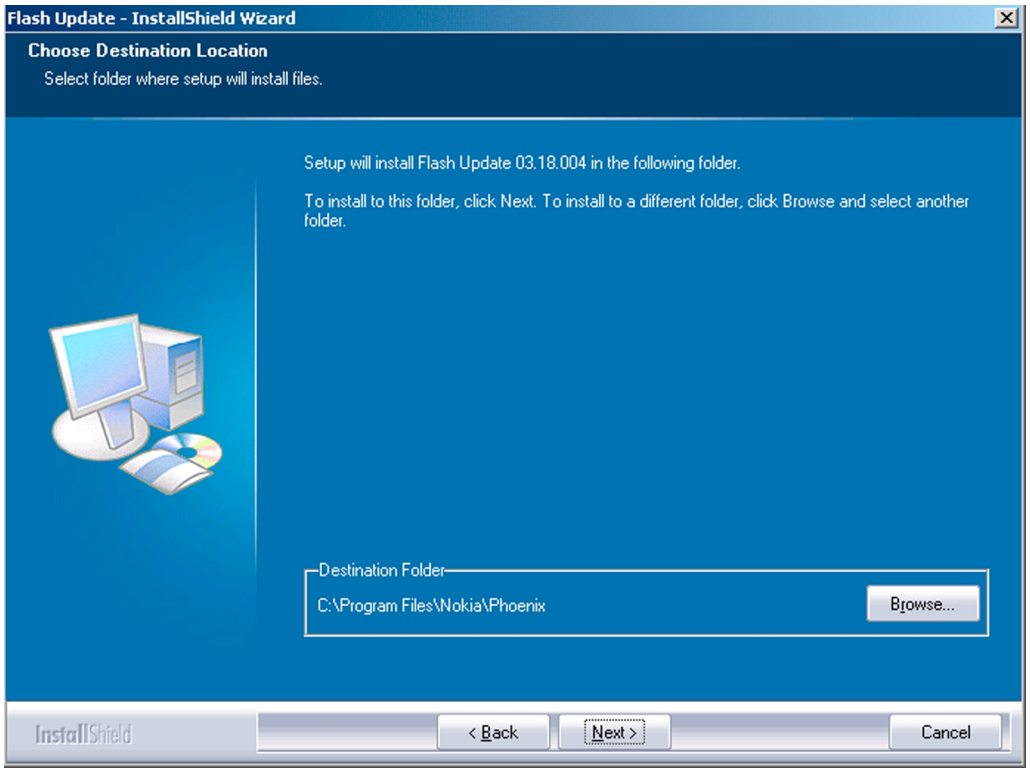

Figure 24 Flash destination folder

When installing the flash update files for the first time, you may choose another location by selecting **Browse** (not recommended).

Copyright © 2006 Nokia. All rights reserved.

4. To complete the installation procedure, click **Finish** .

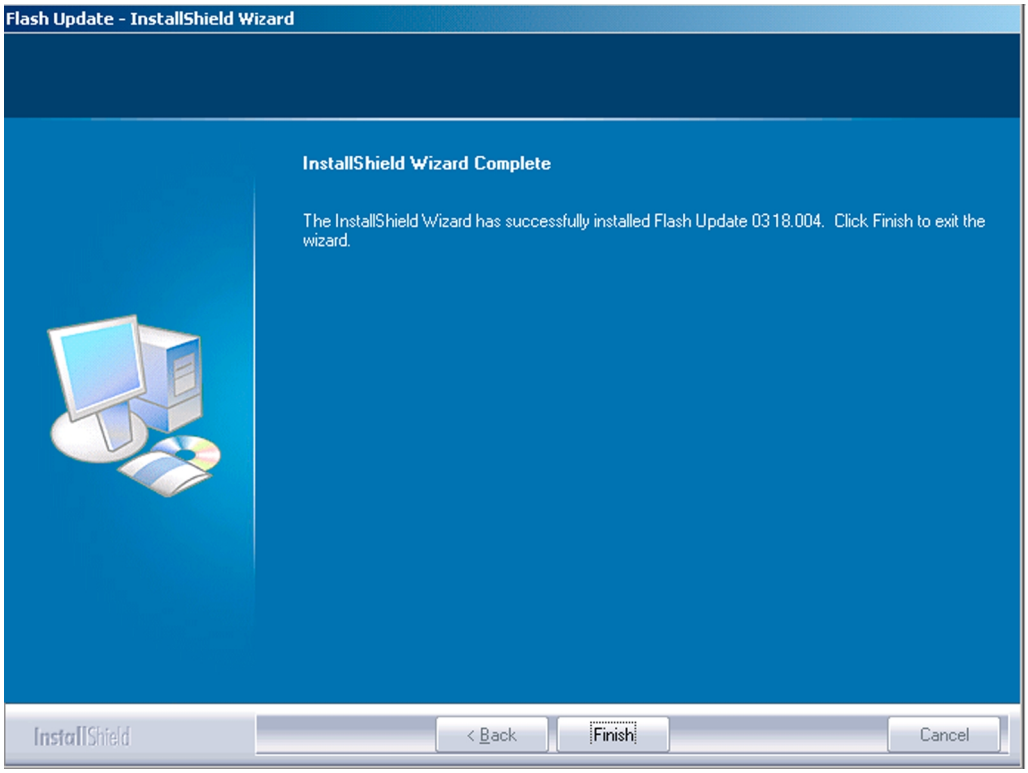

Figure 25 Finish flash update

Next actions

FPS-8 and FPS-10 flash prommers must be updated using *Phoenix*.

Updating FPS-8 and FPS-10 flash prommer software

Steps

1. Start *Phoenix* service software, and log in.
2. Choose the correct connection for your flash prommer: **File→Manage Connections...**
3. Choose **Flashing→Prommer maintenance** .
4. To update the **FPS-8/FPS-10** software, click **Update**, and select the appropriate file *fps8upd.ini* (for FPS-8) or *fpsxupd.ini* (for FPS-10) from *C:|Program Files|Nokia|Phoenix|Flash*.

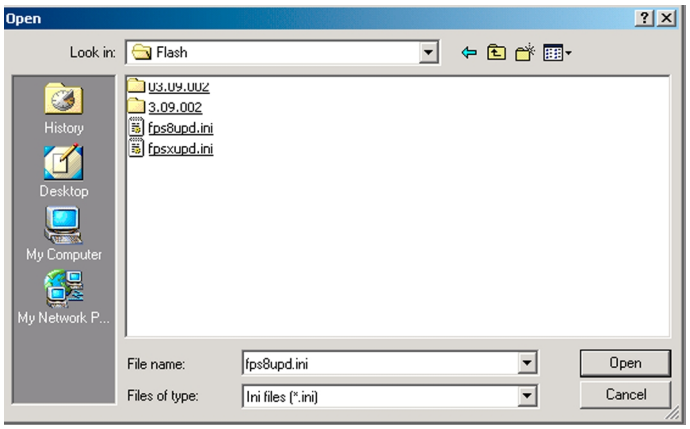

Figure 26 Flash directory window

Copyright © 2006 Nokia. All rights reserved.

Tip: All files can be loaded separately to the prommer used. To do this, click the right mouse button in the *Flash Box Files* pane and select the file type(s) to be loaded.

5. Click **OK**.

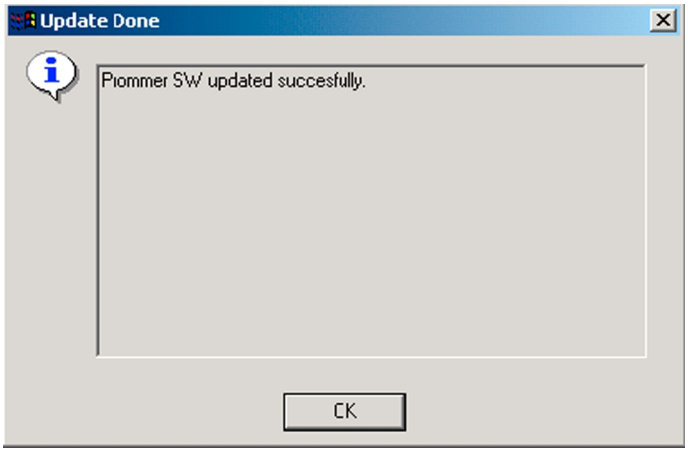

Figure 27 Prommer software update finished

6. To close the *Prommer Maintenance* window, click **Close**.

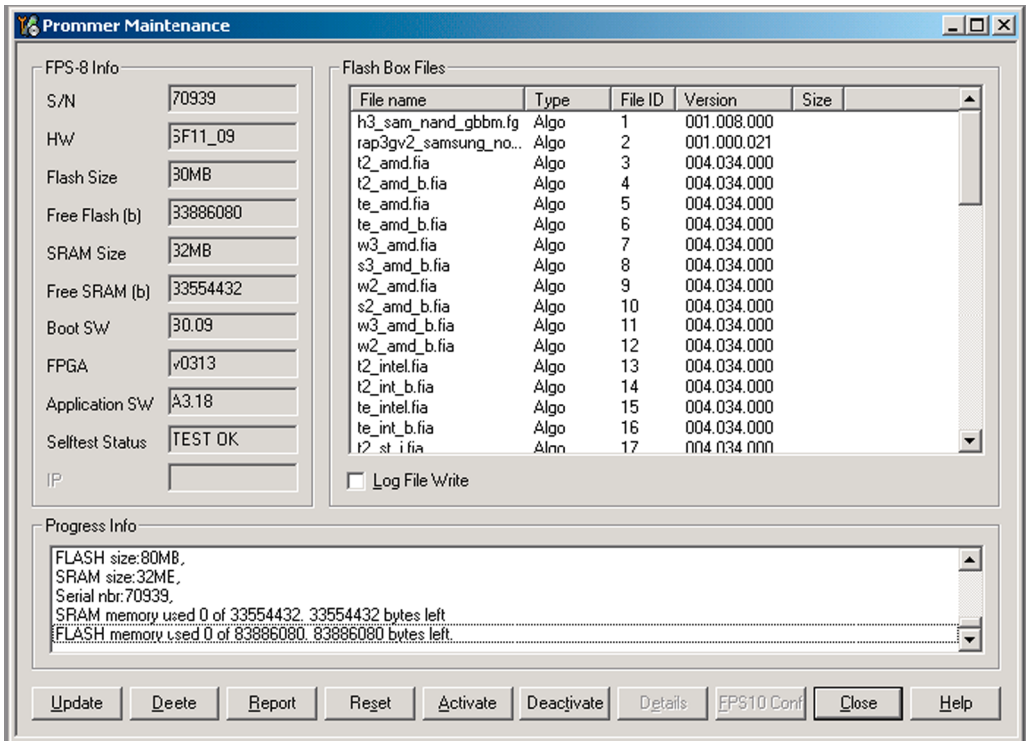

Figure 28 *Prommer Maintenance* window

Activating FPS-8

Context

Before FPS-8 can be successfully used for phone programming, it must first be activated.

First fill in the *FPS-8 activation request* sheet in the FPS-8 sales package, and follow the instructions given.

When activation file is received (for example, *00000.in*), copy it to the *C:|ProgramFiles|Nokia|Phoenix|BoxActivation* directory on your computer (this directory is created when *Phoenix* is installed).

Copyright © 2006 Nokia. All rights reserved.

Steps

1. Start *Phoenix* service software.
2. Choose **Flashing→Prommer Maintenance** .
3. In the *Prommer Maintenance* window, click **Activate**.
4. To find the activation file, click **Browse**.
5. To activate the prommer, select the activation file and click **Open**.

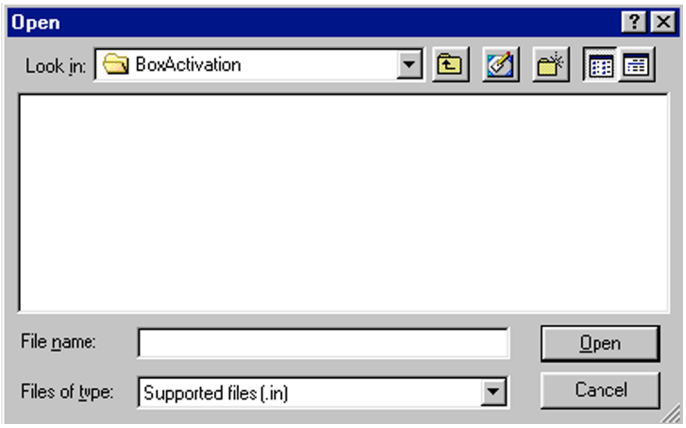

Figure 29 Box activation

6. To complete the activation, restart FPS-8.

Deactivating FPS-8

Context

If there is, for example, a need to send the FPS-8 box for repair, it must be deactivated first.

Steps

1. Start *Phoenix* service software.
2. Choose **Flashing→Prommer Maintenance** .
3. In the *Prommer Maintenance* window, click **Deactivate**.
4. To confirm the deactivation, click **Yes**.

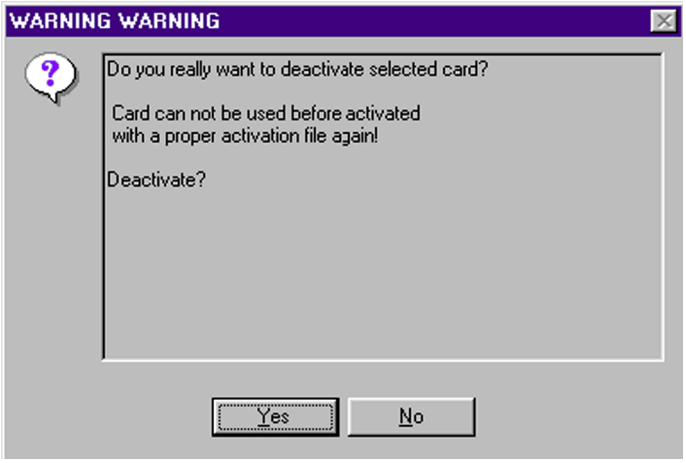

Figure 30 Deactivation warning

Copyright © 2006 Nokia. All rights reserved.

The box is deactivated.

5. To complete the deactivation, restart FPS-8.

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

4 — Service Tools and Service Concepts

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Service tools....4–5
Product specific tools....4–5
FS-41....4–5
FS-9....4–6
MJ-117....4–7
RJ-68....4–7
SA-76....4–8
General tools....4–8
CU-4....4–9
FPS-10....4–10
JBT-9....4–10
PKD-1....4–10
RJ-93....4–11
SS-42....4–11
SS-45....4–11
SS-46....4–11
SS-62....4–11
SS-71....4–12
ST-40....4–12
Cables....4–12
CA-35S....4–12
CA-53....4–12
DKU-2....4–13
PCS-1....4–13
XCS-4....4–13
XRE-2....4–14
XRF-1....4–14
Service concepts....4–15
POS (Point of Sale) flash concept....4–15
Flash concept with FPS-10....4–16
CU-4 flash concept with FPS-10....4–17
Module jig service concept....4–18
RF testing concept with RF coupler....4–19
Service concept for RF testing and RF/BB tuning....4–20

List of Tables

Table 9 Attenuation values for RM-209....4–8

List of Figures

Figure 31 Mode switch....4–7
Figure 32 POS flash concept....4–15
Figure 33 Basic flash concept with FPS-10....4–16
Figure 34 CU-4 flash concept with FPS-10....4–17
Figure 35 Module jig service concept....4–18
Figure 36 RF testing concept with RF coupler....4–19
Figure 37 Service concept for RF testing and RF/BB tuning....4–20

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Service tools

Product specific tools

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-209, refer to various concepts.

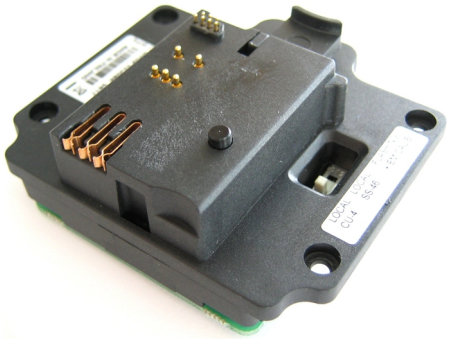

FS-41	Product specific flash adapter	

The product specific adapter can be used for assembled phones (RM-209 and RM-70).

FS-41 is an interface between a phone and the concerning SS-46 or SS-62 device. It is needed in case the assembled phone needs to be contacted, except the DKU-2 or the CA-53 cable can be used (over USB).

Features include:

- Compatible to SS-46 (similar to DCT-4 flash adapter), supports flashing
- Compatible to SS-62 (similar to DCT-4 docking station adapter), a PC can be connected by using SS-46 or CU-4
  - Using SS-46: flashing is supported
  - Using CU-4: supports flashing, management calibration is supported. If the RF-coupler SA-76 is attached RF-Go/NoGo testing is supported as well
- Easy phone attachment and detachment
- Reliable phone locking
- Replaceable test pins

Pos 1: Local CU-4
Phone powers up with CU-4 and SS-62 in local mode.
Flashing is not possible.
No usage with SS-46

Pos 2: Local SS-46
Usage with SS-46: phone powers up in Local Mode. Immediate flashing possible.
Usage with CU-4: flashing only (phone would power up in normal mode).



Pos 3: Flashing & EM calibration
Always power up the phone in Normal mode.
It can be flashed after changing to Local mode by using Phoenix.
Energy Management calibration must be done in this mode.

Copyright © 2006 Nokia. All rights reserved.

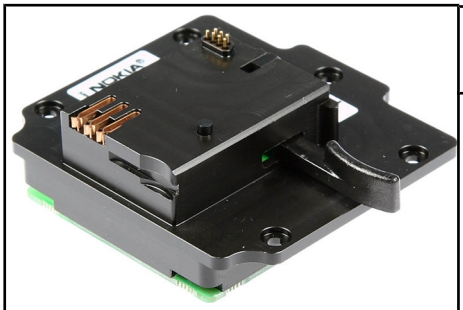

FS-9	Product specific flash adapter	

The product specific adapter can be used for assembled phones.

FS-9 is an interface between a phone and the concerning SS-46 or SS-62 device. It is needed in case the assembled phone needs to be contacted, except the DKU-2 or the CA-53 cable can be used (over USB).

Features include:

- Compatible to SS-46 (similar to DCT-4 flash adapter), supports flashing
- Compatible to SS-62 (similar to DCT-4 docking station adapter), a PC can be connected by using SS-46 or CU-4
  - Using SS-46: flashing is supported
  - Using CU-4: supports flashing, management calibration is supported. If the RF-coupler SA-76 is attached RF-Go/NoGo testing is supported as well
- Easy phone attachment and detachment
- Reliable phone locking
- Replaceable test pins

Note: When attaching the phone the FS-9 adapter (which might be connected to SS-46 or SS-62/CU-4), the phone powers up in *normal mode* and not in *local mode* like other phones. This has to do with BSI indicator of the battery interface. It is possible to flash the phone like usual or change to *local mode*.

Note: This adapter can be used with **RM-209/Nokia7373**, but **only for flashing**. For Go/NoGo testing, please use FS-41, or use an external SIM card and accept *Power up without SIM card*. This is because the test pattern in RM-209 is located below the SIM card.

FS-41 will replace FS-9 in general, and works with RM-70/ Nokia7370 as well

Copyright © 2006 Nokia. All rights reserved.

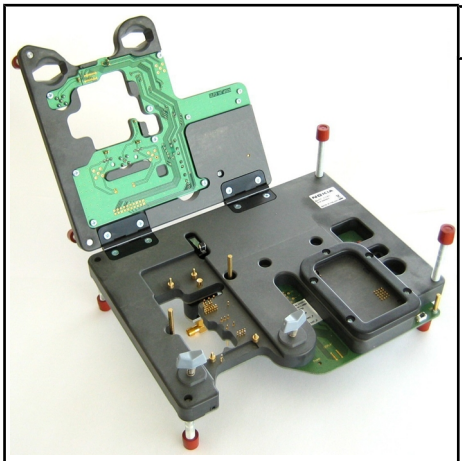

MJ-117	Module repair jig	

MJ-117 is meant for component level trouble shooting The jig includes RF interface for GSM and Bluetooth.

General features of the jig include:

- Provides mechanical interface for engine module
- Provides galvanic connection to all needed test pads in module
- UI test interface
- Audio components MIC, earpiece, stereo IHF
- Unlimited operation of a disassembled RM-209 phone module
- Power supply via CU-4

Note: CU-4 is needed to operate MJ-117. CU-4 is not included in the MJ-117 sales package and has to be ordered separately.

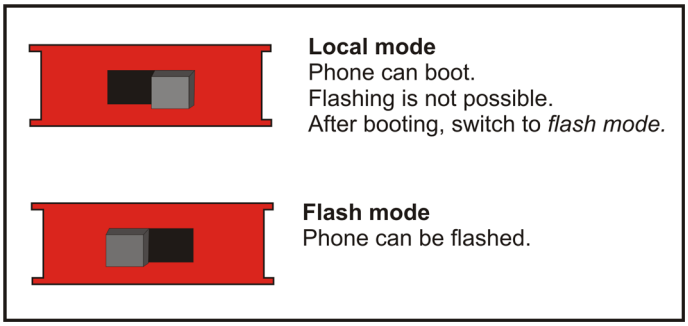

Figure 31 Mode switch

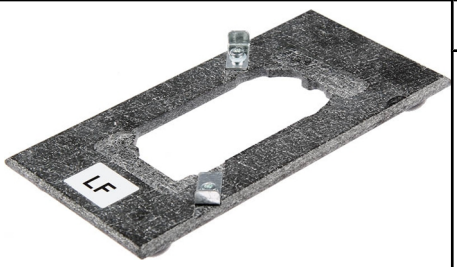

RJ-68	Soldering jig	

This soldering jig is used for module level repair, either as fixation in µBGA rework places or when there is a need to hold a module on the work bench for any other repair.

Features include:

- Convenient locking mechanism
- Four (optional mount) rubber feet allow usage also on repair benches
- Fixation of phone module in both ways possible (bottom or top side up)
- ESD proof material
- Standard uBGA jig thickness and outer dimensions

Copyright © 2006 Nokia. All rights reserved.

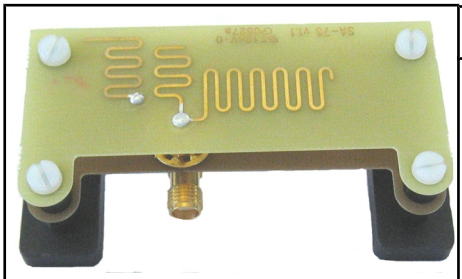

SA-76	RF coupler	

The SA-76 coupler is for GSM RF testing.

The RF antenna coupler for use with interface adapter SS-62 extends CU-4/SS-62/FS-41 set-up to allow RF function tests in GSM bands 900, 1800 and 1900 MHz.

SA-76 is not suitable for RF tuning.

Note: When using the coupler the phone shall be used in **open mode**.

- **Table 9 Attenuation values for RM-209**

Band	Channel	Tx (dB)	Rx (dB)
EGSM 900	975	5,8	6
	38	5	6
	124	5,6	6
GSM 1800	512	4,7	5
	698	4,2	6
	885	4,7	6
GSM 1900	512	4,5	7
	661	4,5	7
	810	4,4	8

General tools

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-209, refer to various concepts.

Copyright © 2006 Nokia. All rights reserved.

CU-4	Control unit	

CU-4 is a general service tool used with a module jig and/or a flash adapter. It requires an external 12 V power supply.

The unit has the following features:

- software controlled via USB
- EM calibration function
- Forwards FBUS/Flashbus traffic to/from terminal
- Forwards USB traffic to/from terminal
- software controlled BSI values
- regulated VBATT voltage
- 2 x USB2.0 connector (Hub)
- FBUS and USB connections supported

When using CU-4, note the special order of connecting cables and other service equipment:

Instructions

1 Connect a service tool (jig, flash adapter) to CU-4.
2 Connect CU-4 to your PC with a USB cable.
3 Connect supply voltage (12 V)
4 Connect an FBUS cable (if necessary).
5 Start Phoenix service software.

Note: Phoenix enables CU-4 regulators via USB when it is started.

Reconnecting the power supply requires a Phoenix restart.

Copyright © 2006 Nokia. All rights reserved.

FPS-10	Flash prommer	

FPS-10 interfaces with:

- PC
- Control unit
- Flash adapter
- Smart card

FPS-10 flash prommer features:

- Flash functionality for BB5 and DCT-4 terminals
- Smart Card reader for SX-2 or SX-4
- USB traffic forwarding
- USB to FBUS/Flashbus conversion
- LAN to FBUS/Flashbus and USB conversion
- Vusb output switchable by PC command

FPS-10 sales package includes:

- FPS-10 prommer
- Power Supply with 5 country specific cords
- USB cable

JBT-9	Bluetooth test and interface box (sales package)	

The JBT-9 test box is a generic service device used to perform Bluetooth bit error rate (BER) testing, and establishing cordless FBUS connection via Bluetooth. An ACP-8x charger is needed for BER testing and an AXS-4 cable in case of cordless interface usage testing .

Sales package includes:

- JBT-9 test box
- Installation and warranty information

PKD-1	SW security device	

SW security device is a piece of hardware enabling the use of the service software when connected to the parallel (LPT) port of the PC.

Without the device, it is not possible to use the service software.

Printer or any such device can be connected to the PC through the device if needed.

Copyright © 2006 Nokia. All rights reserved.

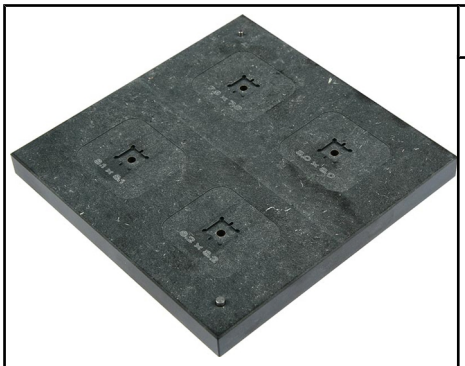	RJ-93	Rework jig	
	RJ-93 is used as a rework jig for the engine module. This stencil takes the front end module (FEM) or power amplifier (PA) module for spreading the soldering paste to the component. Must be used together with the ST-40 stencil.		
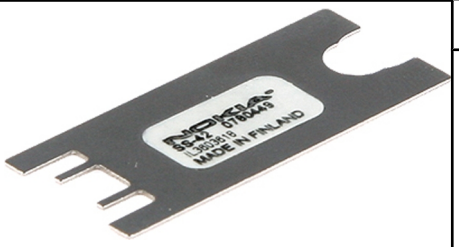	SS-42	Camera tool	
	SS-42 is used to remove the camera out of its socket.		
	SS-45	Front camera removal tool	
	The front camera removal tool SS-45 is used to remove/attach the front camera module from/to the socket.		
	SS-46	Interface adapter	
	SS-46 acts as an interface adapter between the flash adapter and FPS-10.		
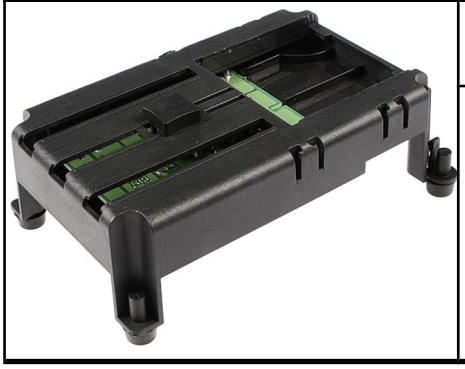	SS-62	Generic flash adapter base for BB5	
	• generic base for flash adapters and couplers • SS-62 equipped with a clip interlock system • provides standardised interface towards Control Unit • provides RF connection using galvanic connector or coupler • multiplexing between USB and FBUS media, controlled by VUSB		

Copyright © 2006 Nokia. All rights reserved.

	SS-71	Domesheet alignment jig	
	The domesheet alignment jig will be only supplied for APAC and China regions only. The purpose of this tool is to simplify the attachment process of the domesheet to the keymat PWB. In other regions the complete assembly (keymat PWB & domesheet is used as a spare part)		
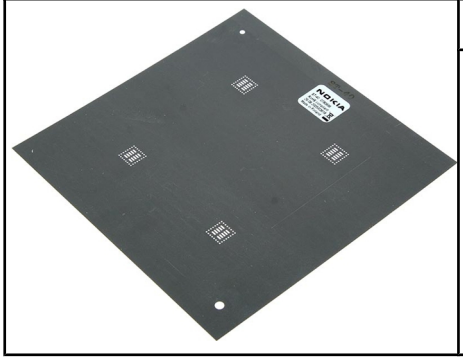	ST-40	PA rework stencil	
	This stencil is to be used together with RJ-93 and covering FEM module.		

Cables

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-209, refer to various concepts.

	CA-35S	Power cable	
	CA-35S is a power cable for connecting, for example, the FPS-10 flash prommer to the Point-Of-Sales (POS) flash adapter.		
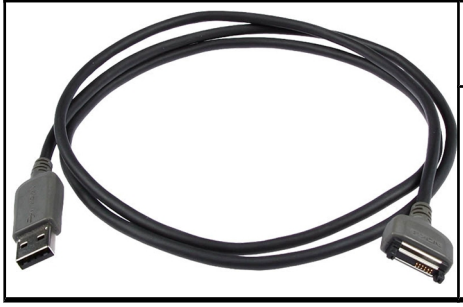	CA-53	USB connectivity cable	
	USB to system connector cable.		

Copyright © 2006 Nokia. All rights reserved.

	DKU-2	USB connectivity cable	
	USB to system connector cable.		
	PCS-1	Power cable	
	The PCS-1 power cable (DC) is used with a docking station, a module jig or a control unit to supply a controlled operating voltage.		
	XCS-4	Modular cable	
	XCS-4 is a shielded (one specially shielded conductor) modular cable for flashing and service purposes.		

Copyright © 2006 Nokia. All rights reserved.

	XRE-2	Bluetooth cable	
	The bluetooth cable connects the bluetooth connector of the module jig to the bluetooth test box JBT-9.		
	XRF-1	RF cable	
	The RF cable is used to connect, for example, a module repair jig to the RF measurement equipment. SMA to N-Connector ca. 610mm. Attenuation for: • GSM850/900: 0.3+-0.1 dB • GSM1800/1900: 0.5+-0.1 dB • WLAN: 0.6+-0.1dB		

Copyright © 2006 Nokia. All rights reserved.

Service concepts

POS (Point of Sale) flash concept

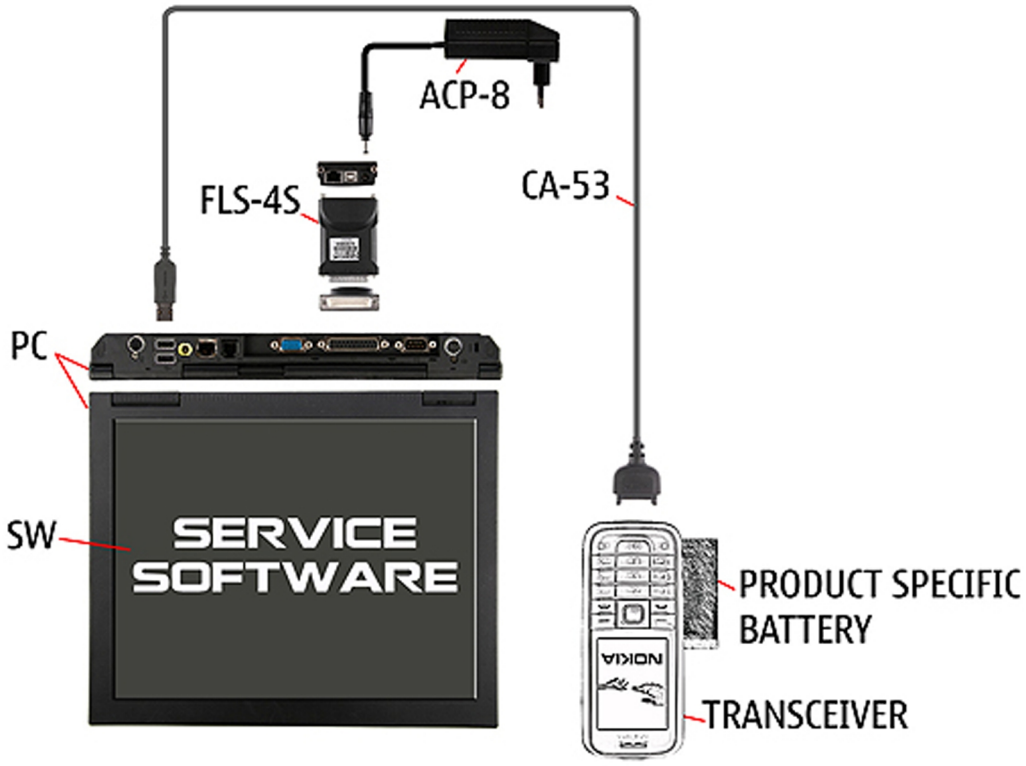

Figure 32 POS flash concept

Type	Description
Product specific tools	
BL-4B	Battery
Other tools	
ACP-8	Power adapter
FLS-4S	POS flash dongle
	PC with Phoenix service software
Cables	
CA-53	USB connectivity cable

Copyright © 2006 Nokia. All rights reserved.

Flash concept with FPS-10

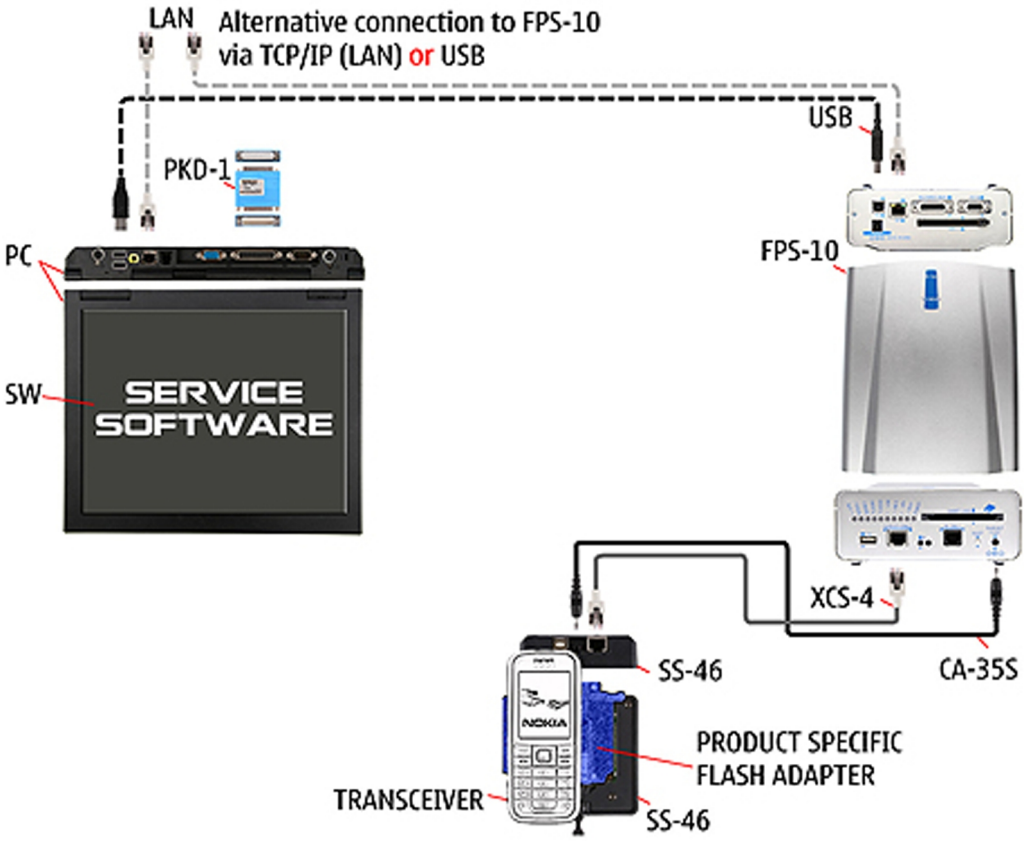

Figure 33 Basic flash concept with FPS-10

Type	Description
Product specific tools	
FS-41	Flash adapter
Other tools	
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SS-46	Interface adapter
	PC with Phoenix service software
Cables	
XCS-4	Modular cable
CA-35S	Power cable
	USB cable

Copyright © 2006 Nokia. All rights reserved.

CU-4 flash concept with FPS-10

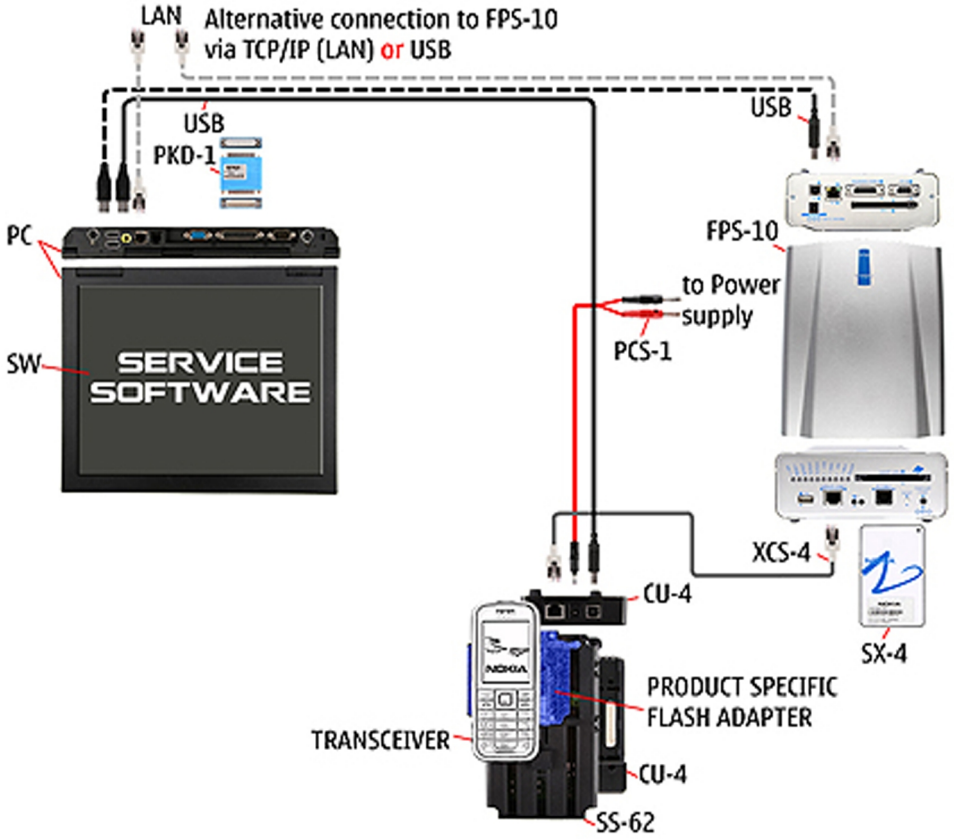

Figure 34 CU-4 flash concept with FPS-10

Type	Description
Product specific tools	
FS-41	Flash adapter
Other tools	
CU-4	Control unit
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SS-62	Flash adapter base
SX-4	Smart card
	PC with Phoenix service software
Cables	
PCS-1	Power cable
XCS-4	Modular cable
	Standard USB cable
	USB cable

Copyright © 2006 Nokia. All rights reserved.

Module jig service concept

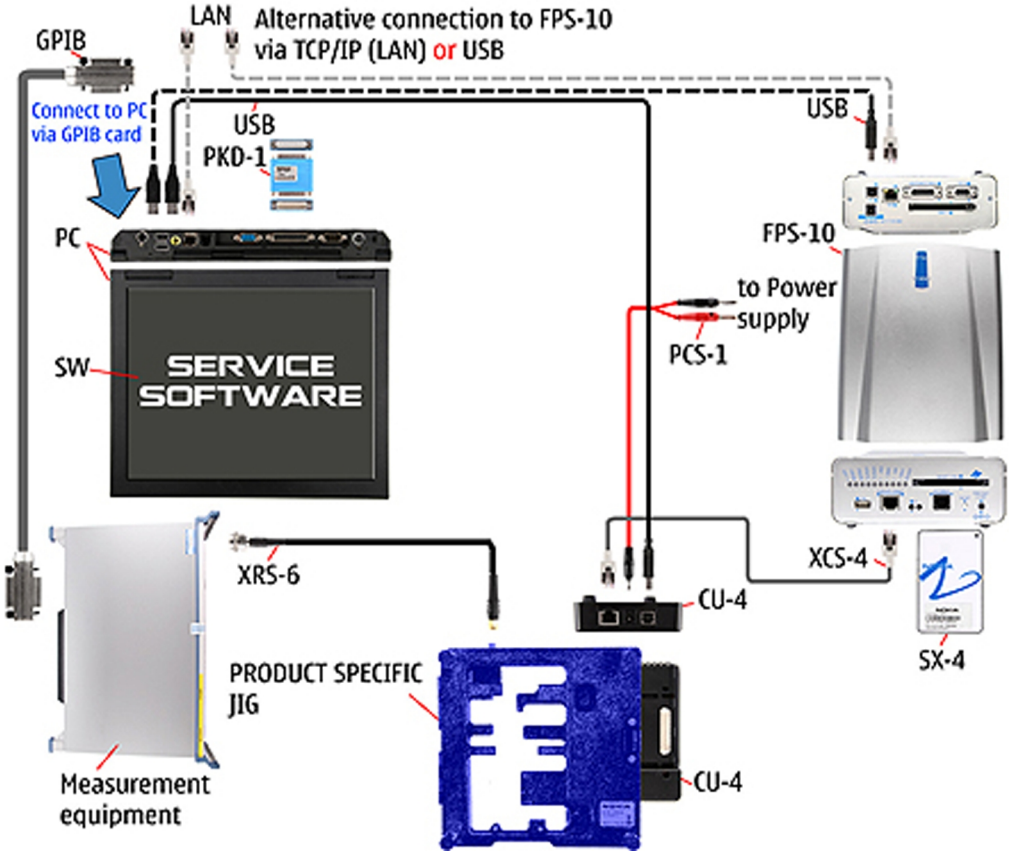

Figure 35 Module jig service concept

Type	Description
Phone specific tools	
MJ-117	Module jig
Other tools	
CU-4	Control unit
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SX-4	Smart card
	PC with Phoenix service software
	Measurement equipment
Cables	
PCS-1	DC power cable
XCS-4	Modular cable
XRS-6	RF cable
	USB cable

Copyright © 2006 Nokia. All rights reserved.

Type	Description
	GPIB control cable

RF testing concept with RF coupler

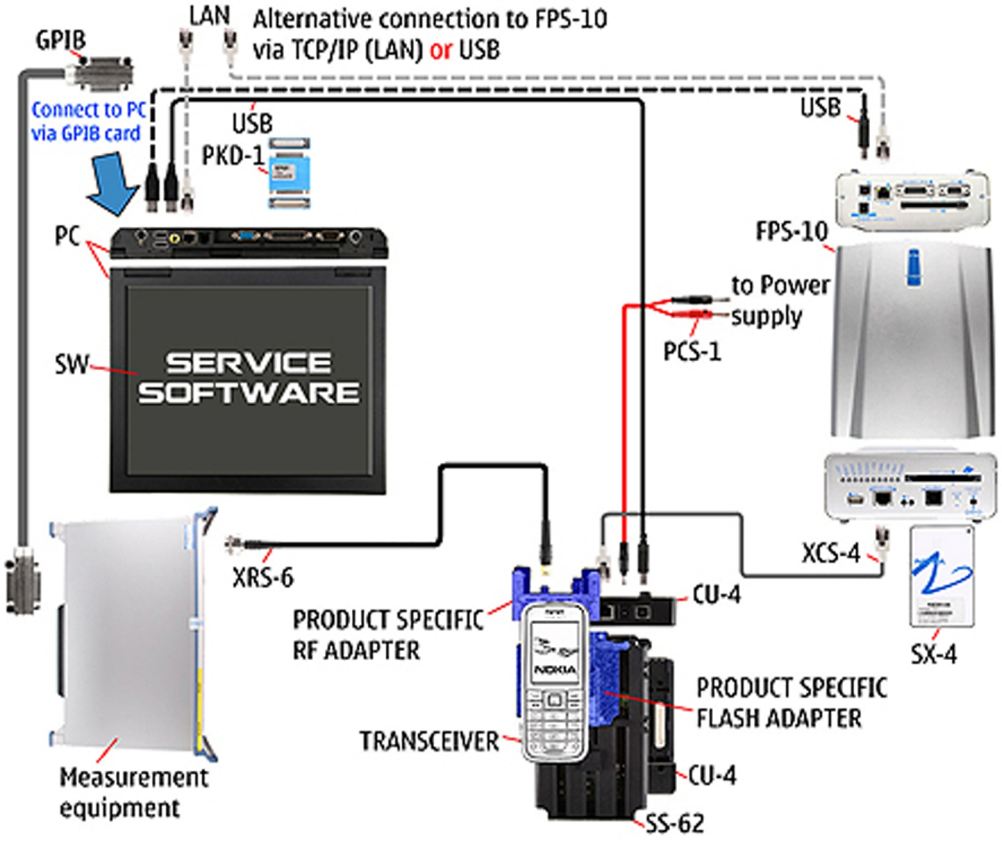

Figure 36 RF testing concept with RF coupler

Type	Description
Product specific tools	
FS-41	Flash adapter
SA-76	RF coupler
Other tools	
CU-4	Control unit
SX-4	Smart card
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SS-62	Flash adapter base
	Measurement equipment
	PC with Phoenix service software
Cables	
PCS-1	Power cable

Copyright © 2006 Nokia. All rights reserved.

Type	Description
XCS-4	Modular cable
XRS-6	RF cable
	GPIB control cable
	USB cable

Service concept for RF testing and RF/BB tuning

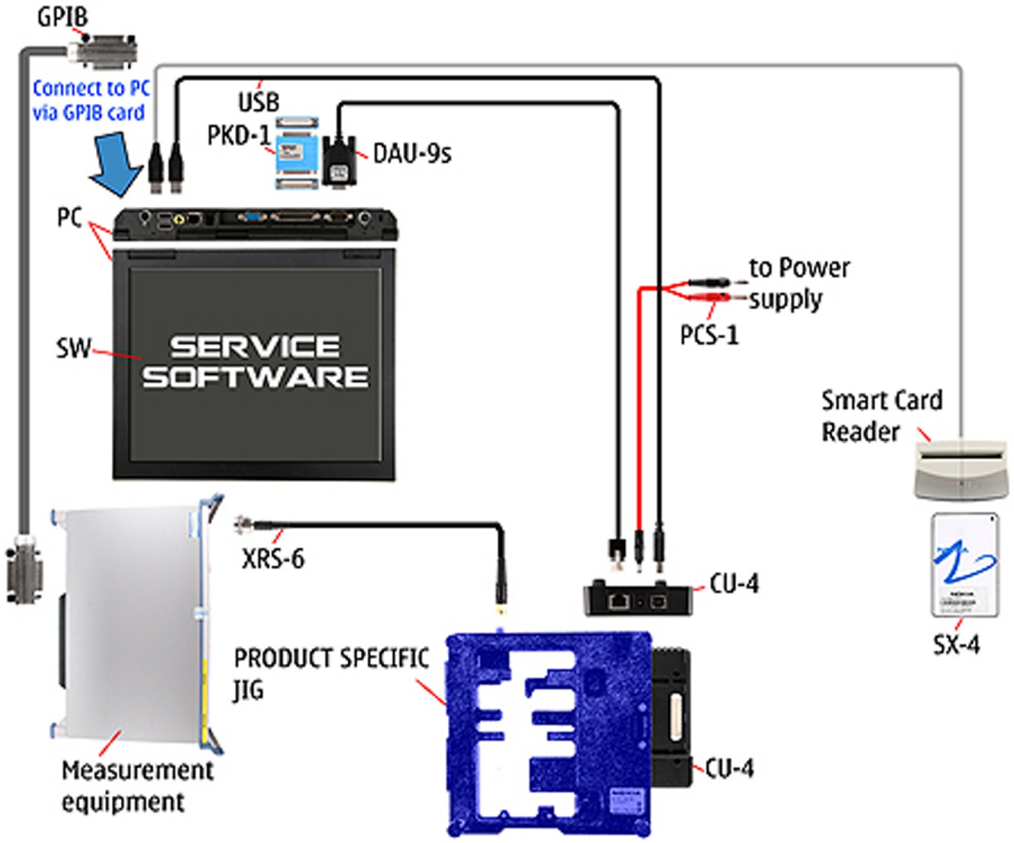

Figure 37 Service concept for RF testing and RF/BB tuning

Type	Description
Product specific tools	
MJ-117	Module jig
Other tools	
CU-4	Control unit
SX-4	Smart card
	Measurement equipment
	Smart card reader
	PC with Phoenix service software
Cables	

Copyright © 2006 Nokia. All rights reserved.

Type	Description
DAU-9s	MBUS cable
PCS-1	DC power cable
PKD-1/PK-1	SW security device
XRS-6	RF cable
	GPIB control cable
	USB cable

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

5 — Disassembly and reassembly instructions

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Disassembly instructions (upper block).....5–5
Reassembly instructions (upper block).....5–9
Disassembly instructions (lower block).....5–10
Reassembly instructions (upper block).....5–18

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Disassembly instructions (upper block)

Steps

1. You need the following tools.

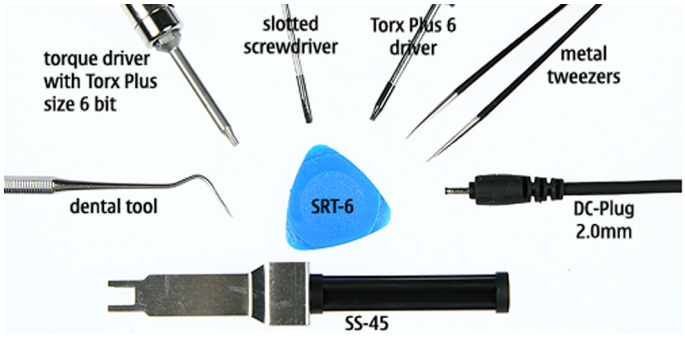

2. Always protect all windows with a plastic film.

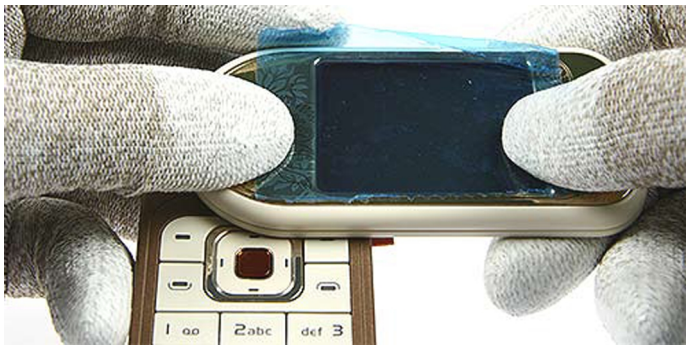

3. Open the **E-COVER** and remove the battery, if it is inserted.

Copyright © 2006 Nokia. All rights reserved.

4. Turn the **UPPER BLOCK** to 90° from the **LOWER BLOCK**. Start opening the **A-COVER ASSY** at the round side with the SRT-6.

5. Slide the SRT-6 around the covers and keep the gap open. Unlock the retaining clips separately.

6. Go ahead near the **SWIVEL** area.

7. This is the last clip to be unlocked.

Copyright © 2006 Nokia. All rights reserved.

8. Now, separate **A-COVER** and **B-COVER**.

9. Also, protect the inner side of the window with a plastic film.

10. Carefully unlock the **BOARD TO BOARD CONNECTOR**.

11. Unlock four clips at the **B-COVER**, which hold the**UI-SHIELD** into the **B-COVER**.

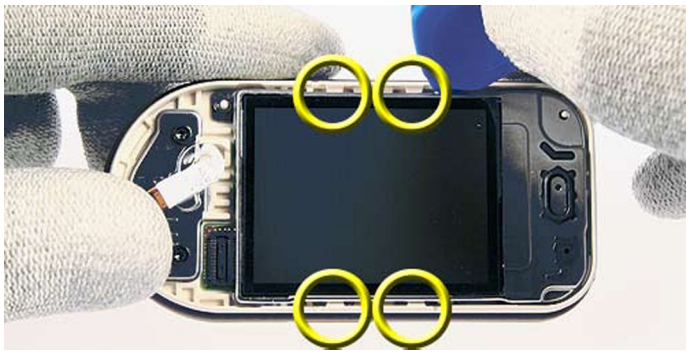

Copyright © 2006 Nokia. All rights reserved.

12. Do not damage the LCD connector when opening.

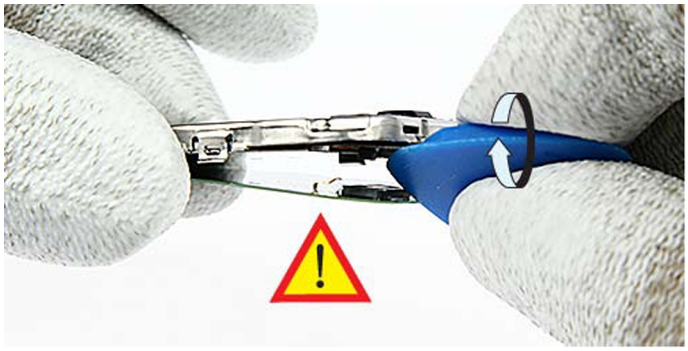

13. Open the four clips which hold the **LCD** into the **UI-SHIELD**. Do not bend the clips too much to keep the part reusable for assembly.

14. Lift out the **LCD**.

15. To avoid dust and scratches, protect the LCD with a plastic film.

Copyright © 2006 Nokia. All rights reserved.

16. Open the two Torx Plus® size 6 screws in the following order.

    Note: For assembly use the reverse order and apply a torque of 25 Ncm +/- 2Ncm. Always use new screws!

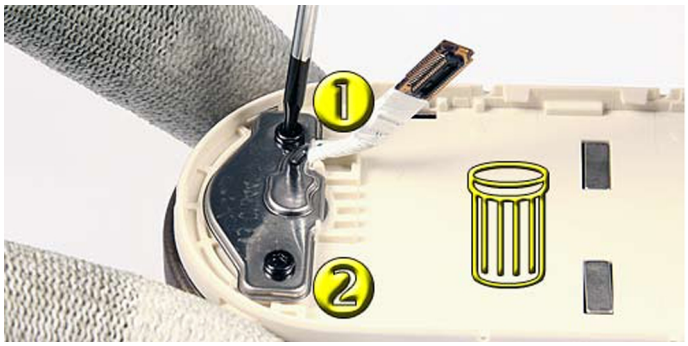

17. Remove the **SCREWING PLATE**.

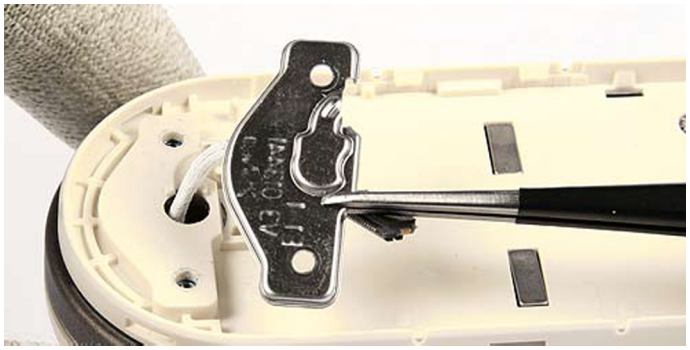

18. Separate the **UPPER BLOCK** from the **LOWER BLOCK**.

Reassembly instructions (upper block)

Steps

1. Follow the disassembly instructions *in reversed order* , from step **18** to step **17**.

Copyright © 2006 Nokia. All rights reserved.

2. Pay attention to the right length of the **COAX CABLE** and place the marking at the edge of the **SCREWING PLATE**.

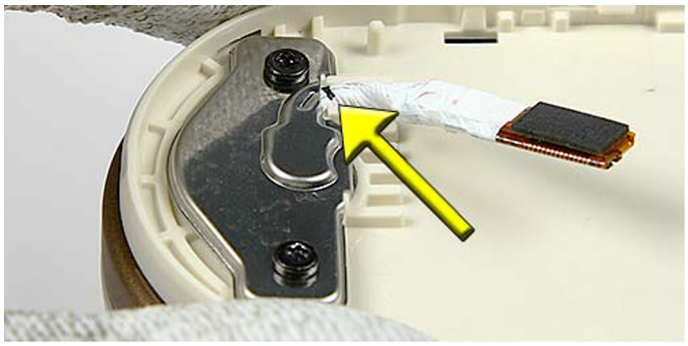

3. Follow the disassembly instructions *in reversed order* , from step **16** to step **1**.

   Note: Pay special attention to step **16**.

Disassembly instructions (lower block)

Steps

1. Always protect all windows with a plastic film.

2. Remove the **E-COVER**.

Copyright © 2006 Nokia. All rights reserved.

3. If you need to change the **KEYMAT**, it is also possible at a closed **LOWER BLOCK**. Remove the **KEYMAT** starting exactly from the point shown.

4. Open the two Torx Plus® size 6 screw in the following order.

   Note: For assembly use the reverse order and apply a torque of 25 Ncm +/- 2 Ncm.

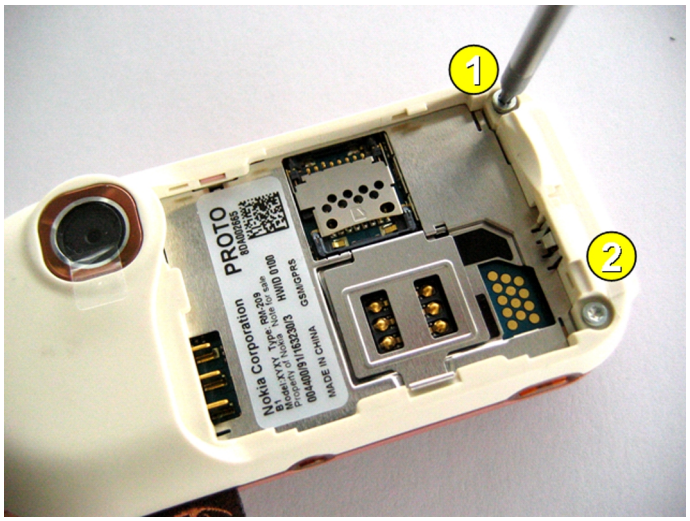

5. Open the middle snaps of the **D-COVER**, using a slotted screwdriver.

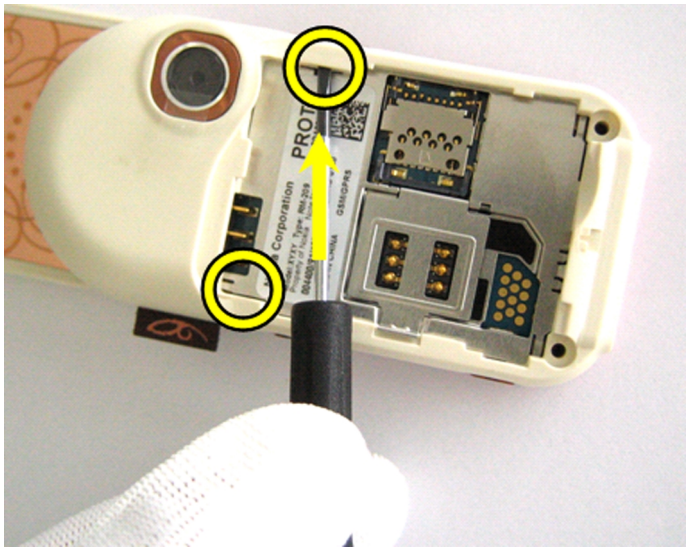

Copyright © 2006 Nokia. All rights reserved.

6. Use the SRT-6 to open the snaps of the **D-COVER ASSY** on the right side. Then...

7. ...at the top side and...

8. ...at the left side.

9. Remove the **D-COVER**.

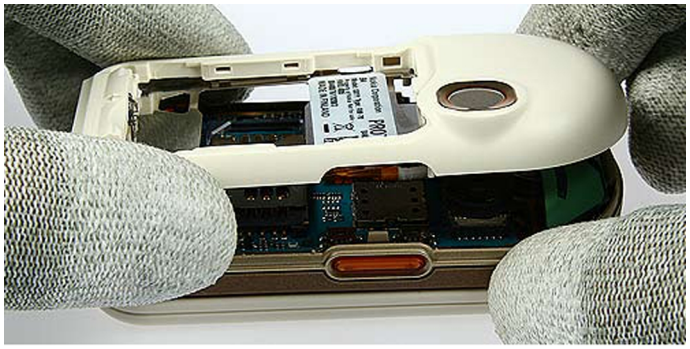

Copyright © 2006 Nokia. All rights reserved.

10. Remove the **CAMERA GASKET**.

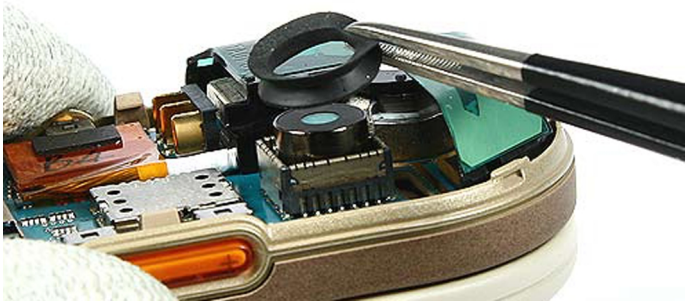

11. Stick the **SS-45** into the camera connector.

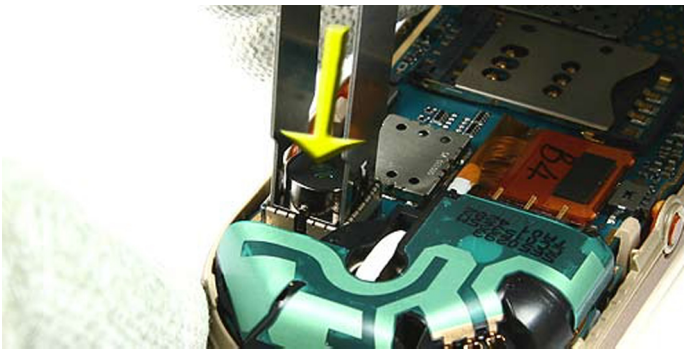

12. Press the SS-45 together and remove the **CAMERA MODULE**.

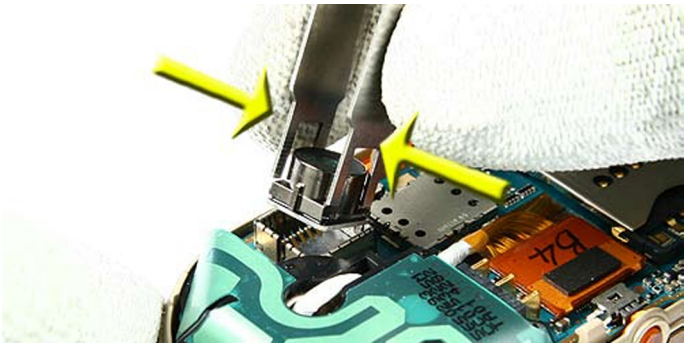

13. The **ANTENNA MODULE** has four lockings. Use the dental tool to open the first lock.

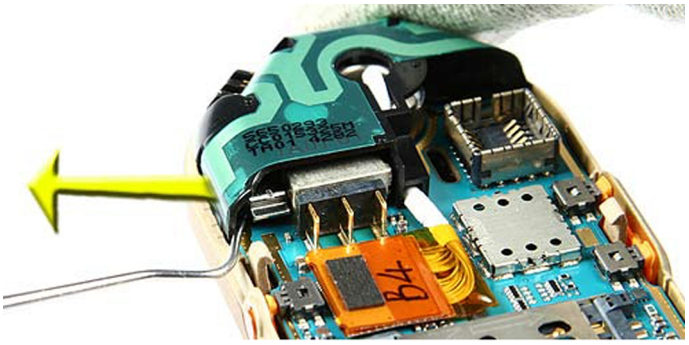

Copyright © 2006 Nokia. All rights reserved.

14. Stick the dental tool under the **ANTENNA MODULE** (The pike of the dental tool is visible in the marked hole). Now pull the tool to the shown direction.

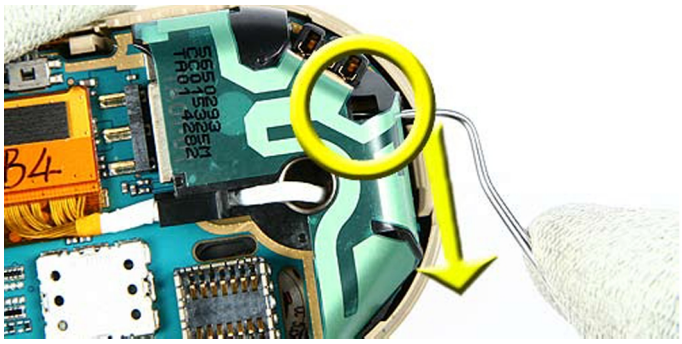

15. Do the same as before (the pike is in this case not visible) and pull in the opposite direction.

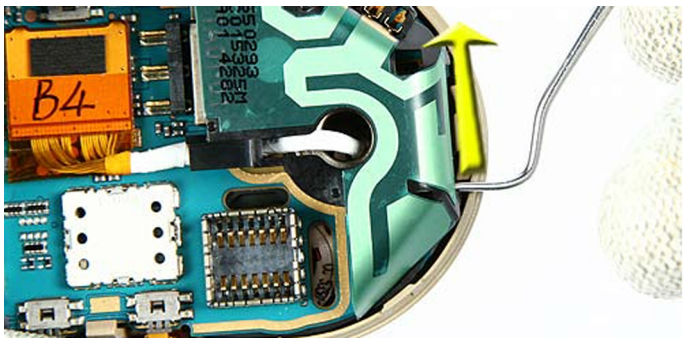

16. Now unlock the last snap.

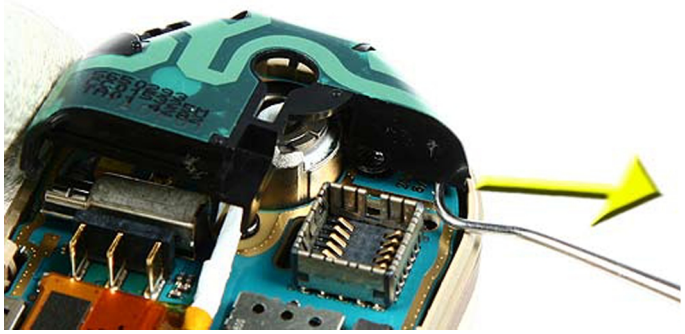

17. Remove the **ANTENNA MODULE**.

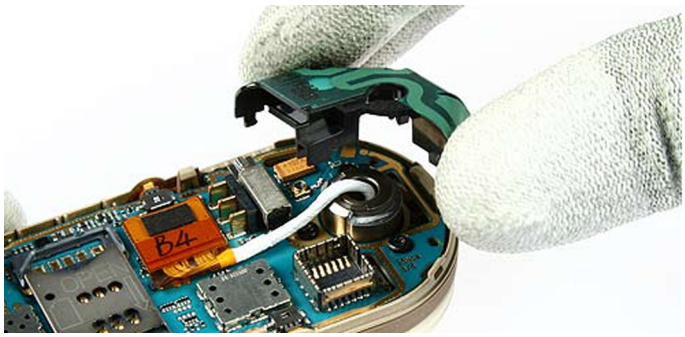

Copyright © 2006 Nokia. All rights reserved.

18. Carefully unlock the coax connector with SRT-6.

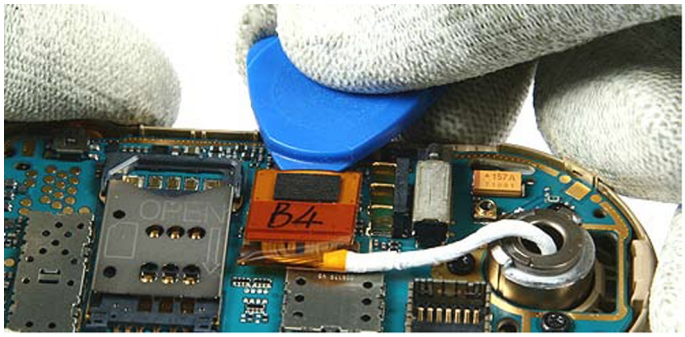

19. Unsrew the three SWIVEL screws Torx Plus® size 6 in the following order.

    Note: For assembly use the reverse order and apply a torque of 25 Ncm +/- 2 Ncm. Always use new screws!

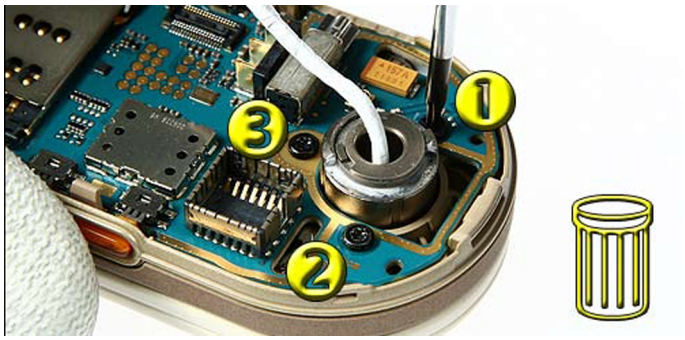

20. Separate the **ENGINE MODULE** from the **C-COVER ASSY**.

21. Remove the **BLUETOOTH ANTENNA** with tweezers.

Copyright © 2006 Nokia. All rights reserved.

22. Remove the **MICROPHONE** with the dental tool.

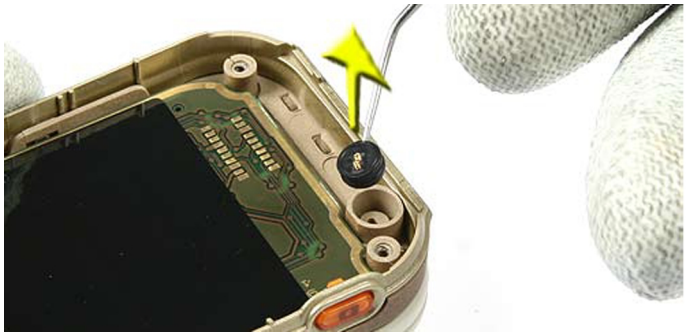

23. Remove both **IHF SPEAKERS** with tweezers.

24. Separate the **C-COVER ASSY** from the **UPPER BLOCK**.

25. Fit the **COAX CABLE** to the hole to remove the **C-COVER ASSY** completely from the **UPPER BLOCK**.

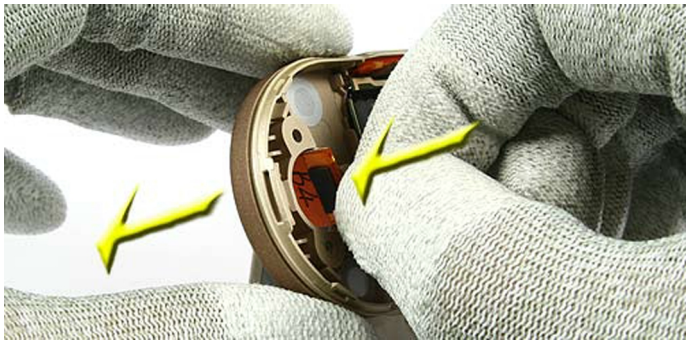

Copyright © 2006 Nokia. All rights reserved.

26. Remove the **PWB KEYMAT ASSY**.

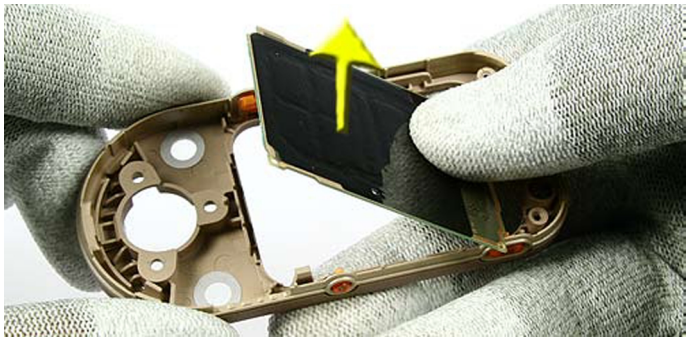

27. Use a **DC PLUG** to remove the **DC-JACK**.

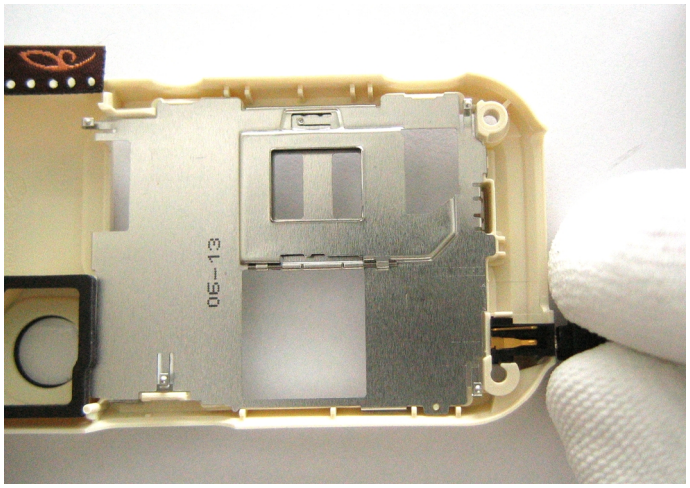

28. There are six clips, holding the **LABEL COVER** into the **D-cover**.

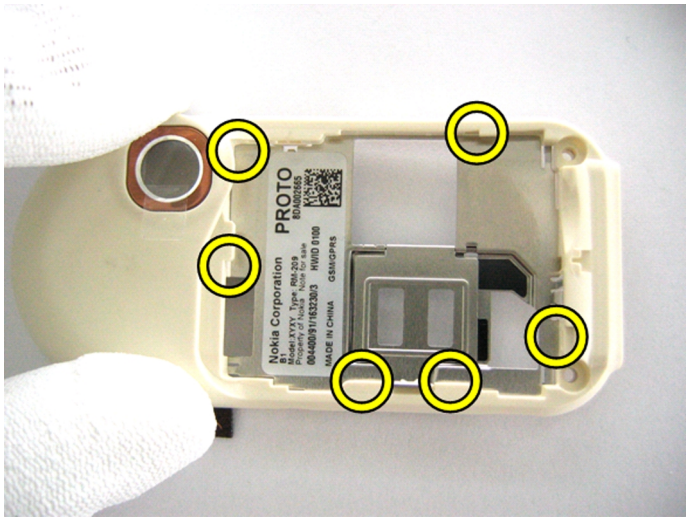

Copyright © 2006 Nokia. All rights reserved.

29. Unlock the five clips with a slotted screwdriver.

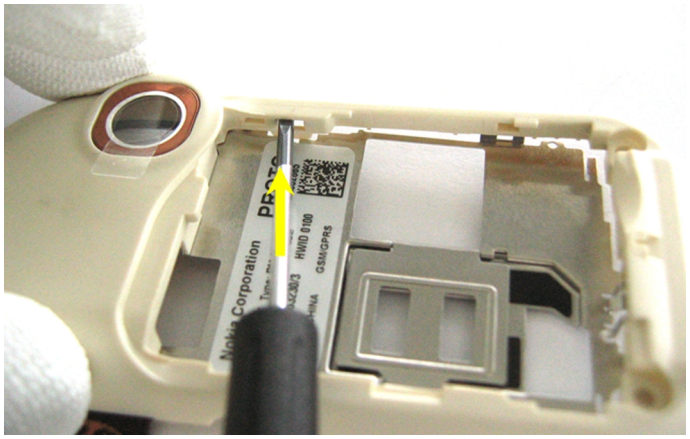

30. Turn around the **D-COVER** and unlock the last clip.

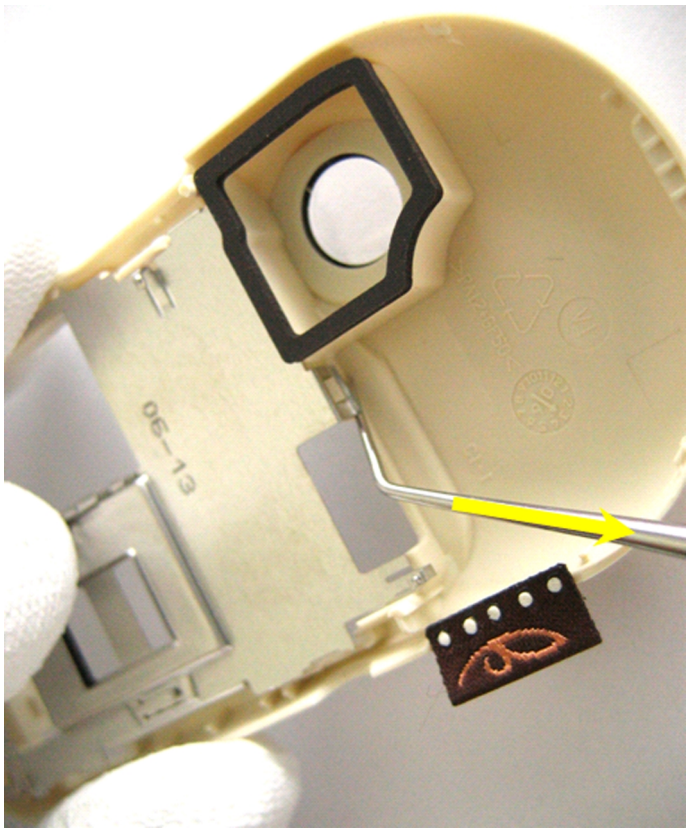

Reassembly instructions (upper block)

Steps

1. Follow the disassembly instructions *in reversed order* , from step **32** to step **13**.

   Note: Pay special attention to step **19**.

Copyright © 2006 Nokia. All rights reserved.

2. Mind the correct positioning of the **CAMERA MODULE**.

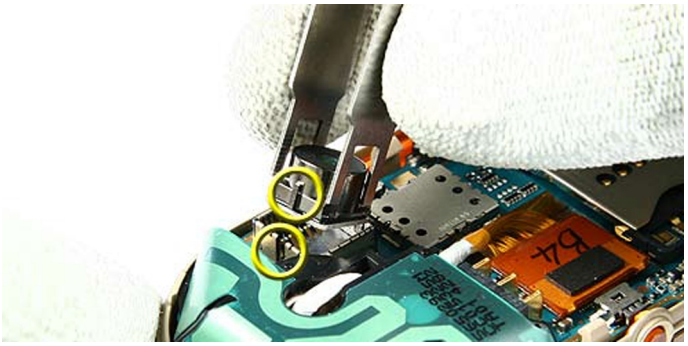

3. Use the opposite side of the SS-45 to lock the **CAMERA MODULE** properly.

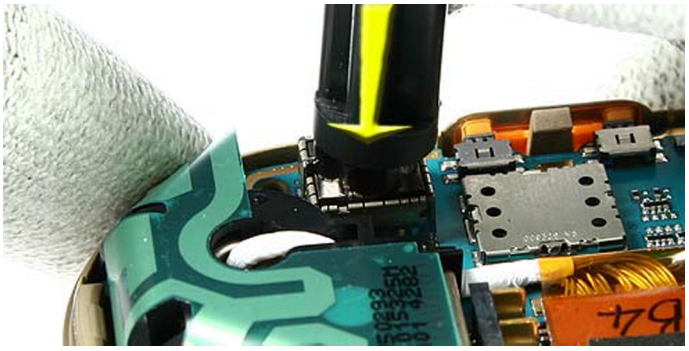

4. Follow the disassembly instructions *in reversed order* , from step **12** to step **4**.
5. When assembling, start placing the **KEYMAT** at button "0" and move forward to the upper side.

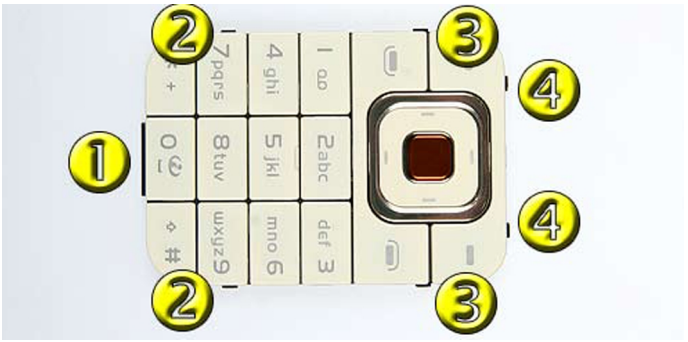

6. Start placing the **KEYMAT** at the marked positions.

Copyright © 2006 Nokia. All rights reserved.

7. Make sure to have all clips locked properly.

8. Follow the disassembly instructions *in reversed order* , from step **3** to step **1**.

Copyright © 2006 Nokia. All rights reserved.

6 — BB Troubleshooting and Manual Tuning Guide

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Baseband troubleshooting overview....6–5
Power and charging troubleshooting....6–6
General power checking troubleshooting....6–6
Battery current measuring fault troubleshooting....6–7
Clocking troubleshooting....6–8
Interface troubleshooting....6–9
Camera failure....6–9
Introduction to camera troubleshooting....6–9
Taking and evaluating test pictures....6–9
Camera hardware failure message troubleshooting....6–10
Camera hardware troubleshooting....6–11
Camera viewfinder troubleshooting....6–12
Camera: Bad image quality troubleshooting....6–13
COMBO memory troubleshooting....6–14
Flash programming fault troubleshooting....6–15
SD card troubleshooting....6–17
User interface troubleshooting....6–18
Display module troubleshooting....6–18
General instructions for display troubleshooting....6–18
Display troubleshooting....6–20
Backlight troubleshooting....6–21
LED driver troubleshooting....6–22
Swivel detection troubleshooting....6–23
Audio troubleshooting....6–23
Audio troubleshooting test instructions....6–23
Internal earpiece troubleshooting....6–27
Internal microphone troubleshooting....6–28
IHF troubleshooting....6–29
External microphone troubleshooting....6–30
External earpiece troubleshooting....6–31
Introduction to acoustics troubleshooting....6–32
Earpiece troubleshooting....6–33
IHF troubleshooting....6–34
Microphone troubleshooting....6–35
Bluetooth troubleshooting....6–36
Introduction to Bluetooth troubleshooting....6–36
Bluetooth settings for Phoenix....6–36
Bluetooth self tests in Phoenix....6–37
Bluetooth BER failure troubleshooting....6–38
Bluetooth audio and UI activation troubleshooting....6–41
Baseband manual tuning guide....6–41
Certificate restoring for BB5 products....6–41
Energy management calibration....6–47

List of Tables

Table 10 Display module troubleshooting cases....6–18
Table 11 Pixel defects....6–18
Table 12 Calibration value limits....6–47

Copyright © 2006 Nokia. All rights reserved.

List of Figures

Figure 38 Flashing pic 1. Take single trig measurement for the rise of the BSI signal.....6–16
Figure 39 Flashing pic 2. Take single trig measurement for the rise of the BSI signal.....6–16
Figure 40 Single-ended output waveform of the Ext_in_HP_out measurement when earpiece is connected.....6–26
Figure 41 Differential output waveform of the Ext_in_IHF_out out loop measurement when speaker is connected.....6–26
Figure 42 Single-ended output waveform of the HP_in_Ext_out loop when microphone is connected.... 6–26
Figure 43 BER test result.....6–37
Figure 44 Bluetooth self tests in Phoenix.....6–38

Copyright © 2006 Nokia. All rights reserved.

Baseband troubleshooting overview

This section is intended to be a guide for localising and repairing electrical faults.

The table below tells you what troubleshooting to go to.

Problem	Troubleshooting
Phone does not stay on or is jammed	1 Dead or jammed phone 2 Power key
Abnormal current consumption	1 General power checking 2 Battery current measuring fault
Flashing does not work or the problem is not clearly defined	1 Flashing 2 Clocking 3 Combo memory
Charging does not work	1 Charging
Display does not work	1 Display fault
Keypad does not work	1 Keypad
Backlights do not work	1 Display and keyboard backlight 2 LED driver
Phone does not read SIM card	1 SIM
µSD card (MMC) does not work	1 µSD
USB does not work	1 USB
Audio (mic, earpiece, IHF) does not work	1 Audio 2 Acoustics
Camera does not work	1 Camera hardware failure message 2 Camera baseband hardware 3 Camera viewfinder 4 Bad image quality
Swivel detection	1 Swivel detection troubleshooting
Camera flash LED does not work	1 Flash LED
Bluetooth does not work	1 Bluetooth (BT)
FM radio does not work	1 FM radio

Copyright © 2006 Nokia. All rights reserved.

Power and charging troubleshooting

General power checking troubleshooting

Troubleshooting flow

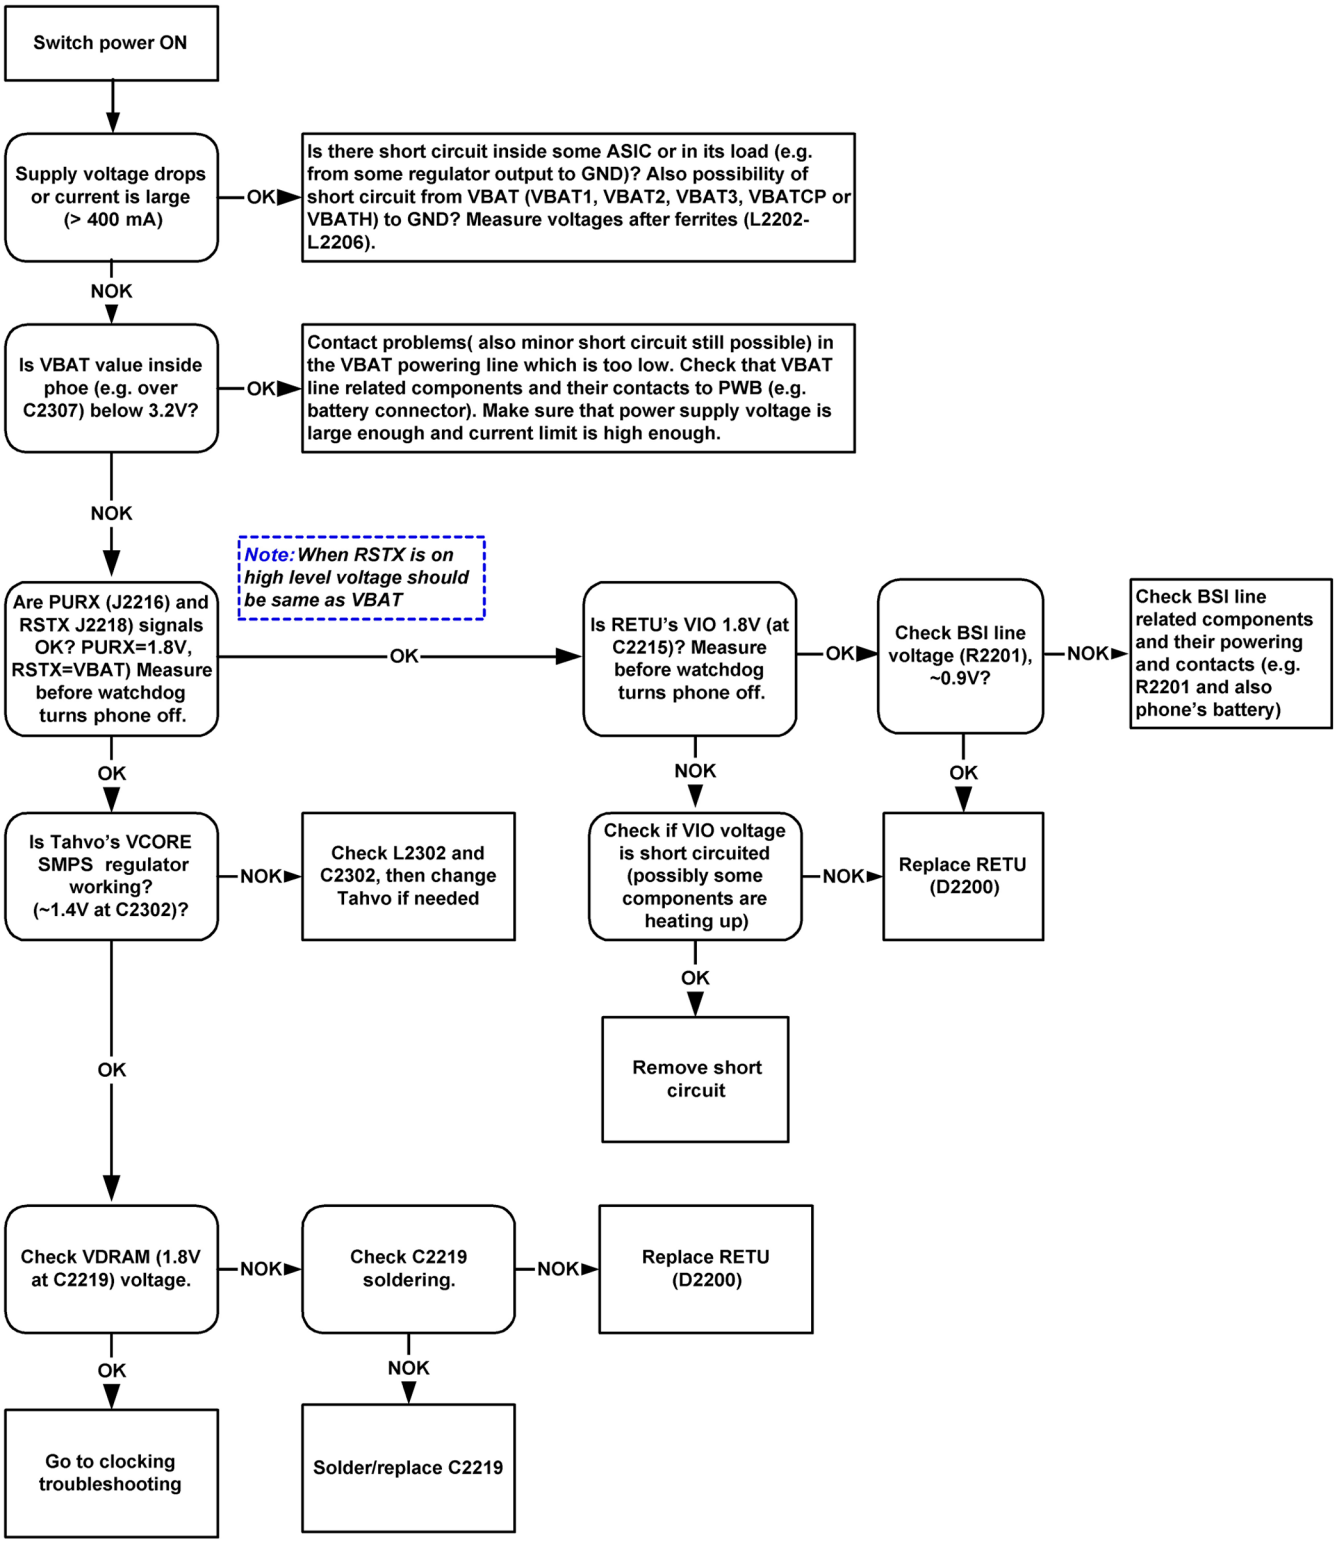

Copyright © 2006 Nokia. All rights reserved.

Battery current measuring fault troubleshooting

Troubleshooting flow

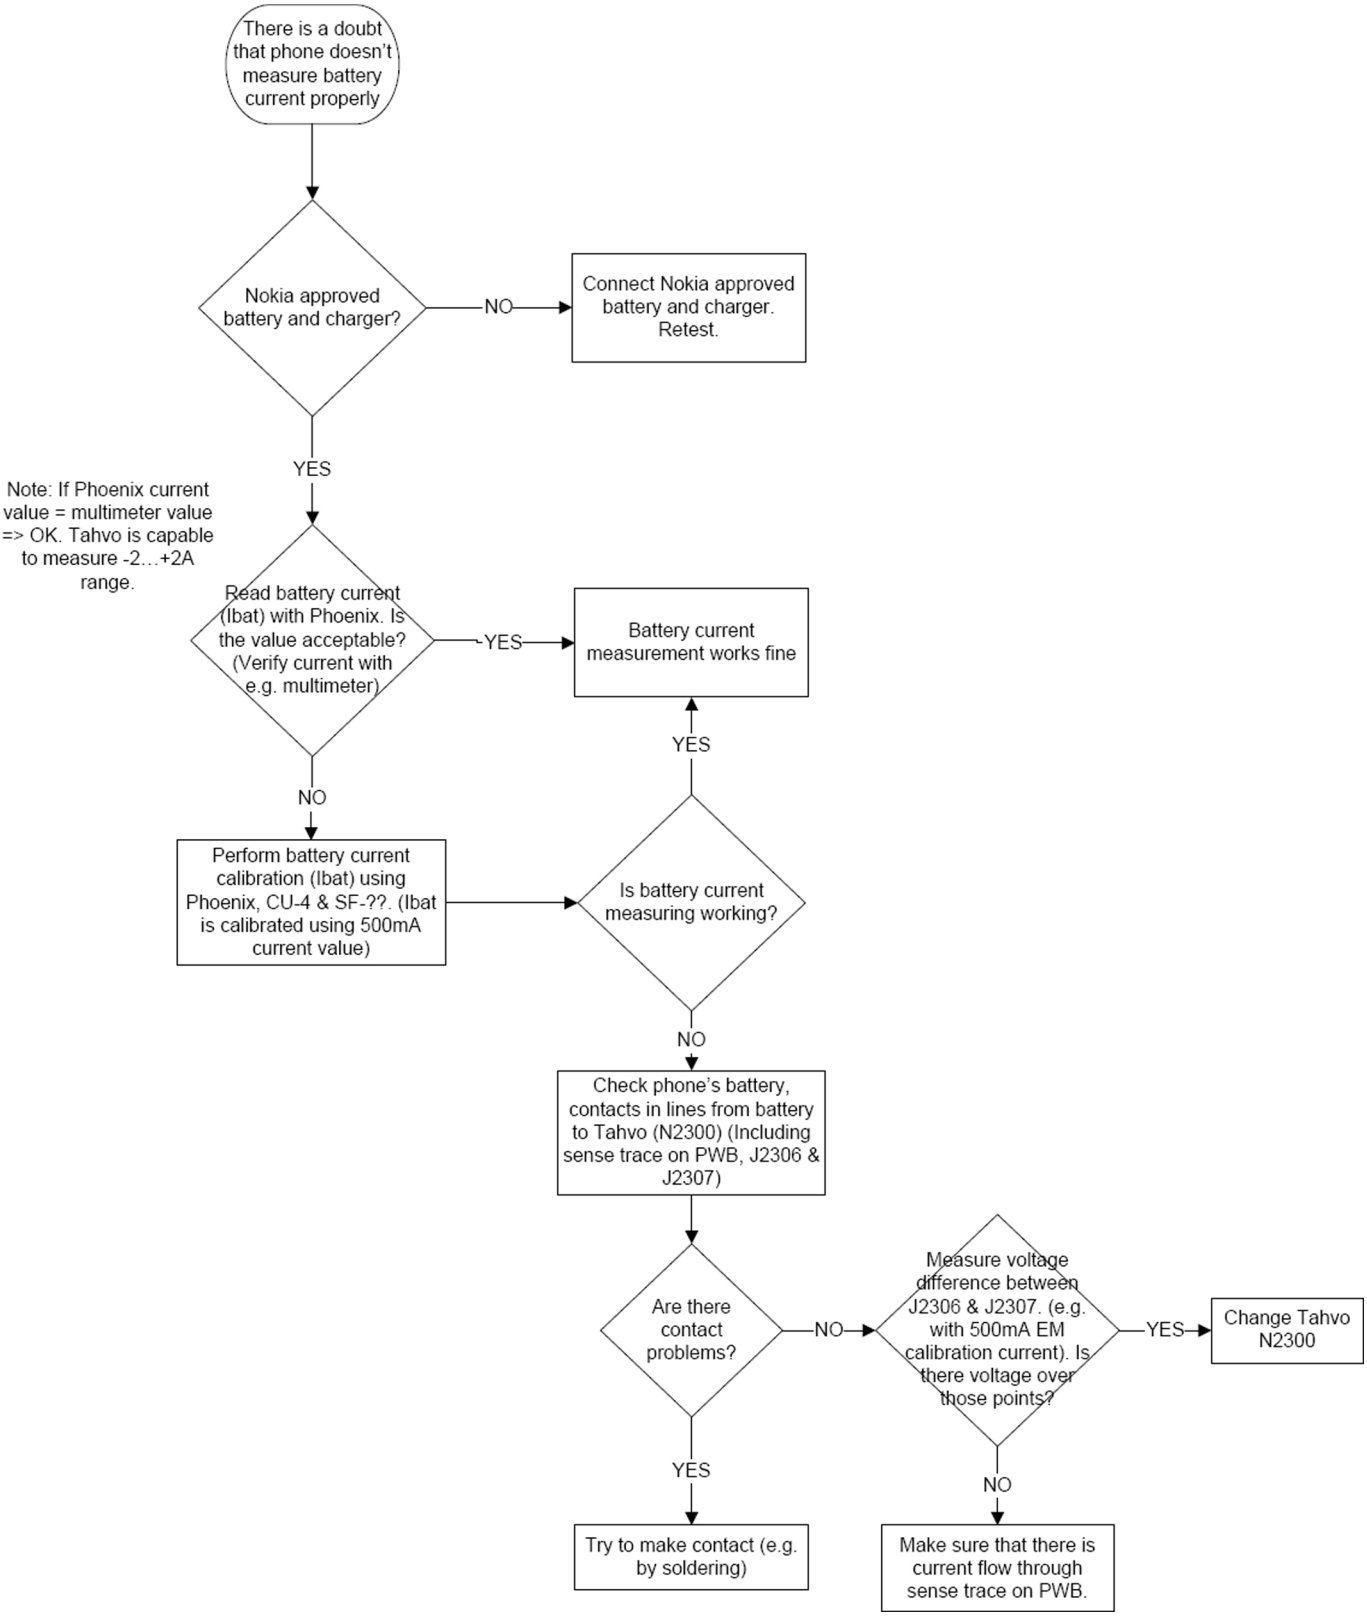

Copyright © 2006 Nokia. All rights reserved.

Clocking troubleshooting

Troubleshooting flow

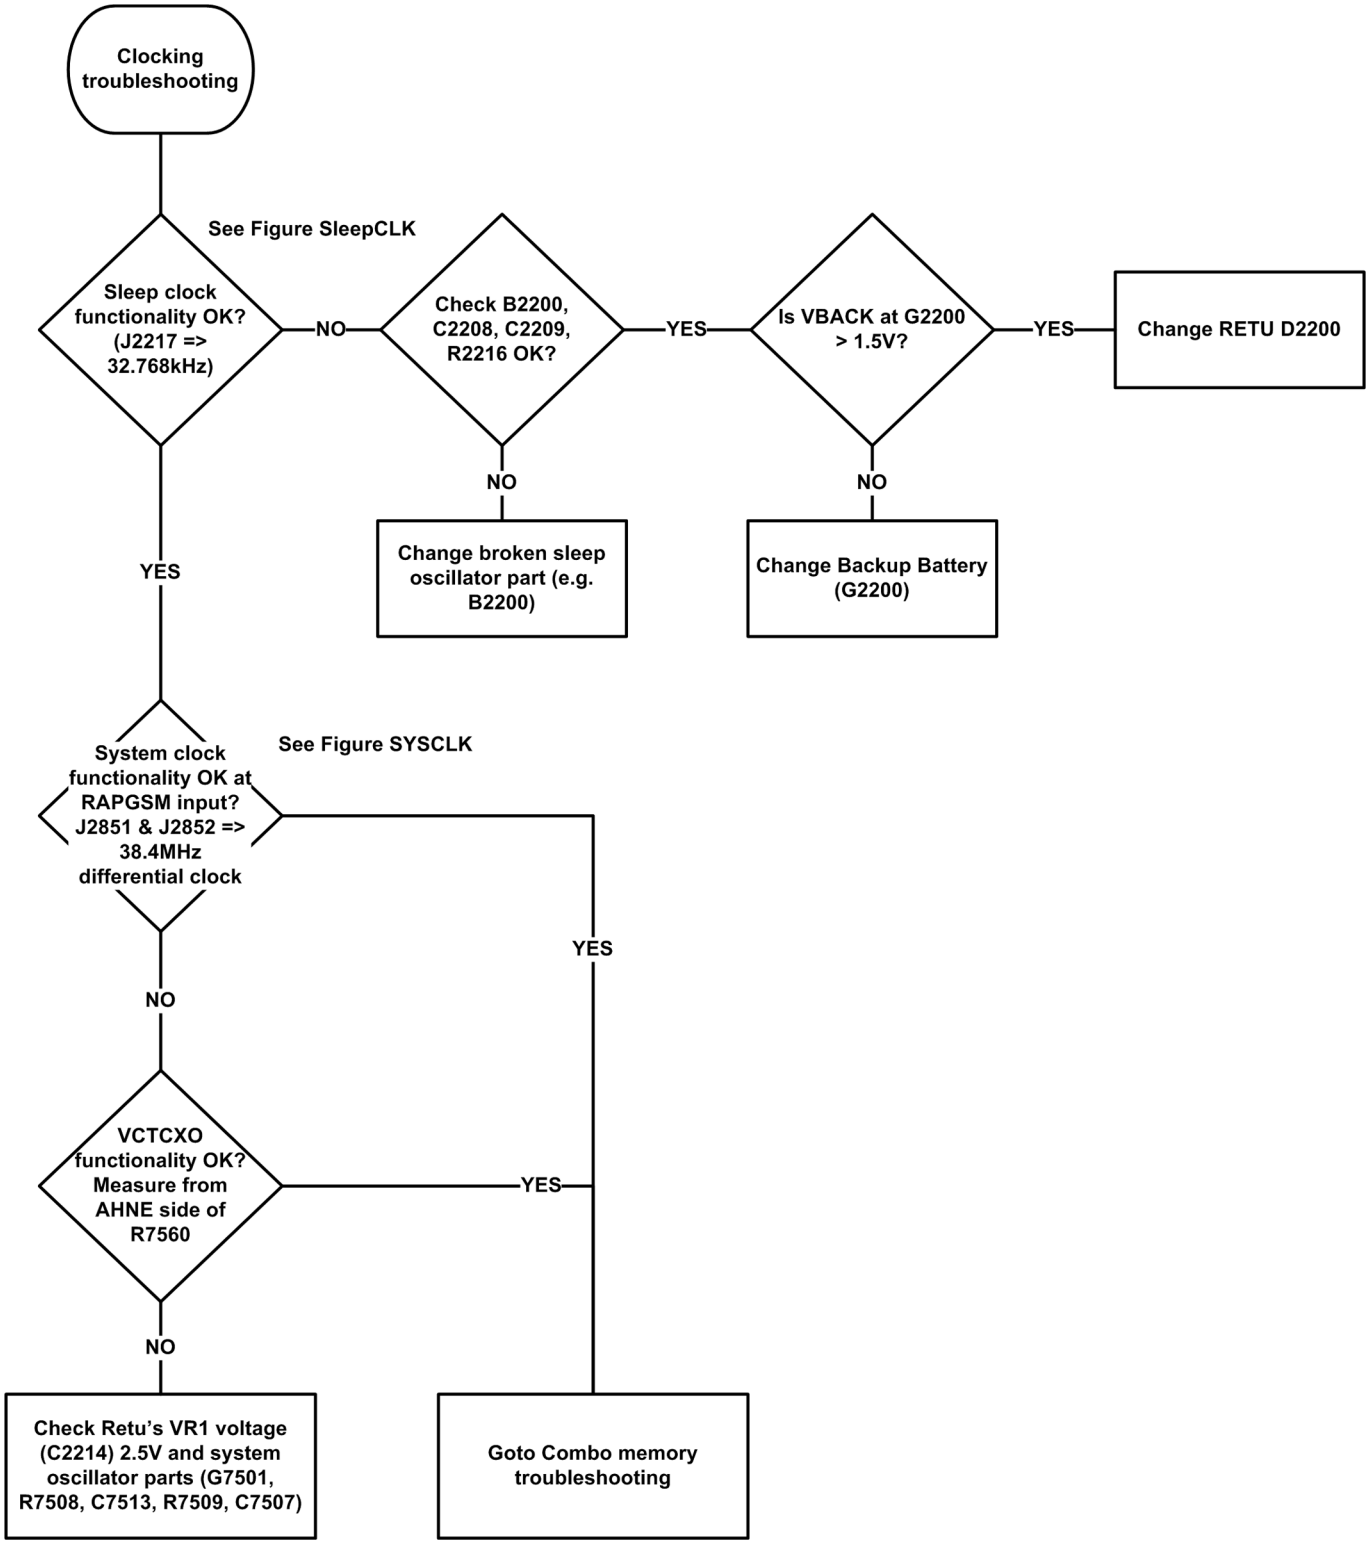

Copyright © 2006 Nokia. All rights reserved.

Interface troubleshooting

Camera failure

Introduction to camera troubleshooting

Bad conditions often cause bad pictures. Therefore, the camera operation has to be checked in constant conditions or by using a second, known-to-be-good Nokia device as reference. Image quality is hard to measure quantitatively, and the difference between a good and a bad picture can be small. Some training or experience may be needed to detect what is actually wrong.

When checking for possible errors in camera functionality, knowing what error is suspected significantly helps the testing by narrowing down the amount of test cases. The following types of image quality problems are common:

- Dust (black spots)
- Lack of sharpness
- Bit errors

Taking and evaluating test pictures

When *taking* a test picture, remember the following:

- Avoid bright fluorescent light, 50/60Hz electrical network or high artificial illumination levels
- If the phone is hot, let it rest for a while before taking the picture
- Make sure the optical system is clean
- Use highest possible resolution
- Make sure the light is suffiecient (bright office lightning)
- Do not take the picture towards light source
- Be as still as possible when taking the picture
- Distance should be at least 40cm, 1-2m is recommended

When *evaluating* a test picture, remember the following:

- The center of the picture is sharper than the edges
- The image may be blurred, though it does not show in the viewfinder
- Analyse the picture from your PC monitor, full colour setting is recommended
- If possible, compare with a picture of the same motive taken with a similar Nokia device

Copyright © 2006 Nokia. All rights reserved.

Camera hardware failure message troubleshooting

Troubleshooting flow

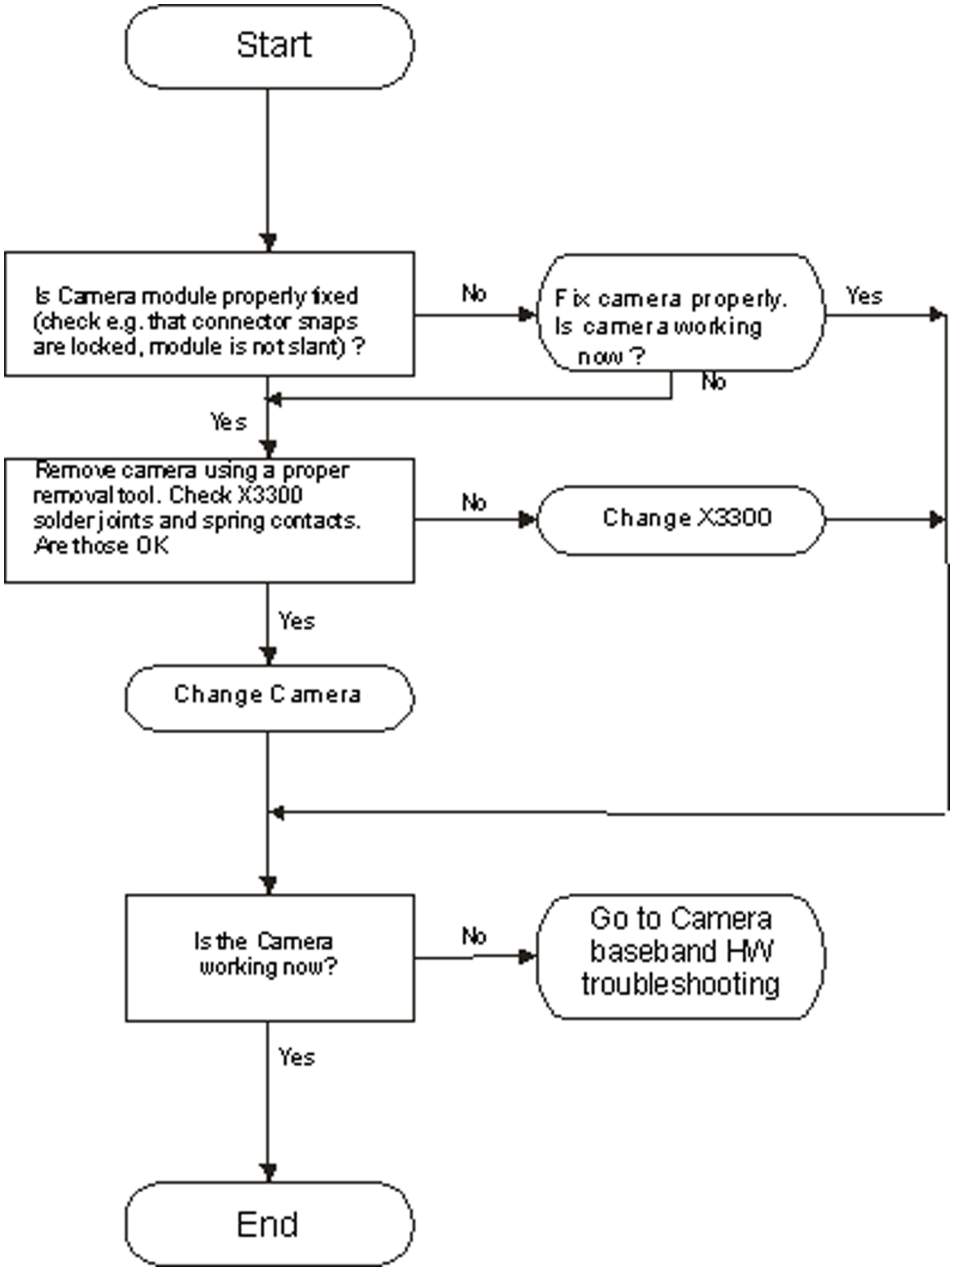

Copyright © 2006 Nokia. All rights reserved.

Camera hardware troubleshooting

Camera hardware troubleshooting

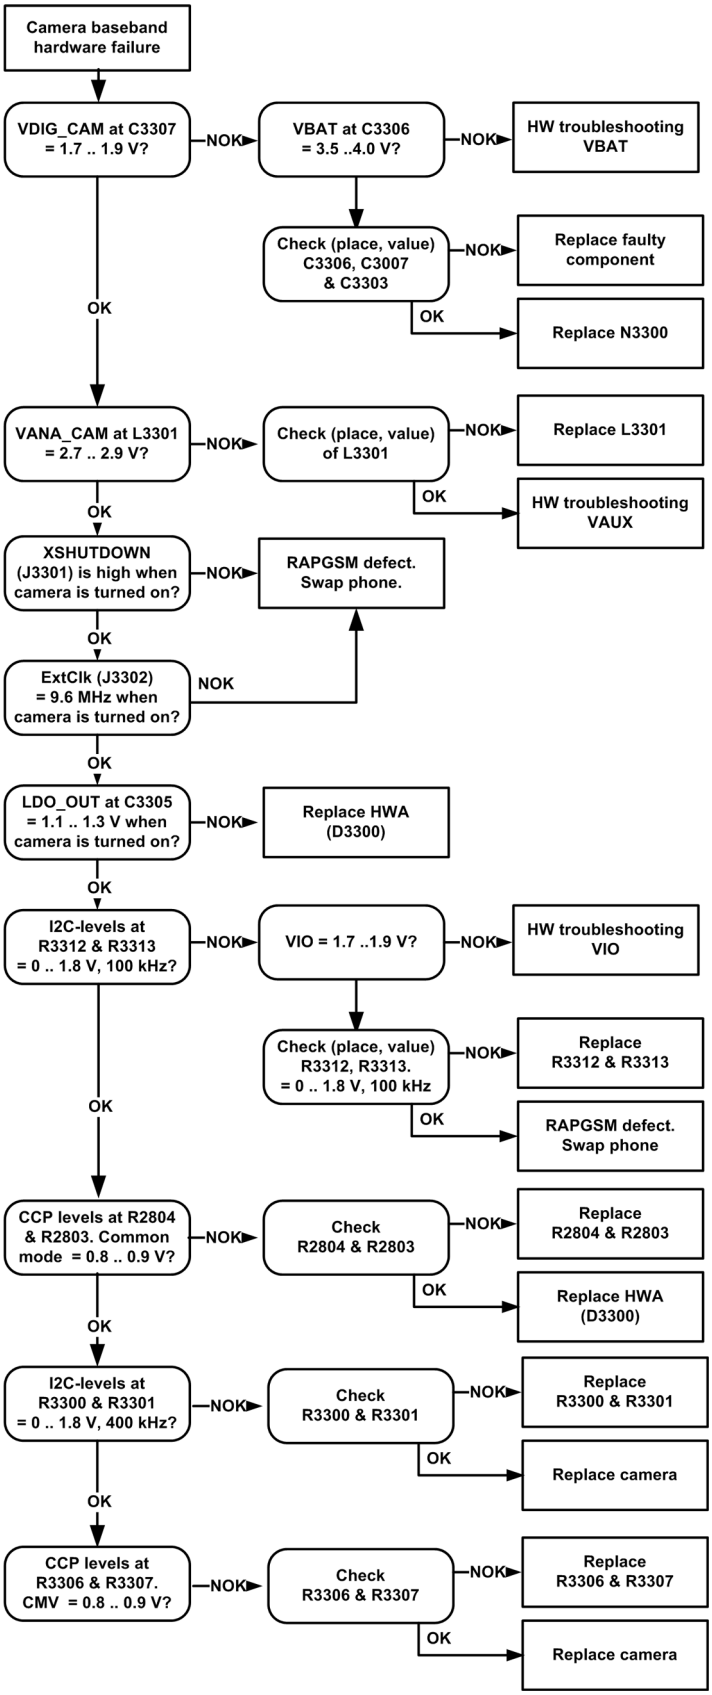

Copyright © 2006 Nokia. All rights reserved.

Camera viewfinder troubleshooting

Troubleshooting flow

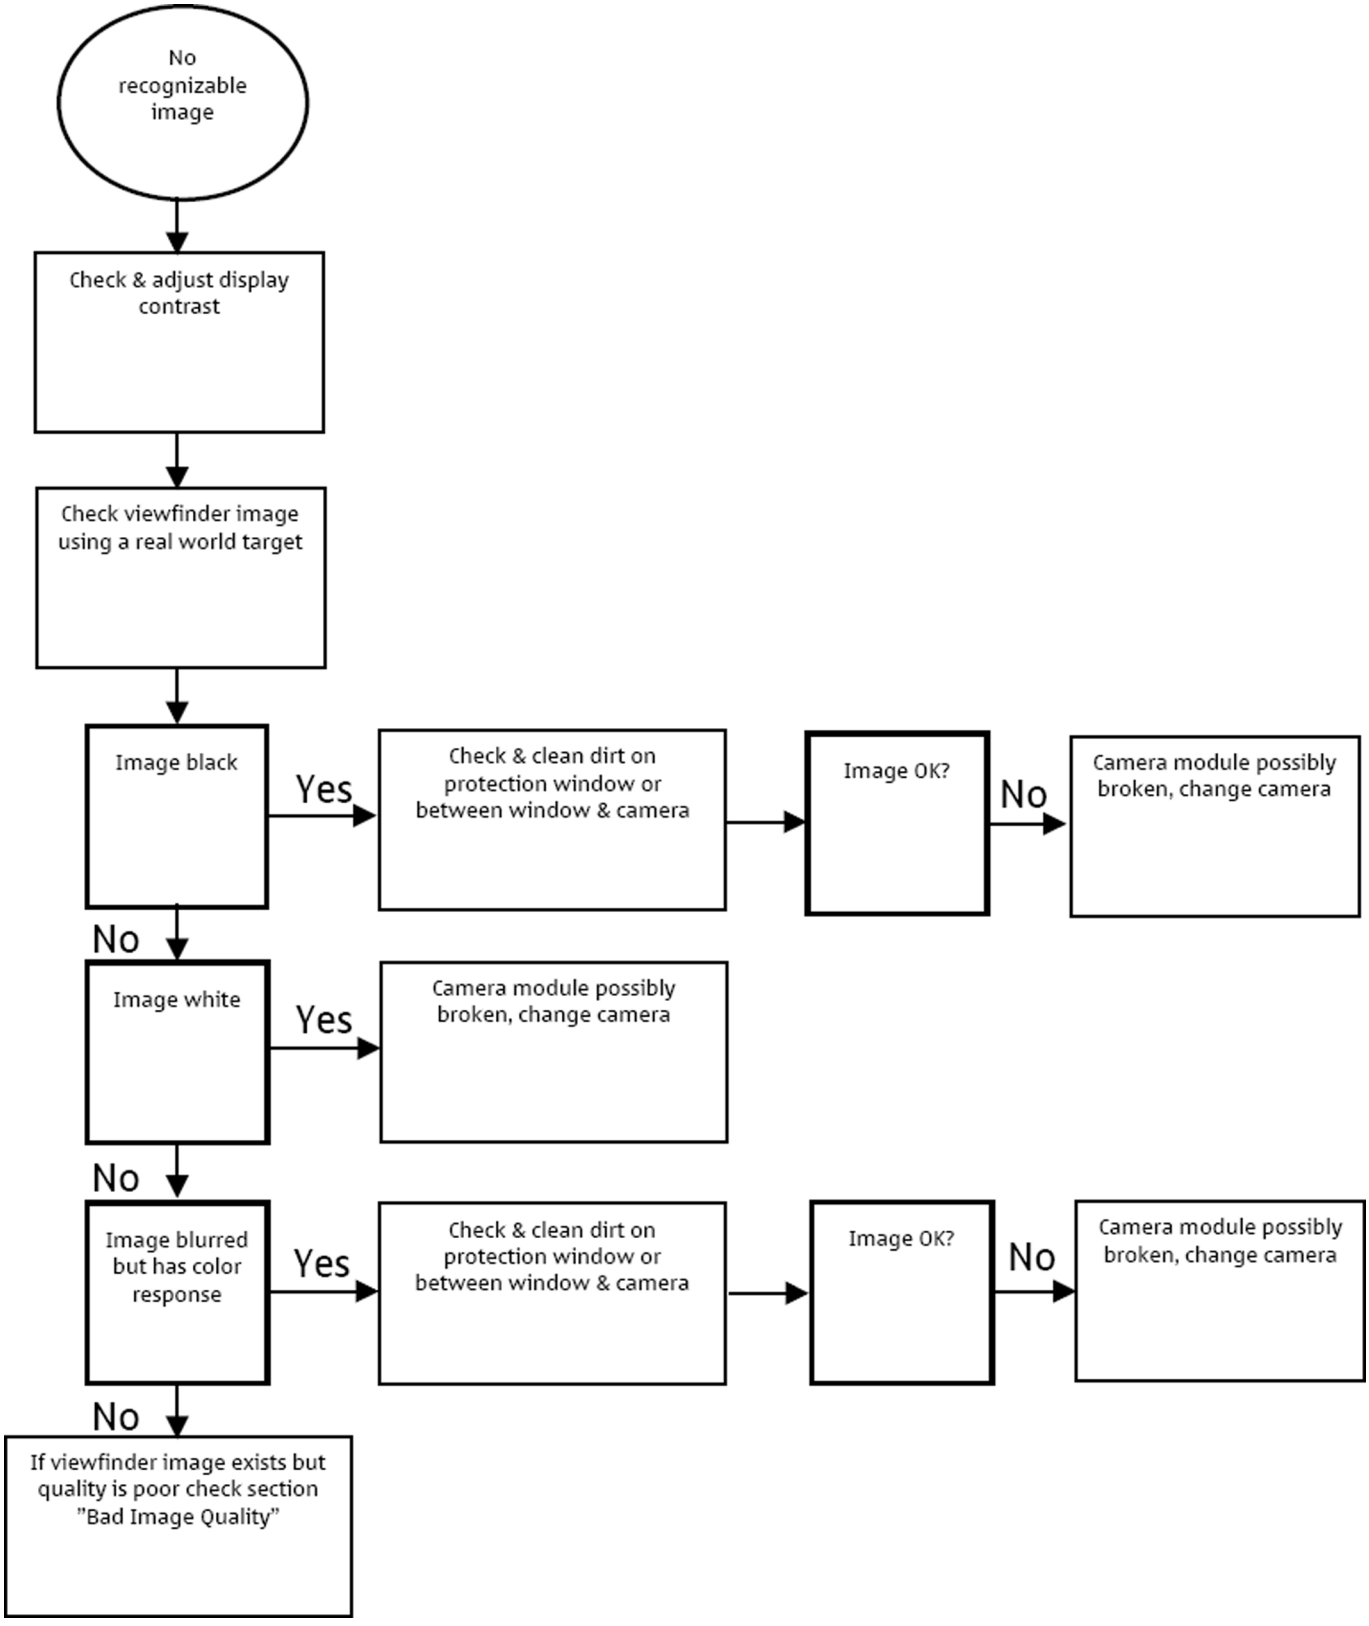

Copyright © 2006 Nokia. All rights reserved.

Camera: Bad image quality troubleshooting

Troubleshooting flow

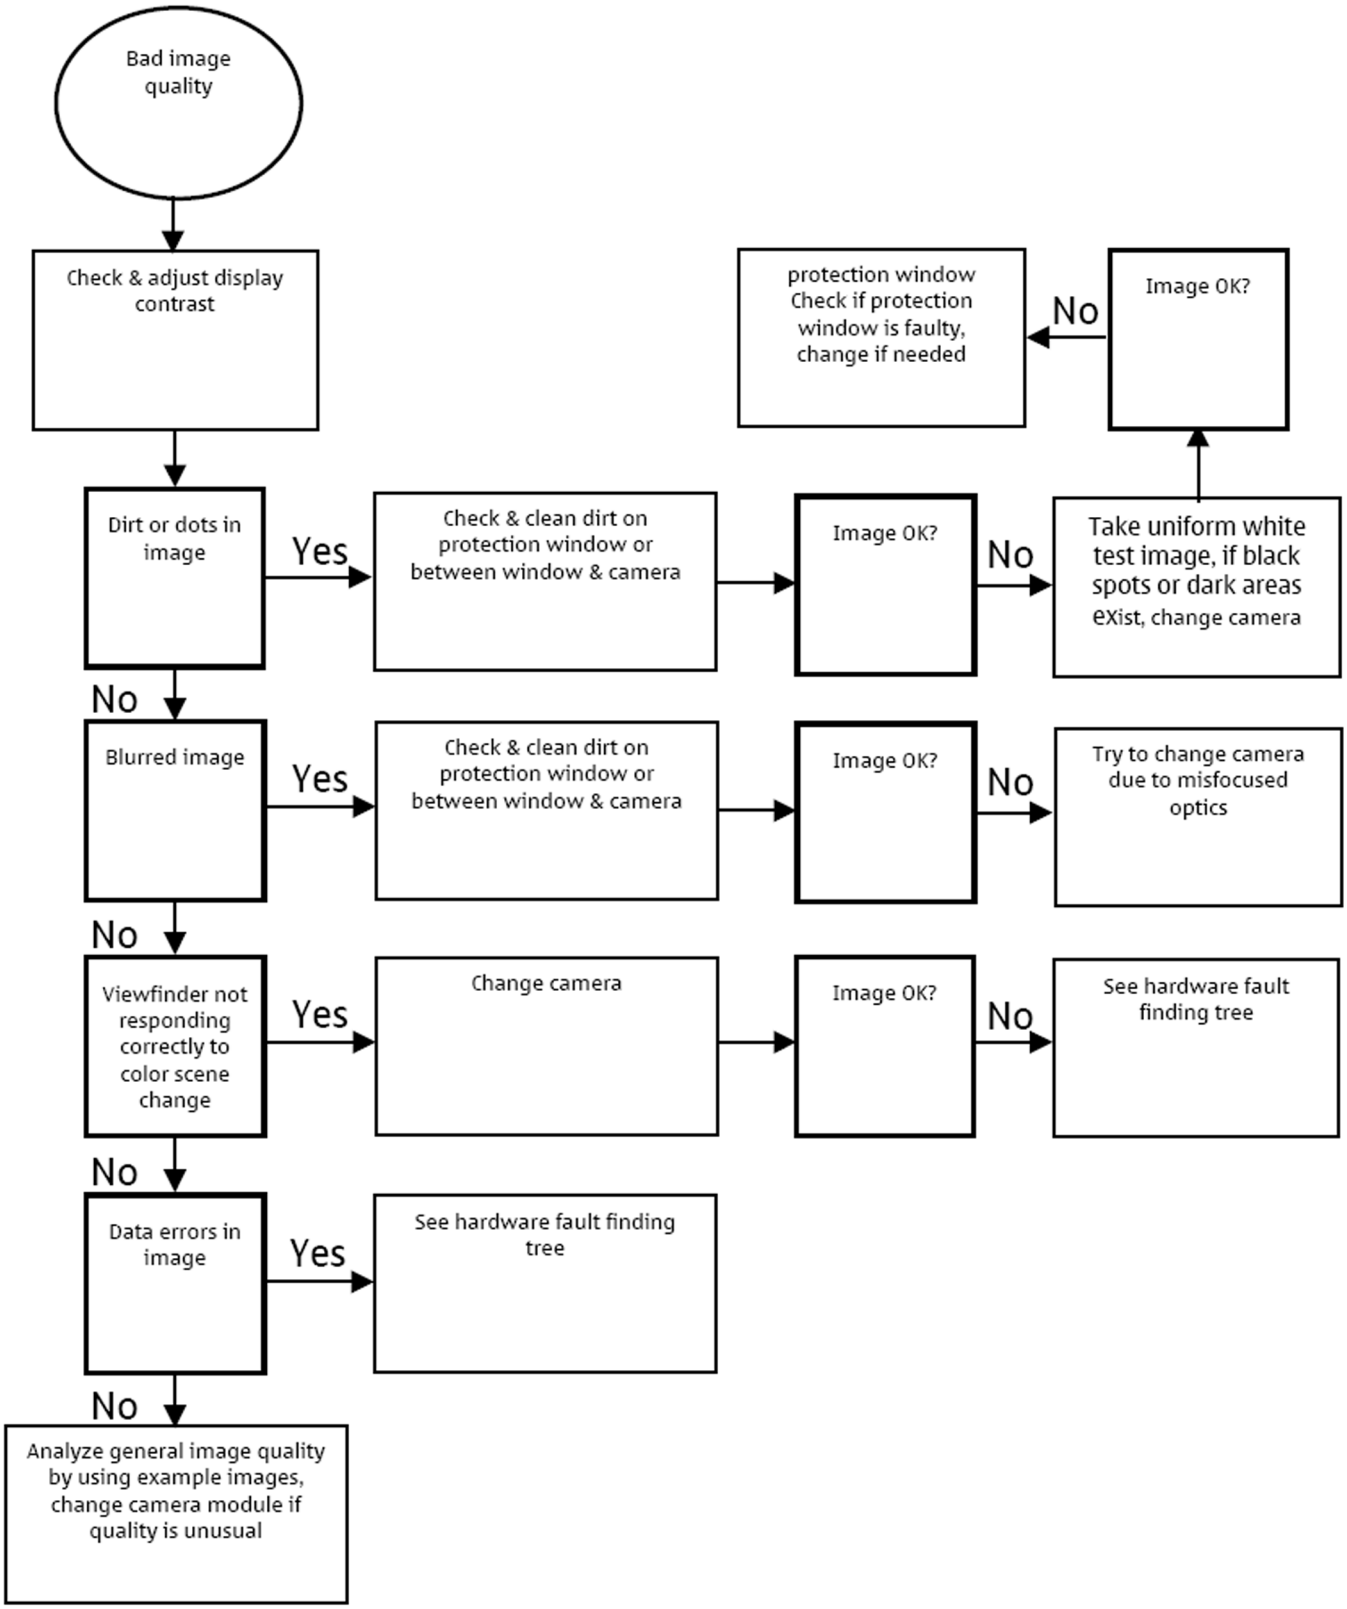

Copyright © 2006 Nokia. All rights reserved.

COMBO memory troubleshooting

Troubleshooting flow

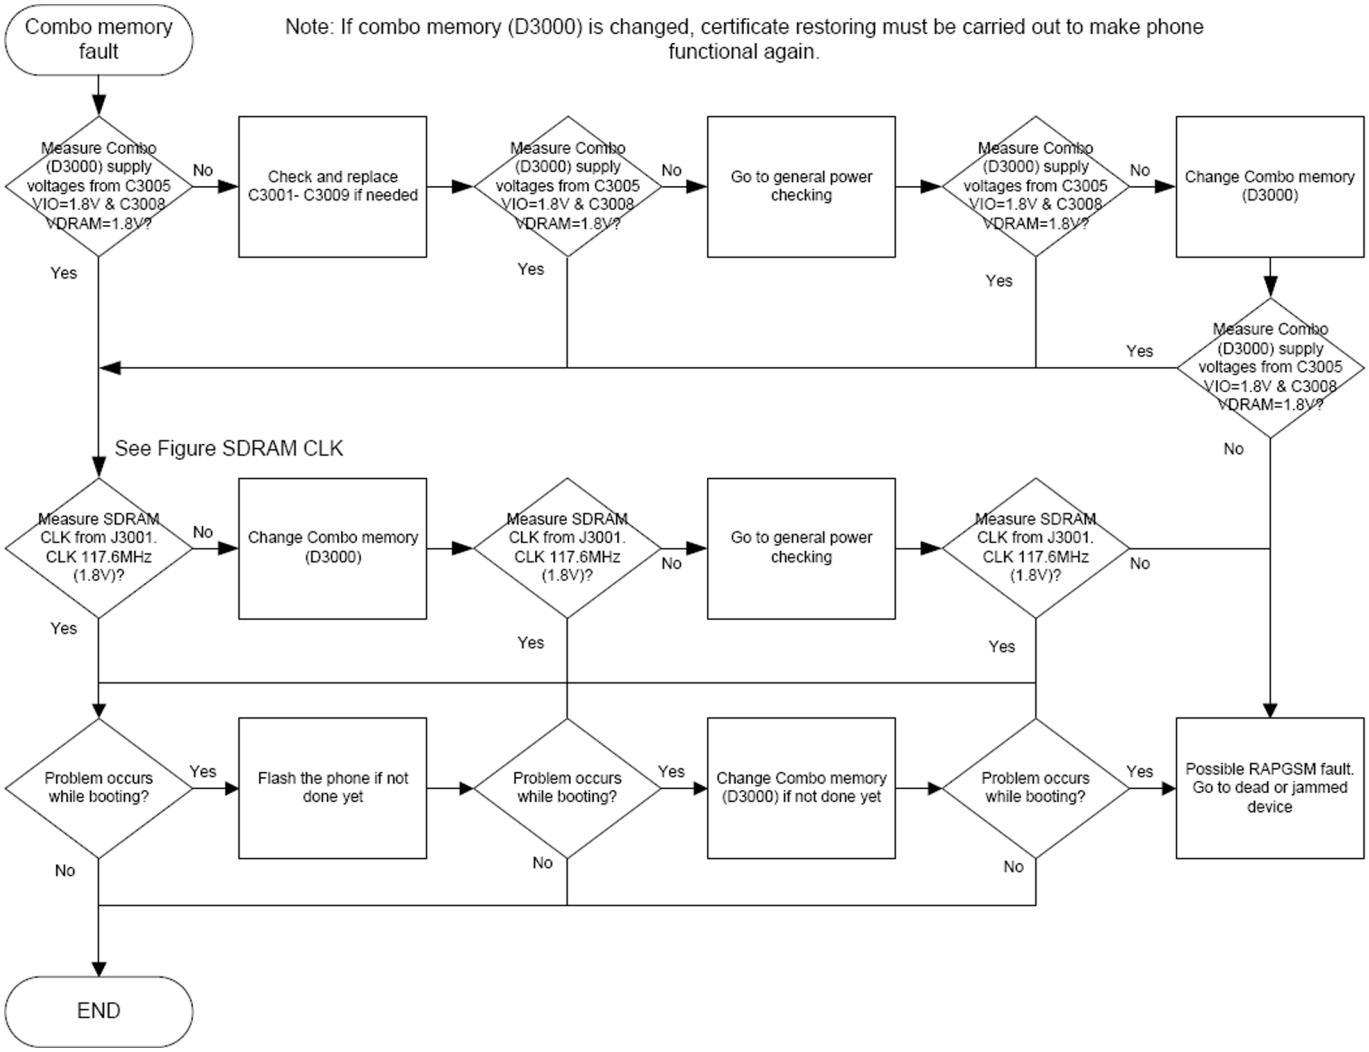

Copyright © 2006 Nokia. All rights reserved.

Flash programming fault troubleshooting

Part 1

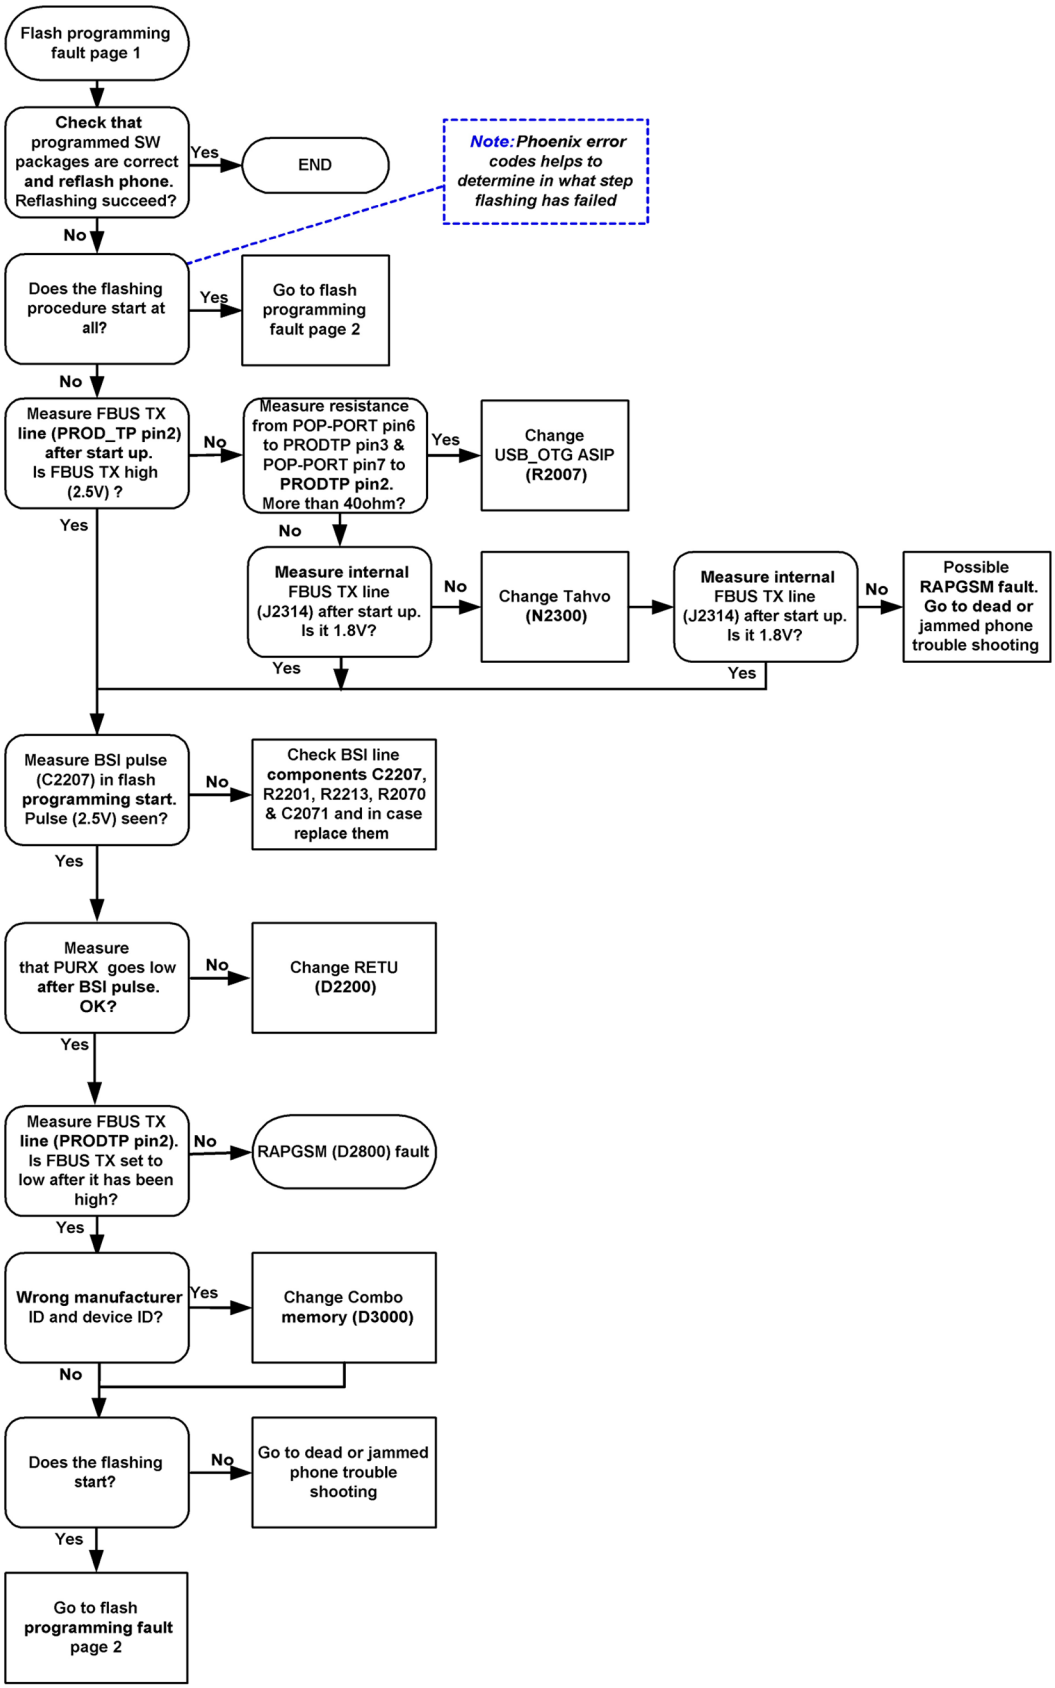

Copyright © 2006 Nokia. All rights reserved.

Part 2

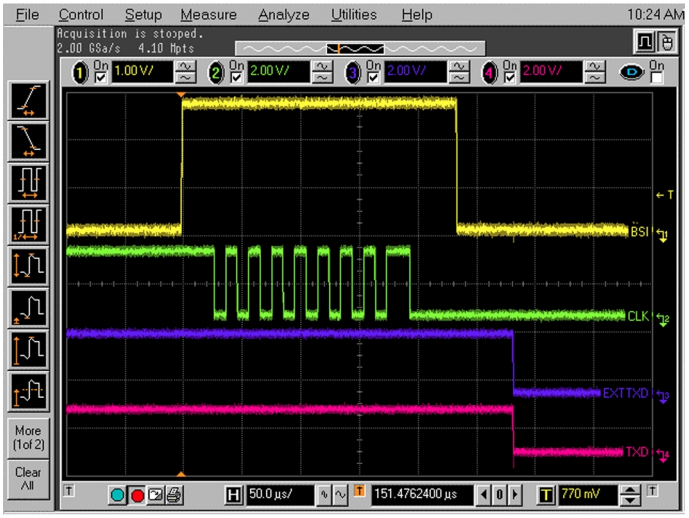

Figure 38 Flashing pic 1. Take single trig measurement for the rise of the BSI signal.

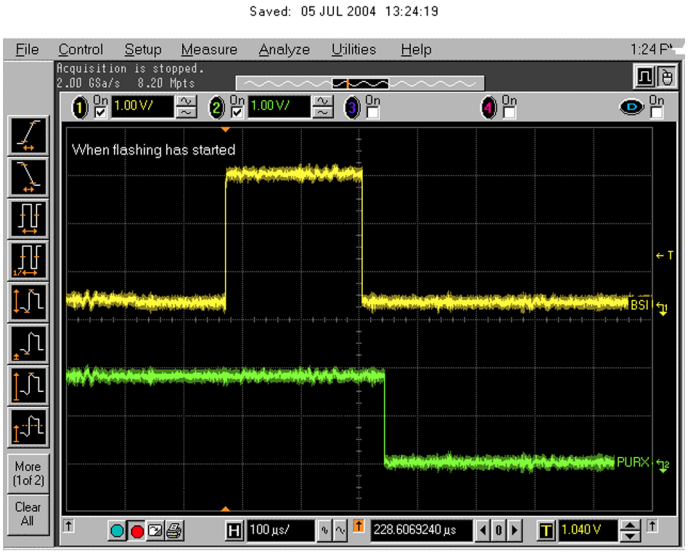

Figure 39 Flashing pic 2. Take single trig measurement for the rise of the BSI signal.

Copyright © 2006 Nokia. All rights reserved.

SD card troubleshooting

Troubleshooting flow

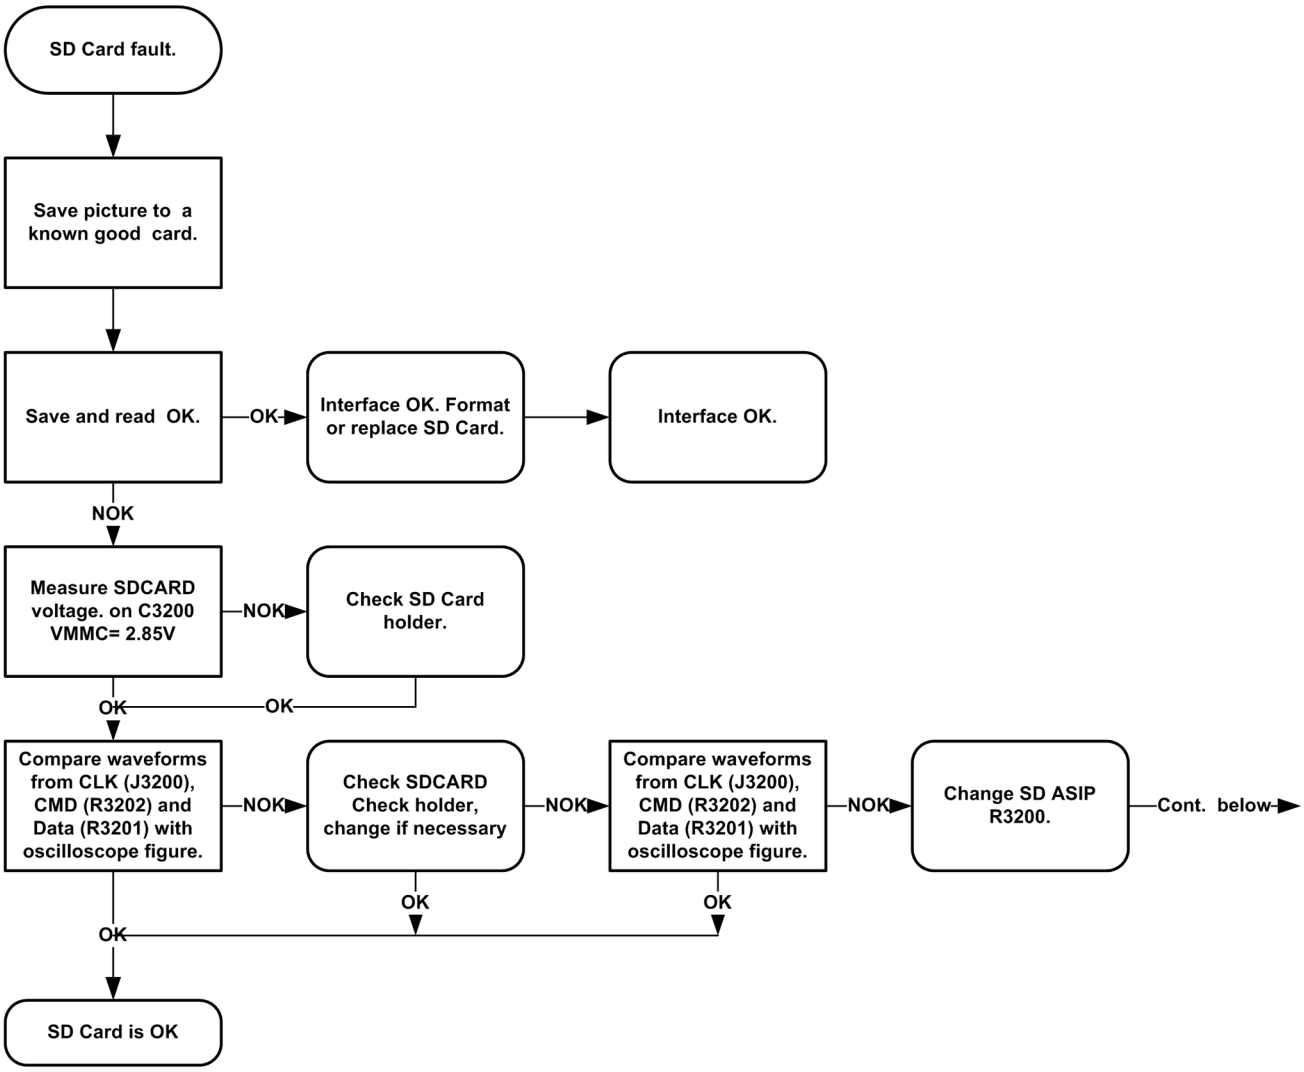

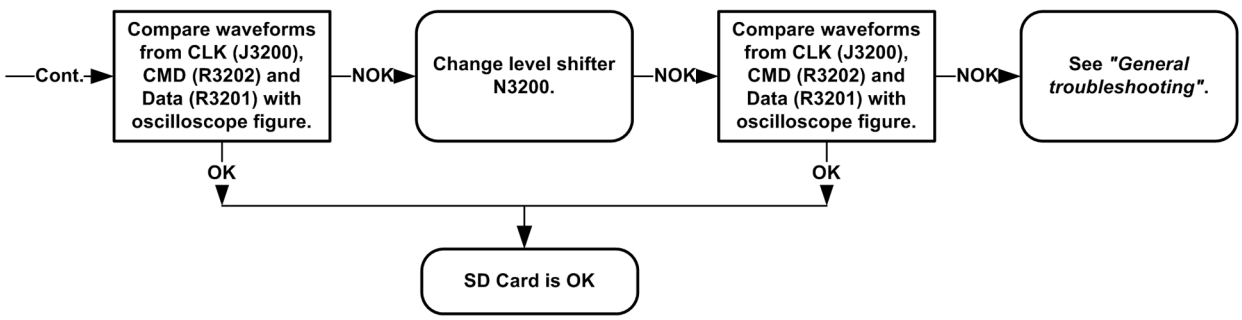

Copyright © 2006 Nokia. All rights reserved.

User interface troubleshooting

Display module troubleshooting

General instructions for display troubleshooting

Context

- The display is in a normal mode when the phone is in active use.
- Display is in a partial idle mode when the phone is in the screen saver mode.
- The operating modes of the display can be controlled with the help of *Phoenix*.

Table 10 Display module troubleshooting cases

Display blank	There is no image on the display. The display looks the same when the phone is on as it does when the phone is off. The backlight can be on in some cases.
Image on the display not correct	Image on the display can be corrupted or a part of the image can be missing. If a part of the image is missing, change the display module. If the image is otherwise corrupted, follow the appropriate troubleshooting diagram.
Backlight dim or not working at all	Backlight LED components are inside the display module. Backlight failure can also be in the connector or in the backlight power source in the main engine of the phone. This means that in case the display is working (image OK), the backlight is faulty.
Visual defects (pixel)	Pixel defects can be checked by controlling the display with Phoenix. Use both colours, black and white, on a full screen. The display may have some random pixel defects that are acceptable for this type of display. The criteria when pixel defects are regarded as a display failure, resulting in a replacement of the display, are presented the following table.

Table 11 Pixel defects

Item		White dot defect				Black dot defect	Total
1	Defect counts	R	G	B	White Dot Total	1	1
		1	1	1	1		
2	Combined defect counts	Not allowed. Two single dot defects that are within 5 mm of each other should be interpreted as combined dot defect.					

Copyright © 2006 Nokia. All rights reserved.

Steps

1. Verify with a working display that the fault is not on the display module itself.

   The display module cannot be repaired.
2. Check that the cellular engine is working normally.
   i To check the functionality, connect the phone to a docking station.
   ii Start *Phoenix* service software.
   iii Read the phone information to check that also the application engine is functioning normally (you should be able to read the APE ID).
3. Proceed to the display troubleshooting flowcharts.

   Use the **Display Test** tool in *Phoenix* to find the detailed fault mode.

Copyright © 2006 Nokia. All rights reserved.

Display troubleshooting

Troubleshooting flow

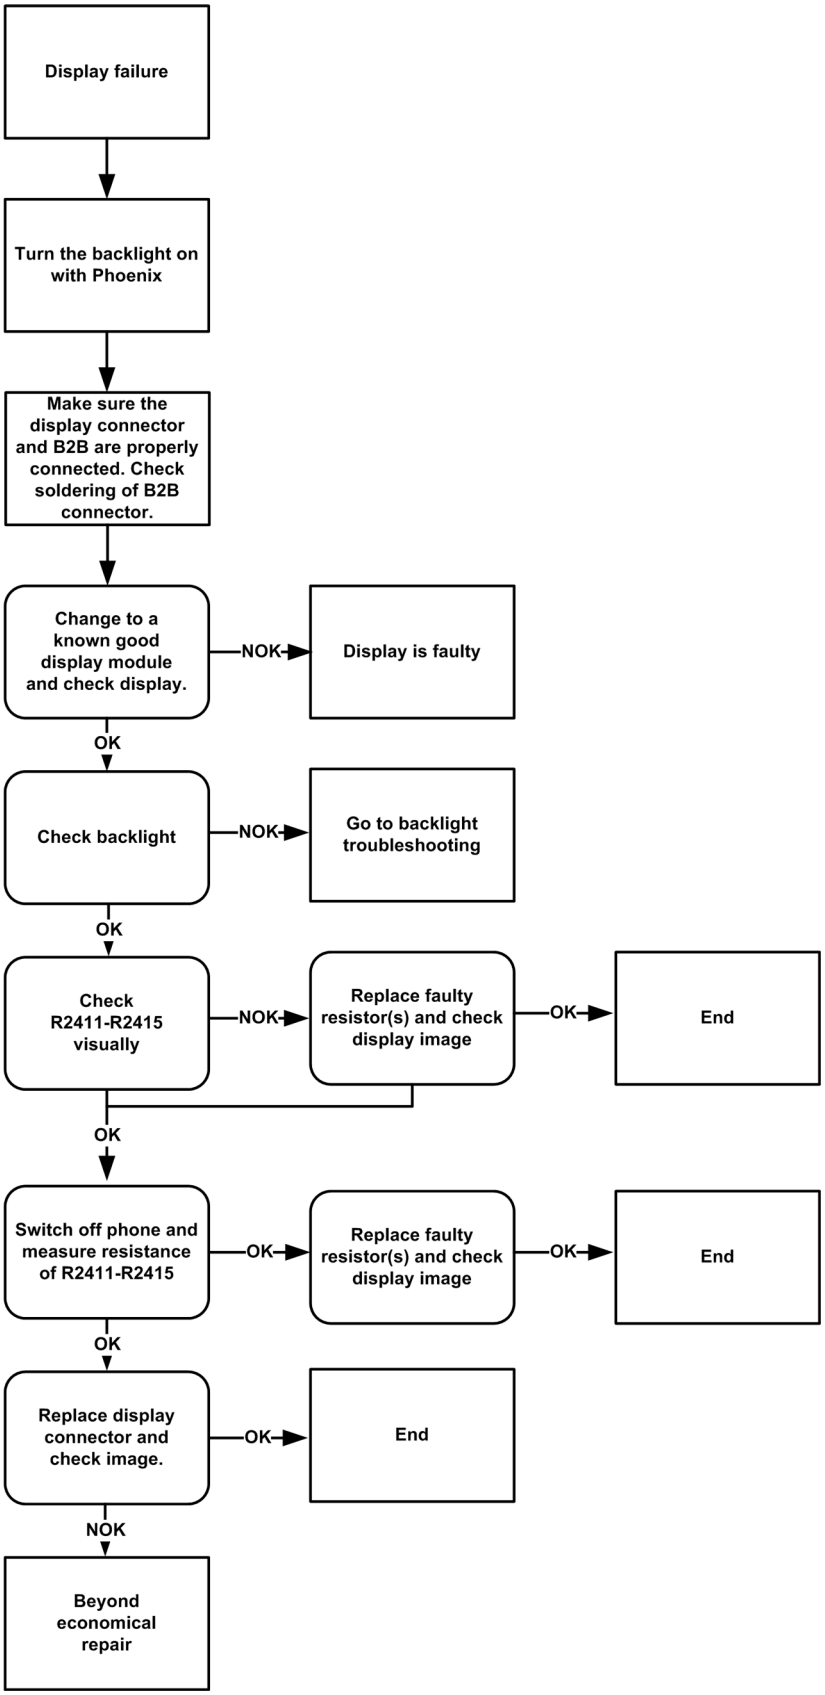

Copyright © 2006 Nokia. All rights reserved.

Backlight troubleshooting

Context

The device has one LED driver that provides current for both display and keyboard backlights. Brightness can be adjusted manually. It affects both display and keypad. Keyboard backlights can be turned ON/OFF separately but not without switching on the display lights.

Display and keyboard backlight troubleshooting

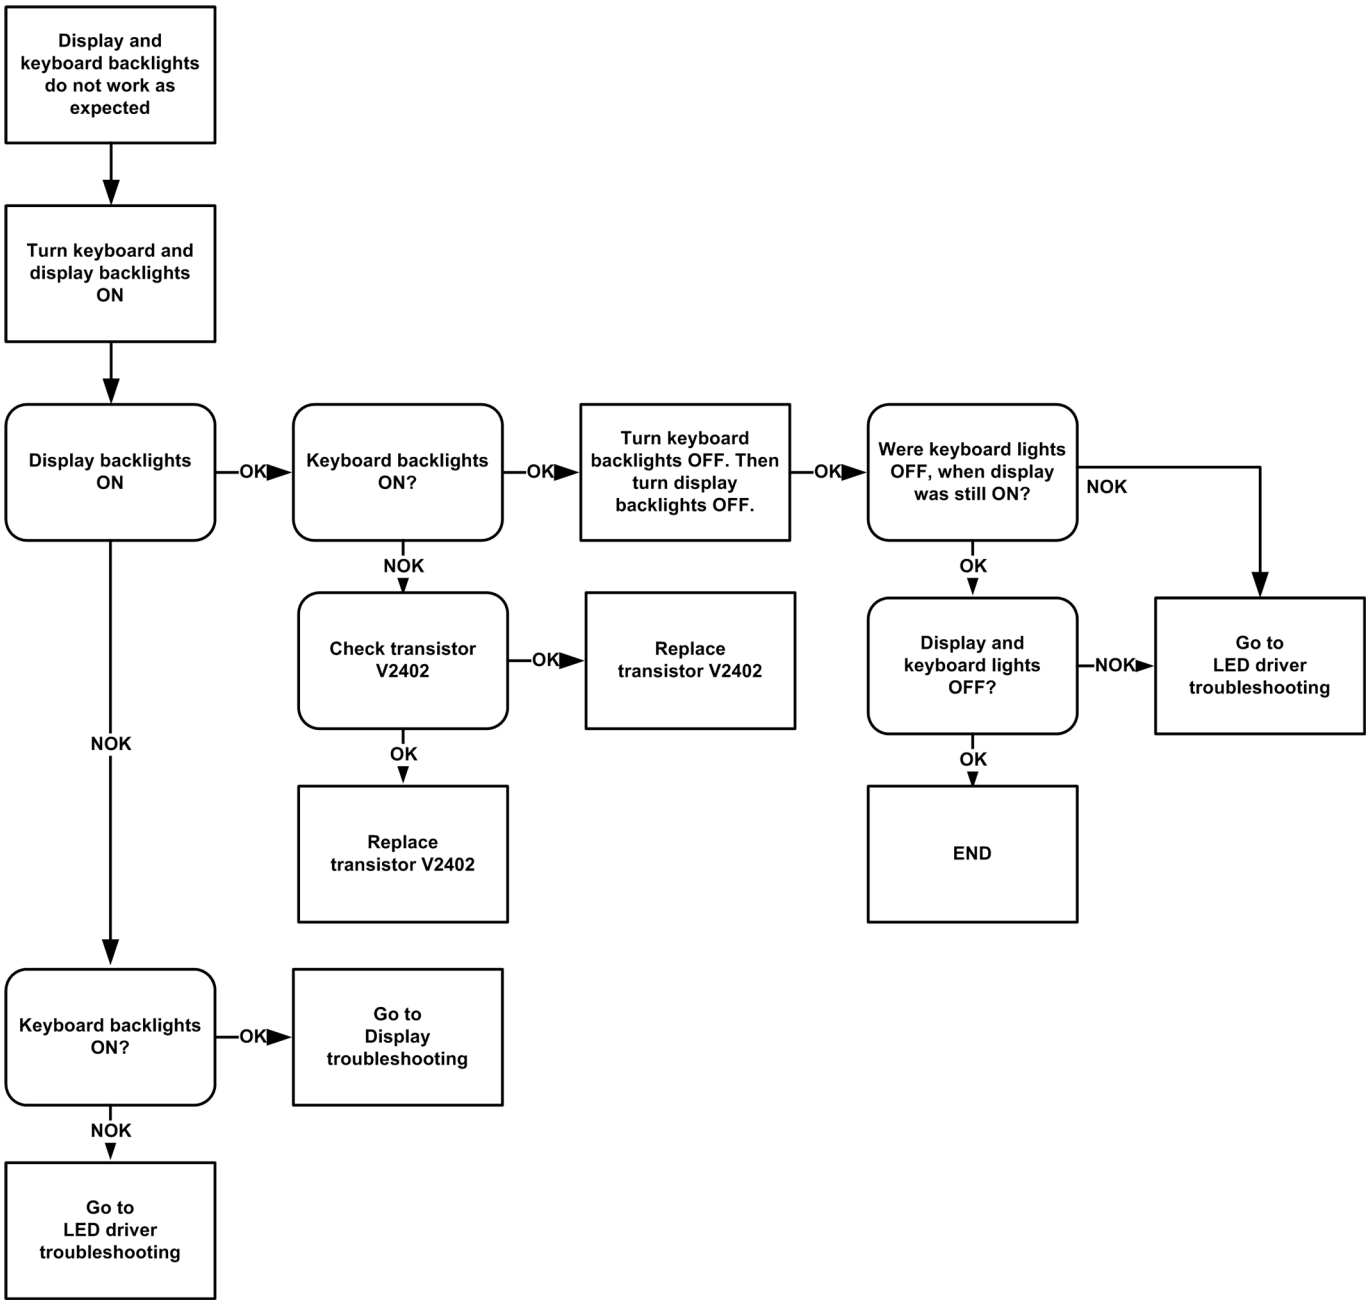

Copyright © 2006 Nokia. All rights reserved.

LED driver troubleshooting

LED driver troubleshooting

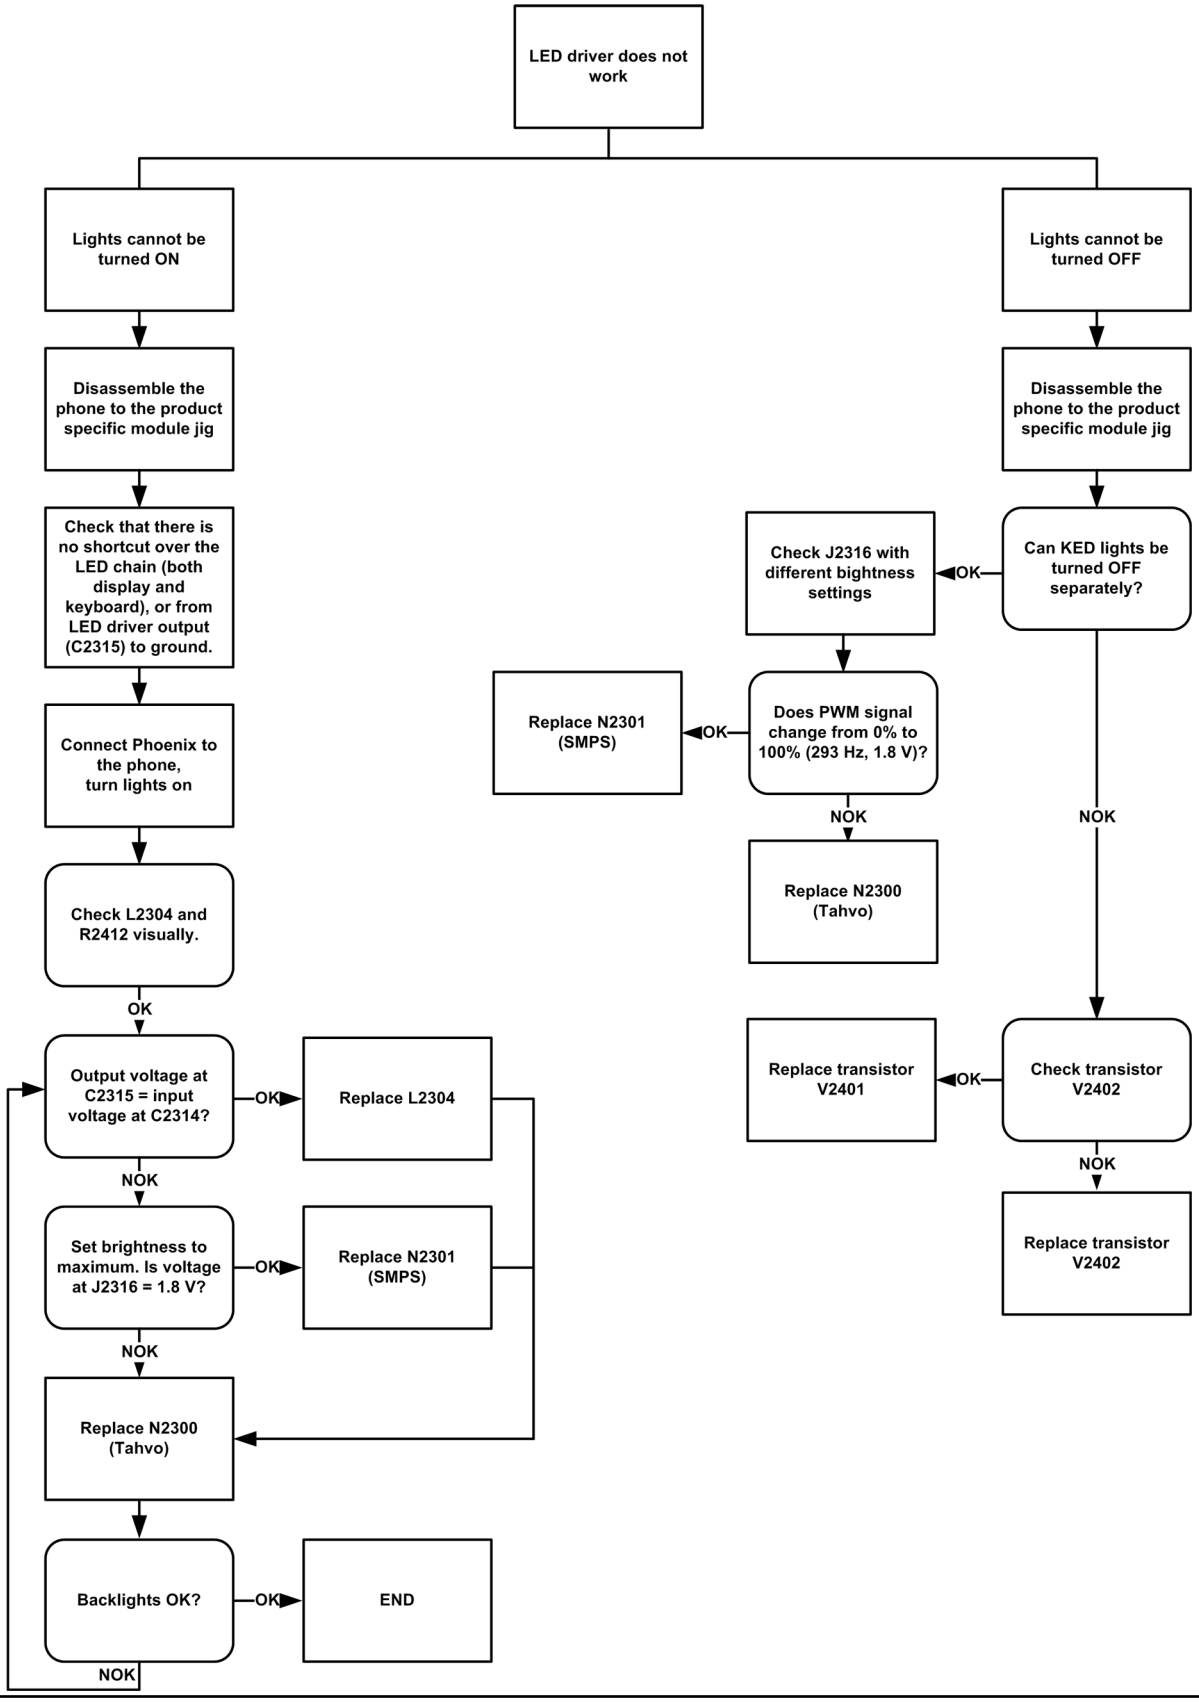

Copyright © 2006 Nokia. All rights reserved.

Swivel detection troubleshooting

Swivel detection troubleshooting

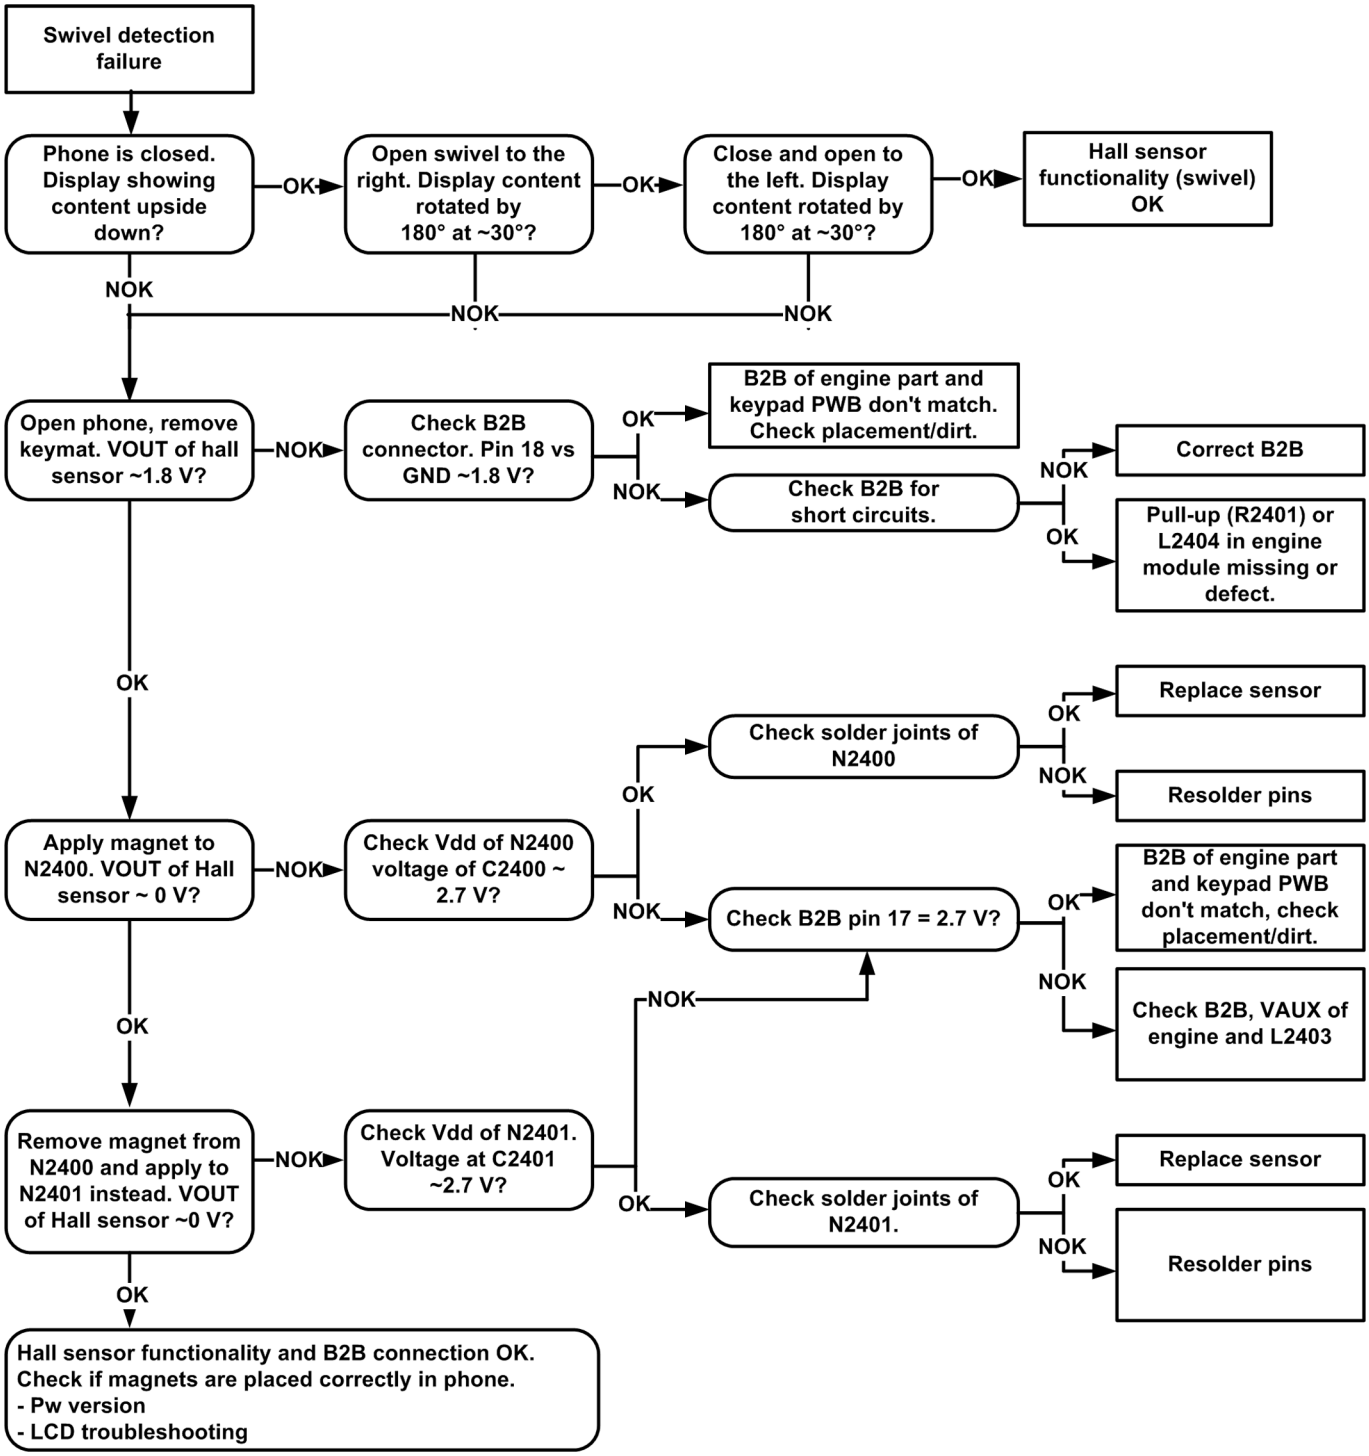

Audio troubleshooting

Audio troubleshooting test instructions

Differential external earpiece and internal earpiece outputs can be measured either with a single-ended or a differential probe.

Copyright © 2006 Nokia. All rights reserved.

When measuring with a single-ended probe each output is measured against the ground.

Internal handsfree output is measured using a current probe, if a special low-pass filter designed for measuring a digital amplifier is not available. Note also that when using a current probe, the input signal frequency must be set to 2kHz.

The input signal for each loop test can be either single-ended or differential.

Required equipment

The following equipment is needed for the tests:

- Oscilloscope
- Function generator (sine waveform)
- Current probe (Internal handsfree PWM output measurement)
- Phoenix service software
- Battery voltage 3.7V

Test procedure

Audio can be tested using the Phoenix audio routings option. Three different audio loop paths can be activated:

- External microphone to Internal earpiece
- External microphone to Internal handsfree speaker
- Internal microphone to External earpiece

Each audio loop sets routing from the specified input to the specified output enabling a quick in-out test. Loop path gains are fixed and they cannot be changed using Phoenix. Correct pins and signals for each test are presented in the following table.

Phoenix audio loop tests and test results

The results presented in the table apply when no accessory is connected and battery voltage is set to 3.7V.

Earpiece, internal microphone and speaker are in place during measurement. Applying a headset accessory during measurement causes a significant drop in measured quantities.

The gain values presented in the table apply for a differential output vs. single-ended/differential input.

Copyright © 2006 Nokia. All rights reserved.

Loop test	Input terminal	Output terminal	Path gain [dB] (fixed)	Input voltage [mVp-p]	Differential output voltage [mVp-p]	Output DC level [V]	Output current [mA]
External Mic to External Earpiece	XMICP and GND	HSEAR R P, HSEAR R N and GND	-2.9	1000	720	1.2	NA
		HSEAR P, HSEAR N and GND					
	XMICN and GND	HSEAR R P, HSEAR R N and GND					
		HSEAR P, HSEAR N and GND					
External Mic to Internal Earpiece	XMICP and GND	EarP and GND	-4.5	1000	600	1.2	NA
		EarN and GND					
	XMICN and GND	EarP and GND					
		EarN and GND					
External Mic to Internal handsfree	XMICP and GND	B2102 pads	-5	1000	560	0	25mA (calc.)
	XMICN and GND	B2102 pads					
Internal Mic to External Earpiece	B2100 (OUT/ GND)	HSEAR R P, HSEAR R N and GND	22.7	100	1360	1.2	NA
		HSEAR P, HSEAR N and GND					
		HSEAR R P, HSEAR R N and GND					
		HSEAR P, HSEAR N and GND					

Copyright © 2006 Nokia. All rights reserved.

Measurement data

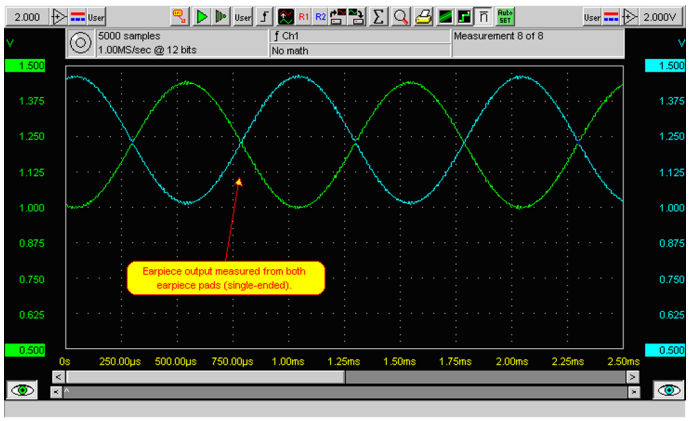

Figure 40 Single-ended output waveform of the Ext_in_HP_out measurement when earpiece is connected.

Figure 41 Differential output waveform of the Ext_in_IHF_out out loop measurement when speaker is connected.

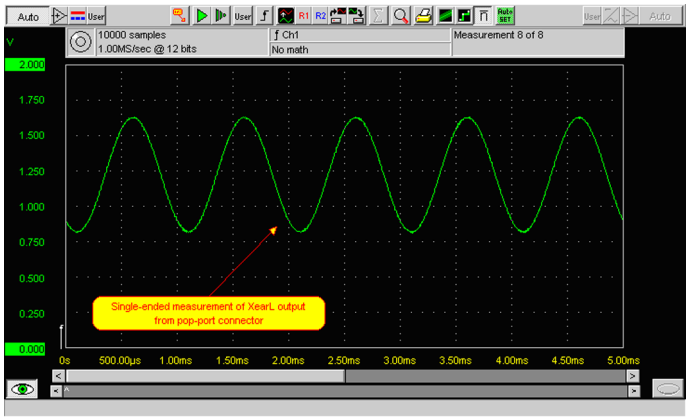

Figure 42 Single-ended output waveform of the HP_in_Ext_out loop when microphone is connected.

Copyright © 2006 Nokia. All rights reserved.

Internal earpiece troubleshooting

Troubleshooting flow

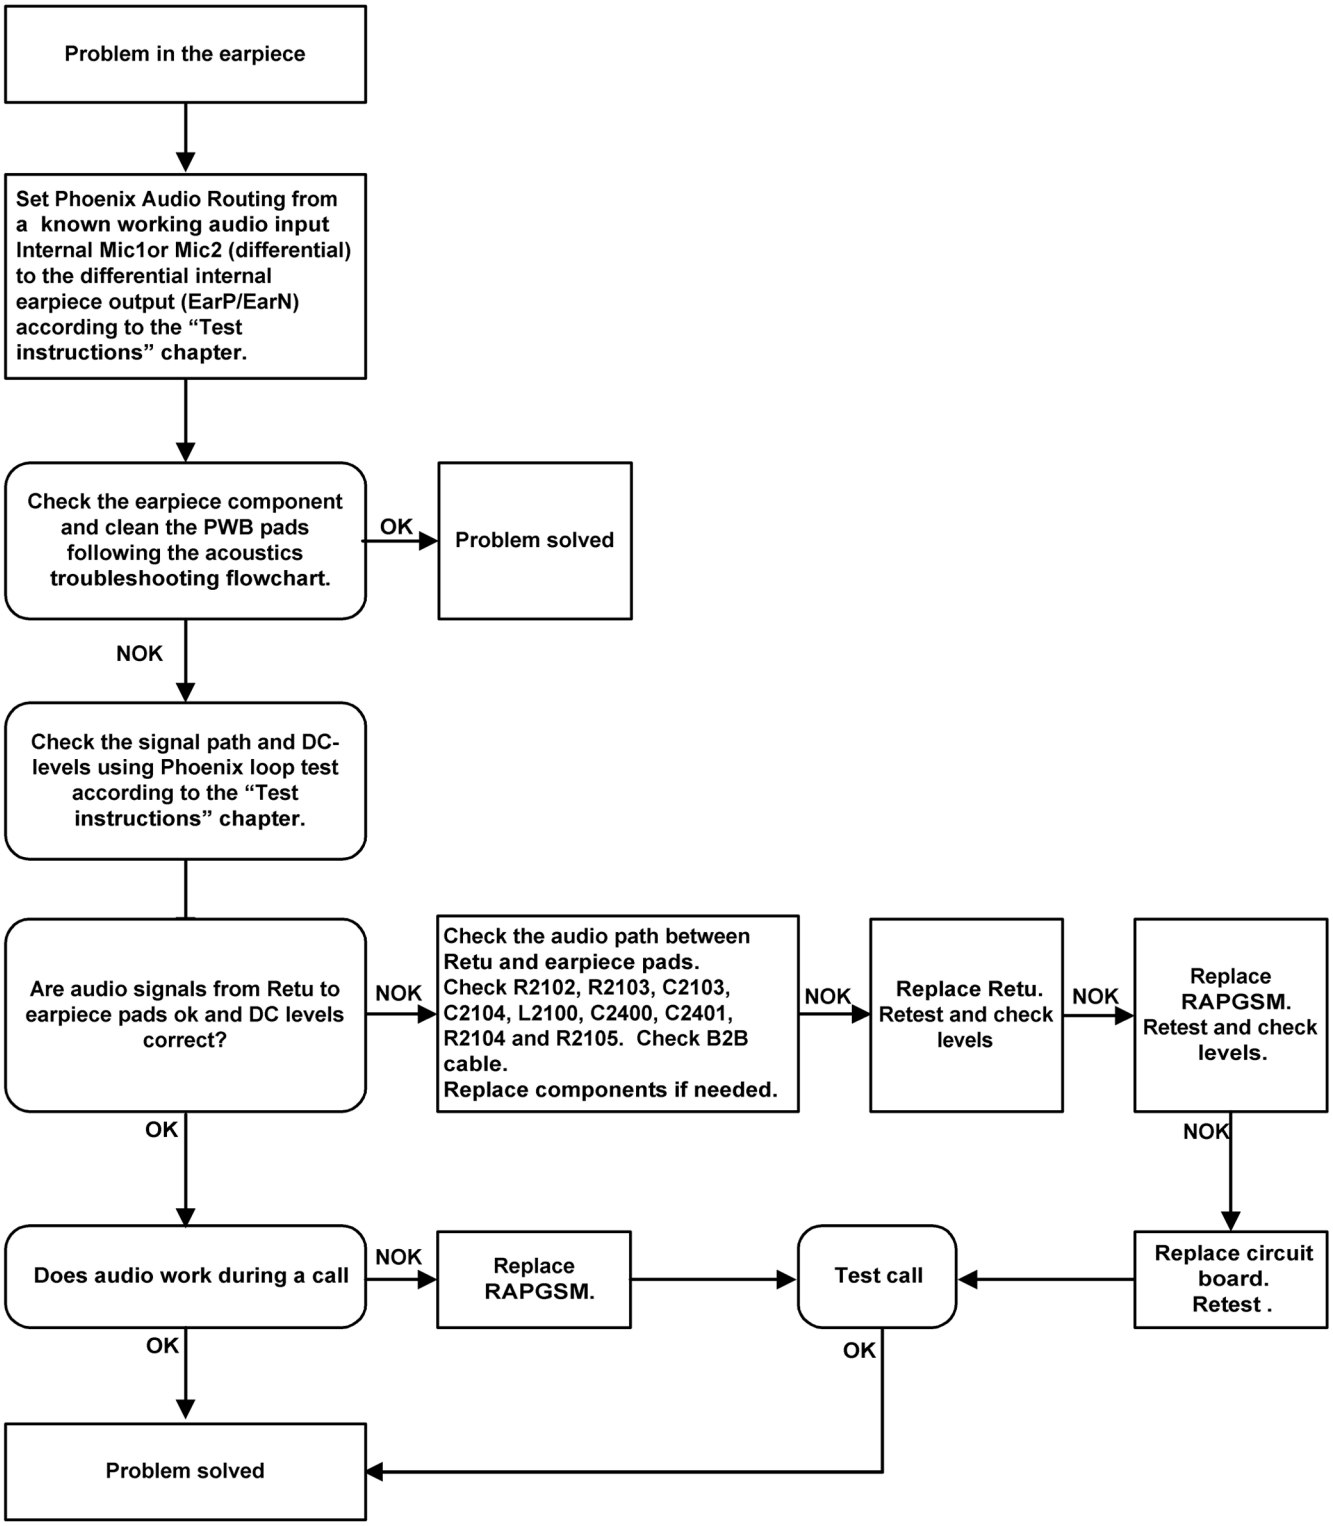

Copyright © 2006 Nokia. All rights reserved.

Internal microphone troubleshooting

Troubleshooting flow

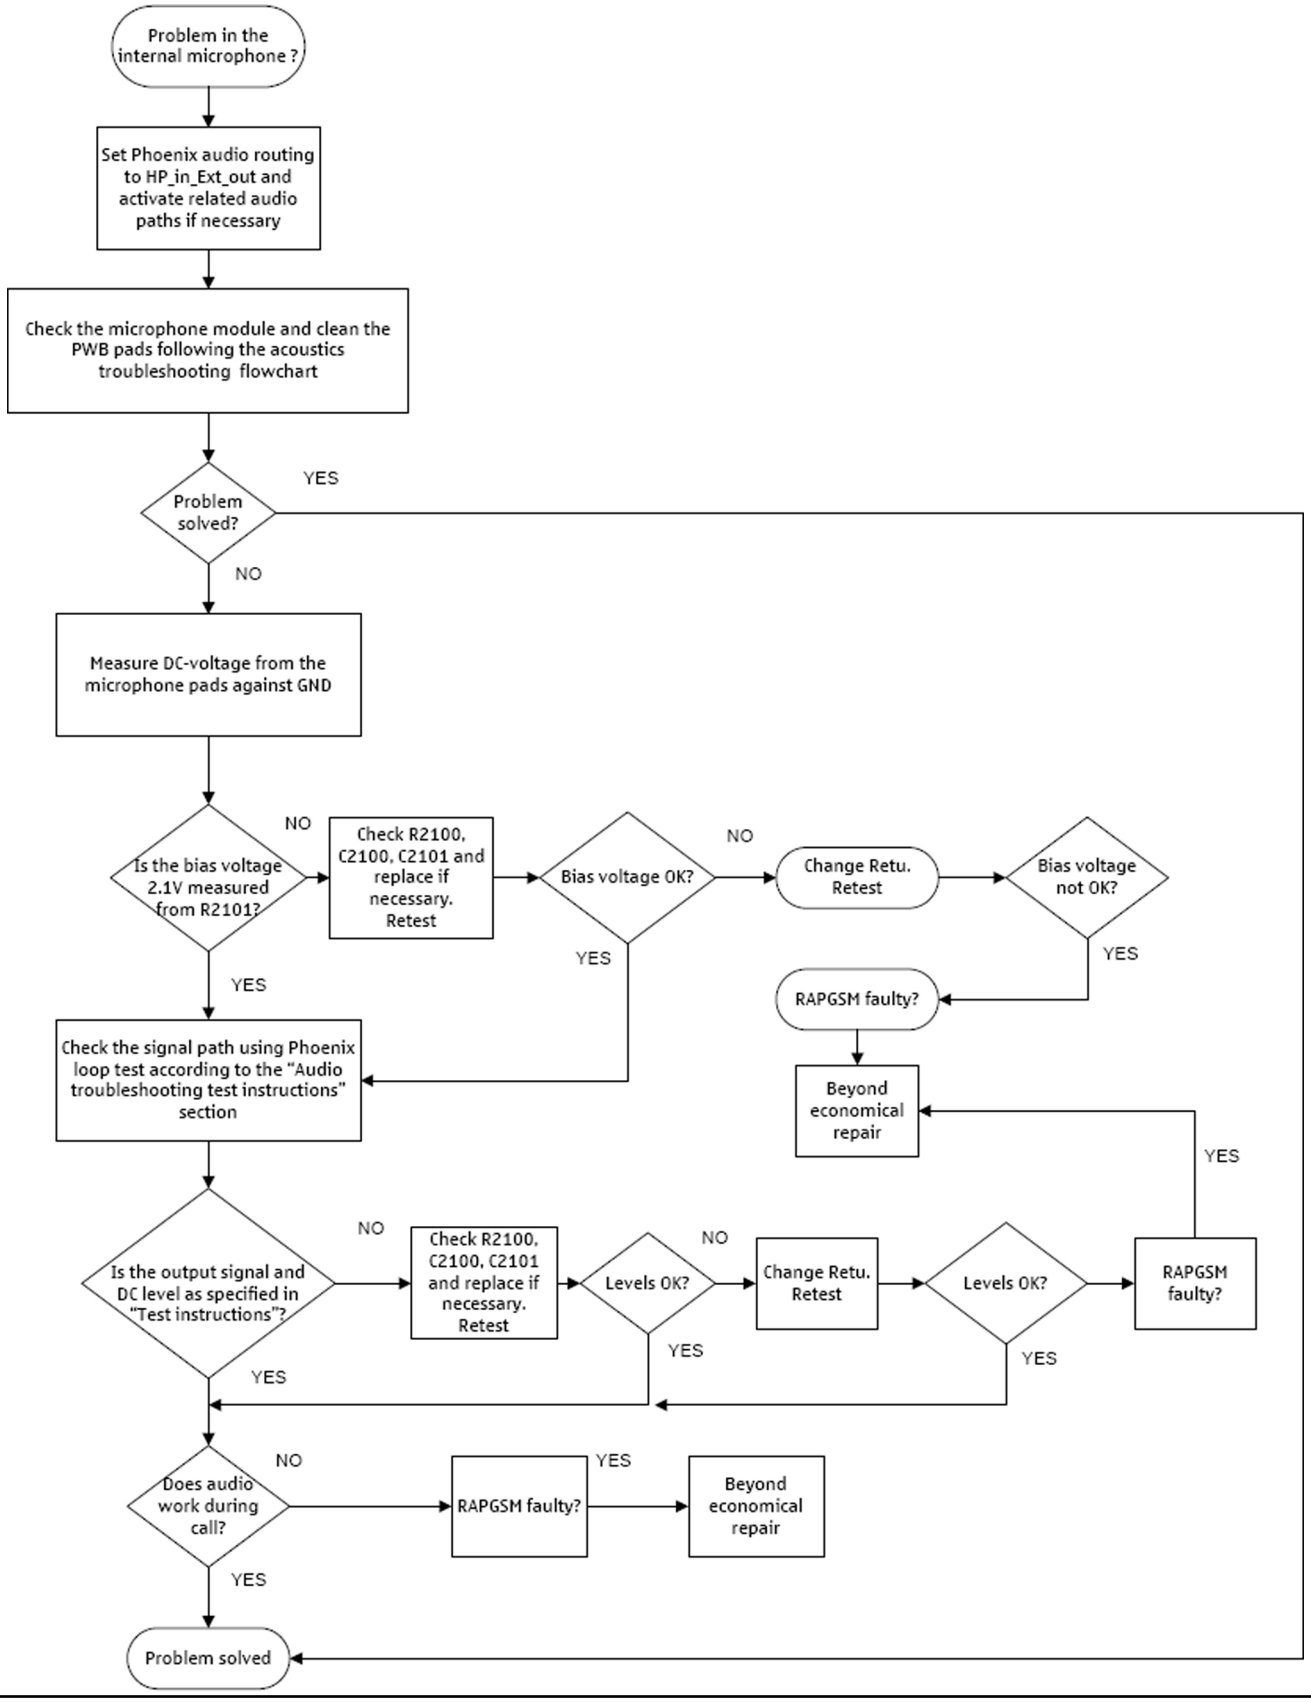

Copyright © 2006 Nokia. All rights reserved.

IHF troubleshooting

Troubleshooting flow

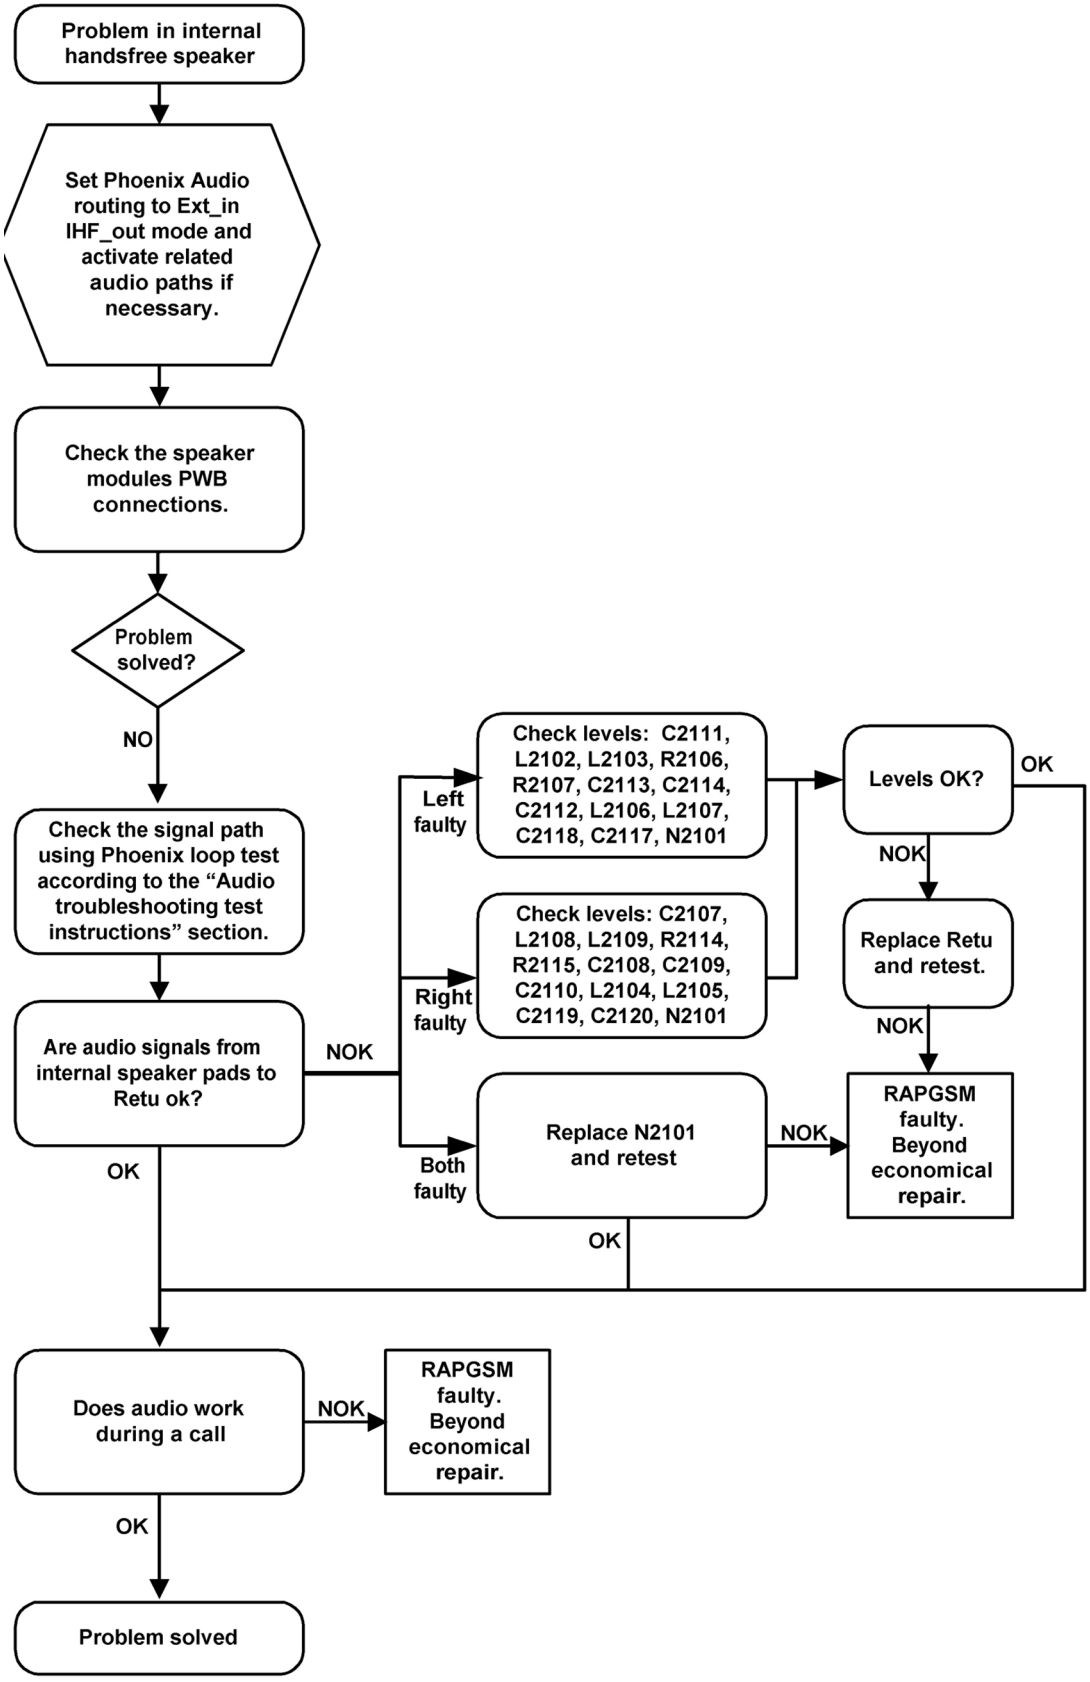

Copyright © 2006 Nokia. All rights reserved.

External microphone troubleshooting

Troubleshooting flow

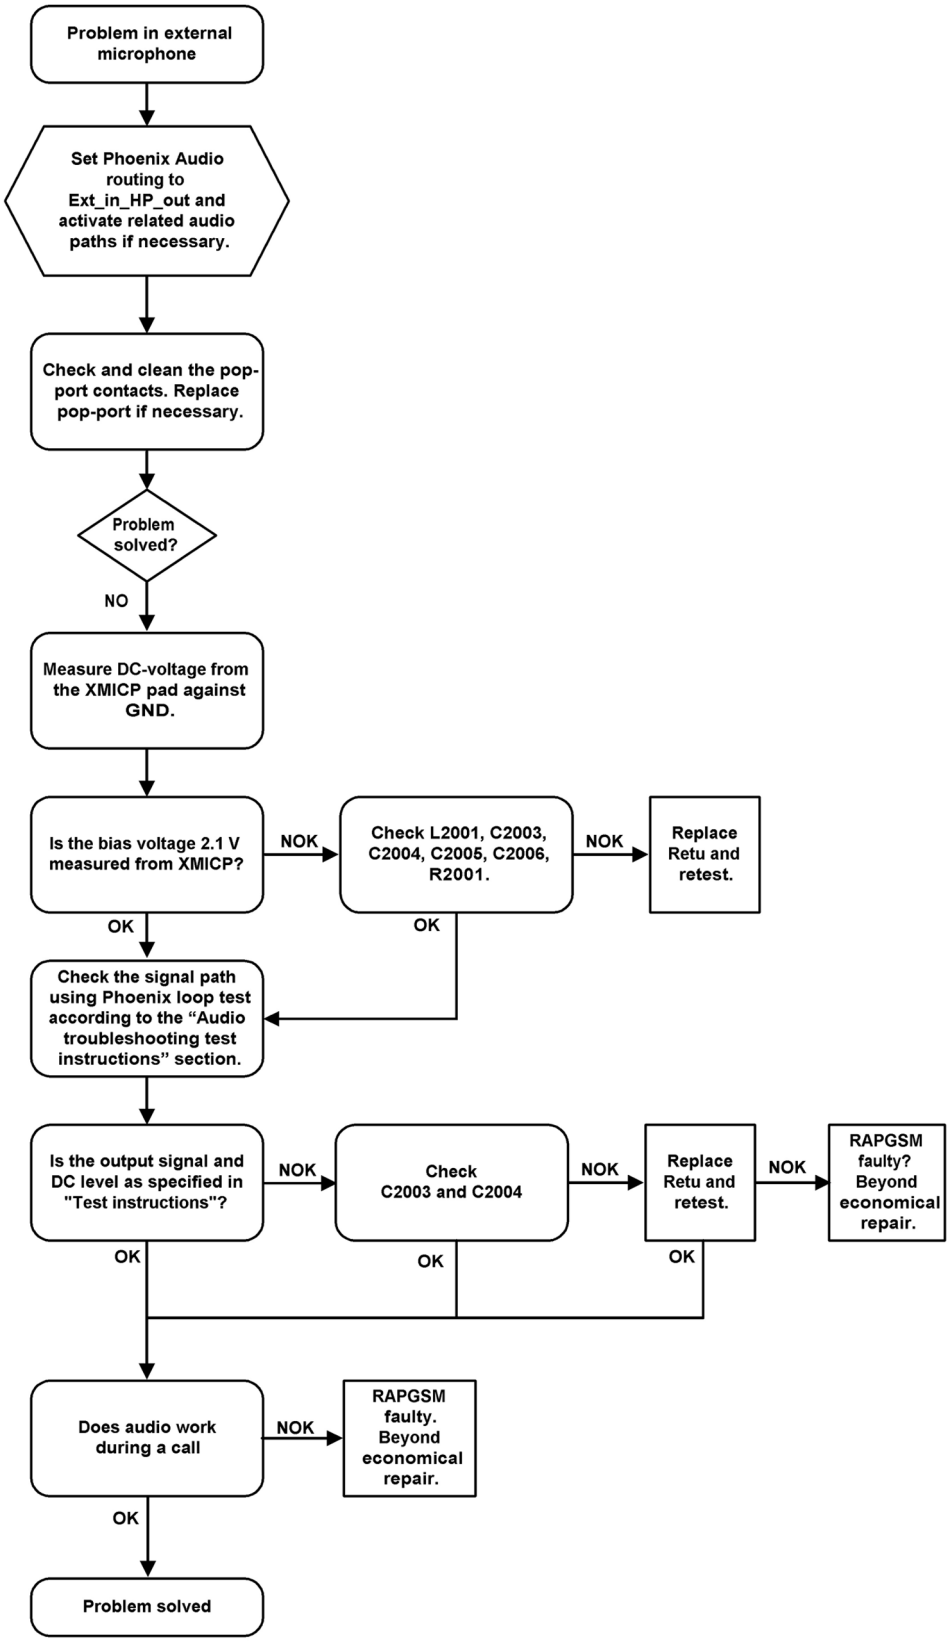

Copyright © 2006 Nokia. All rights reserved.

External earpiece troubleshooting

Troubleshooting flow

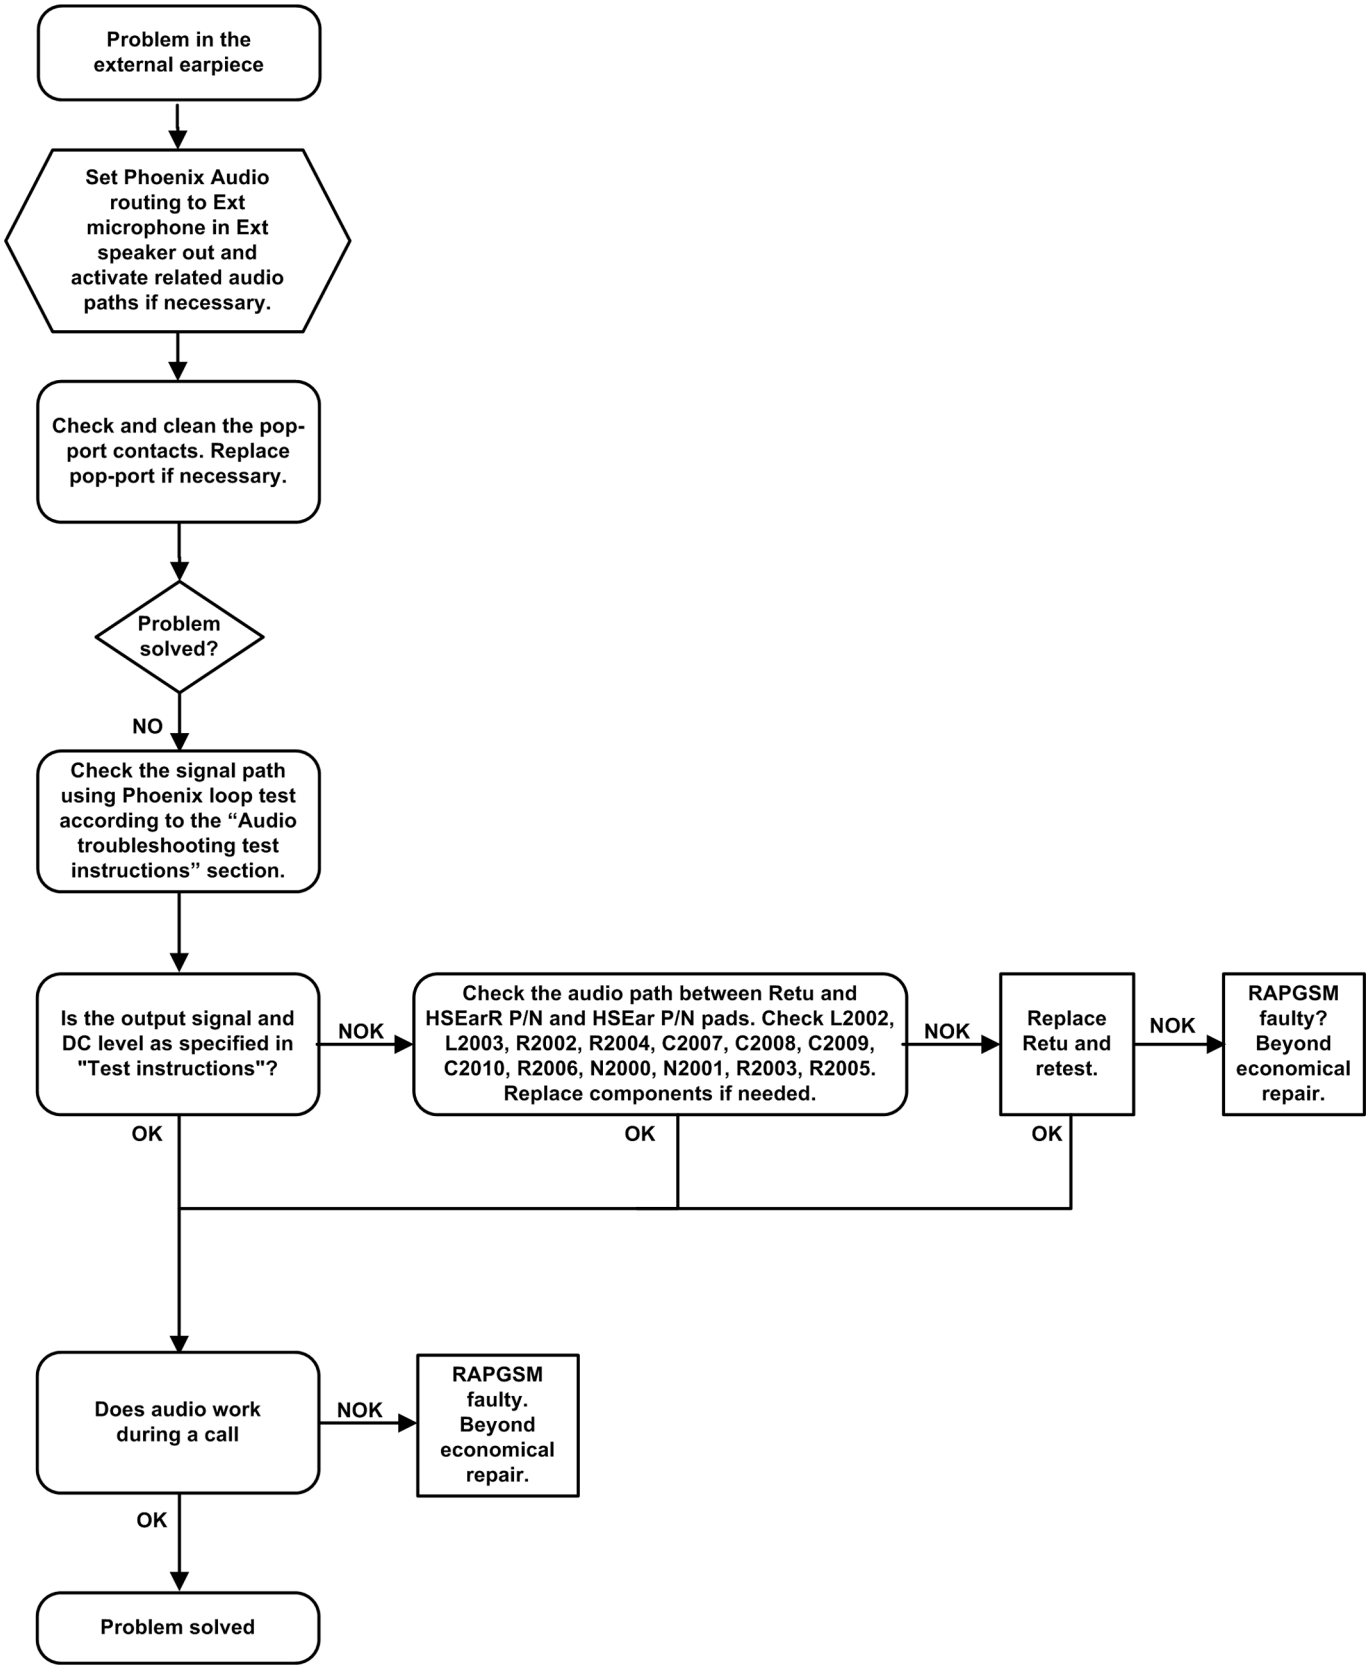

Copyright © 2006 Nokia. All rights reserved.

Introduction to acoustics troubleshooting

Acoustics troubleshooting

Acoustics design ensures that the sound is detected correctly with a microphone and properly radiated to the outside of the device by speaker(s). The acoustics of the phone includes three basic systems: earpiece, Integrated Hands Free (IHF) and microphone.

The sound reproduced from the earpiece readiates through a single hole on the front cover (A-cover). The sound reproduced from the IHF speakers radiates from left and right sound holes located on both sides of the device. Microphone is located at the bottom, next to the system connector.

For a correct functionality of the phone, all sound holes must be always open. When the phone is used, care must be taken not to close any of those holes with a hand or fingers. The phone should be dry and clean, and no objects must be located in such a way that they close any of the holes.

Copyright © 2006 Nokia. All rights reserved.

Earpiece troubleshooting

Troubleshooting flow

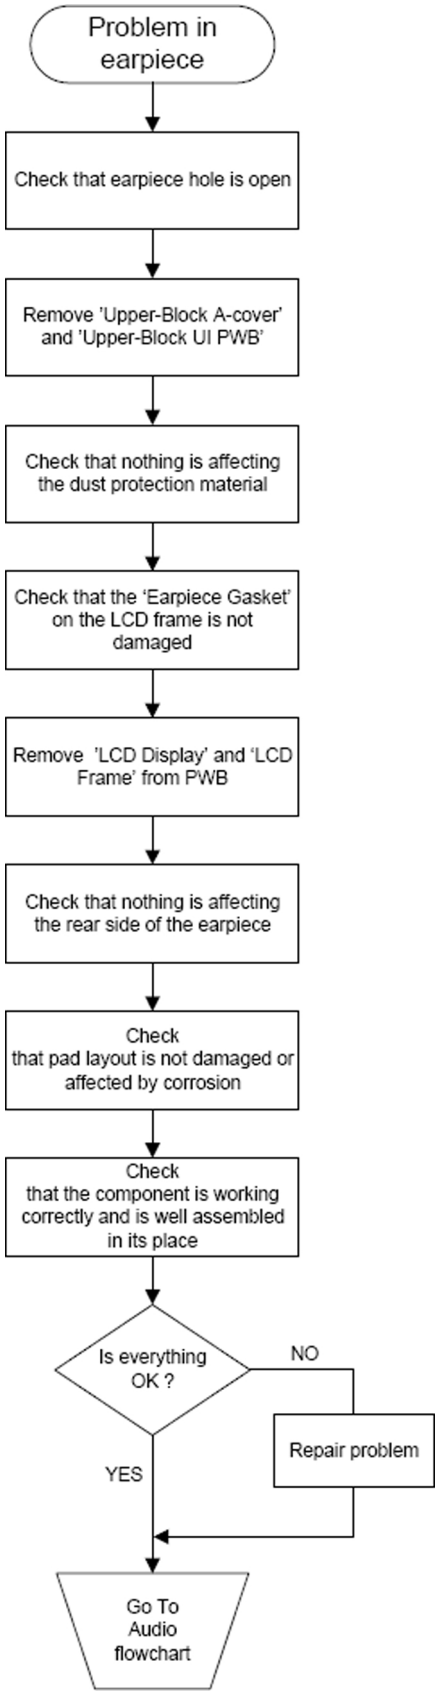

Copyright © 2006 Nokia. All rights reserved.

IHF troubleshooting

Troubleshooting flow

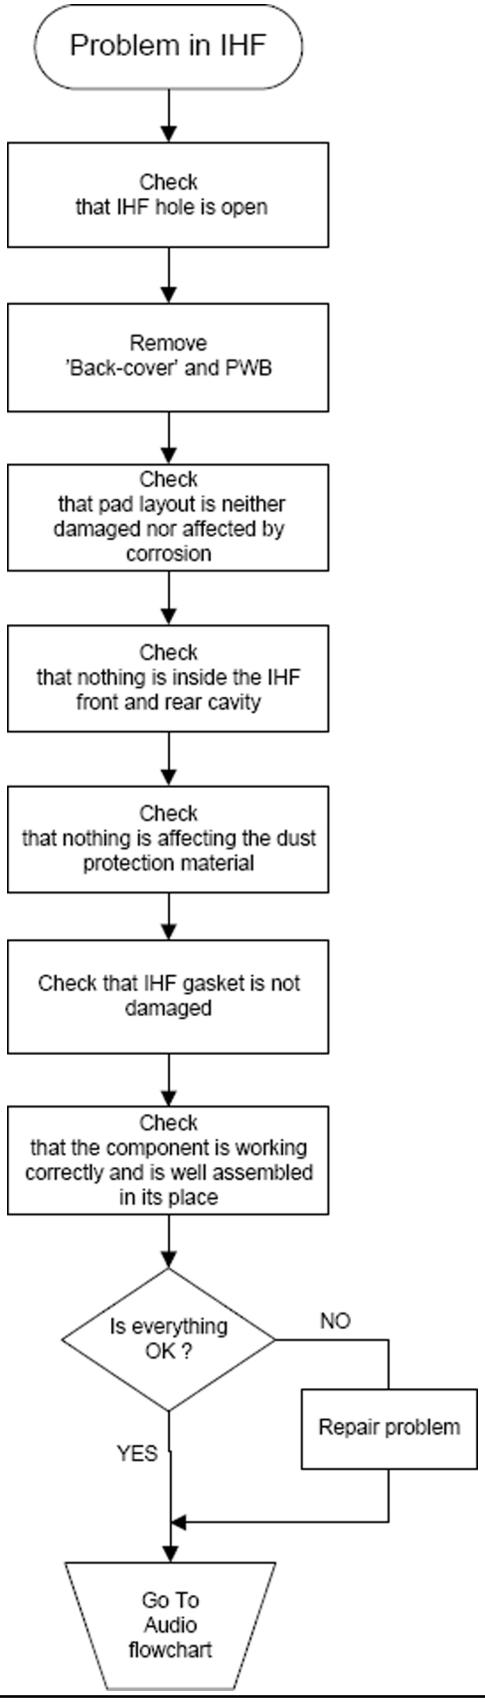

Copyright © 2006 Nokia. All rights reserved.

Microphone troubleshooting

Troubleshooting flow

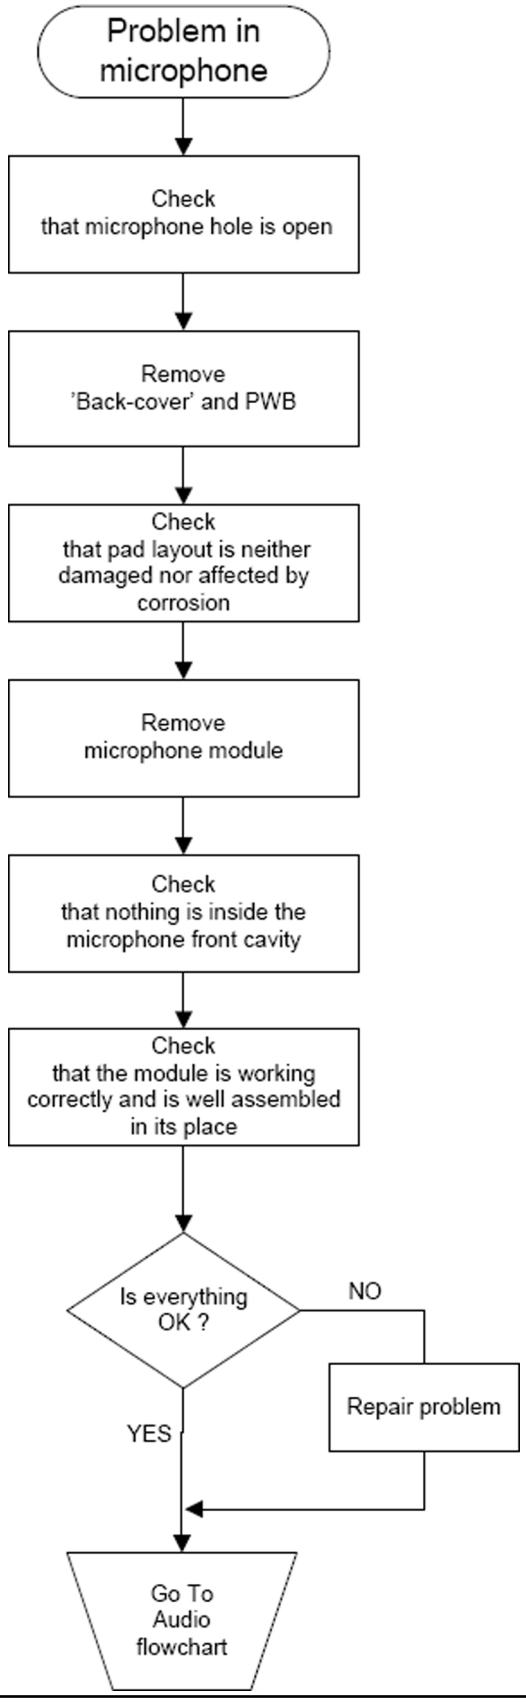

Copyright © 2006 Nokia. All rights reserved.

Bluetooth troubleshooting

Introduction to Bluetooth troubleshooting

There are two main Bluetooth (BT) problems that can occur:

Problem	Description
Detachment of the BT antenna.	This would most likely happen if the device has been dropped repeatedly to the ground. It could cause the BT antenna to become loose or partially detached from the PWB.
A malfunction in the BT ASIC, BB ASICs or the phone's BT SMD components.	This is unpredictable and could have many causes i.e. SW or HW related.

The main issue is to find out if the problem is related to the BT antenna or related to the BT system or the phone's BB and then replace/fix the faulty component. For location of the antenna, please refer to the exploded view in the Parts and layouts section.

Bluetooth settings for Phoenix

Steps

1. Start *Phoenix* service software.
2. From the **File** menu, choose **Open Product**, and then choose the correct type designator from the **Product** list.
3. Place the phone to a flash adapter in the local mode.
4. Choose **Testing→Bluetooth LOCALS** .
5. Locate JBT-9's serial number (12 digits) found in the type label on the back of JBT-9.

   In addition to JBT-9, also SB-6, JBT-3 and JBT-6 Bluetooth test boxes can be used.
6. In the *Bluetooth LOCALS* window, write the 12-digit serial number on the **Counterpart BT Device Address** line.

   This needs to be done only once provided that JBT-9 is not changed.
7. Place the JBT-9 box near (within 10 cm) the BT antenna and click **Run BER Test**.

Results

Bit Error Rate test result is displayed in the *Bit Error Rate (BER) Tests* pane in the *Bluetooth LOCALS* window.

Copyright © 2006 Nokia. All rights reserved.

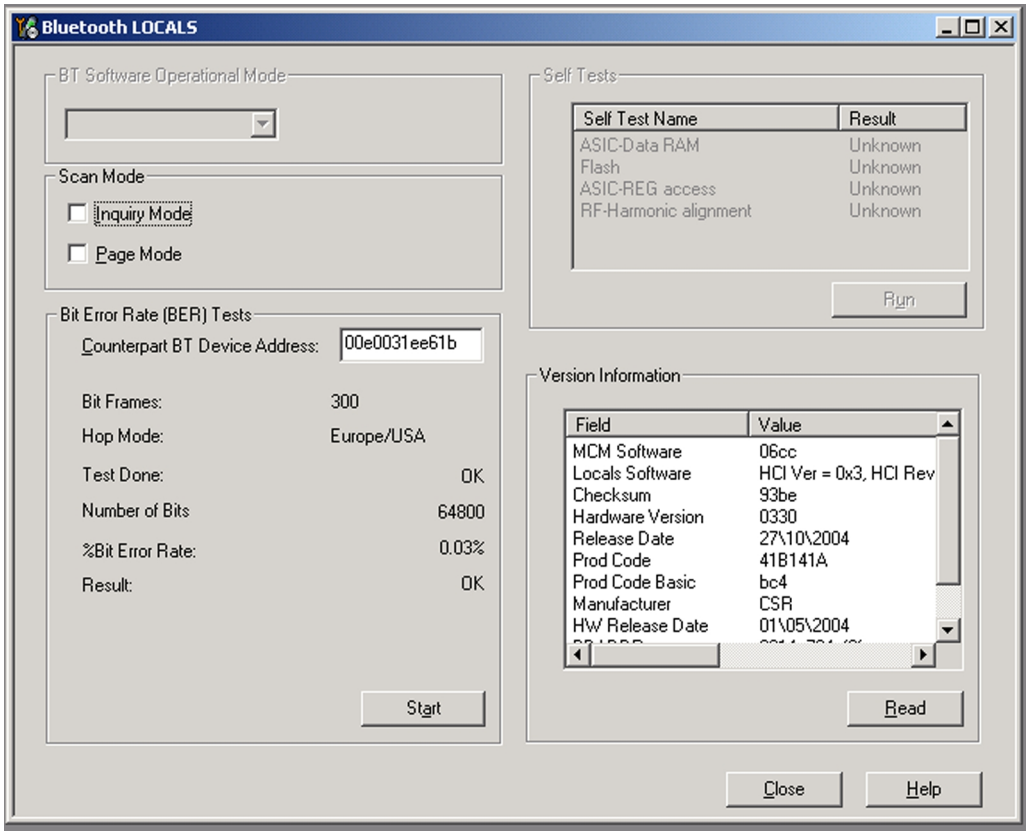

Figure 43 BER test result

Bluetooth self tests in Phoenix

Steps

1. Start *Phoenix* service software.
2. Choose**File→Scan Product.**
3. Place the phone to a flash adapter.
4. From the **Mode** drop-down menu, set mode to **Local**.
5. Choose **Testing→Self Tests.**
6. In the *Self Tests* window check the following Bluetooth related tests:
   - **ST_LPRF_IF_TEST**
   - **ST_LPRF_AUDIO_LINES_TEST**
   - **ST_BT_WAKEUP_TEST**

Copyright © 2006 Nokia. All rights reserved.

7. To run the tests, click **Start**.

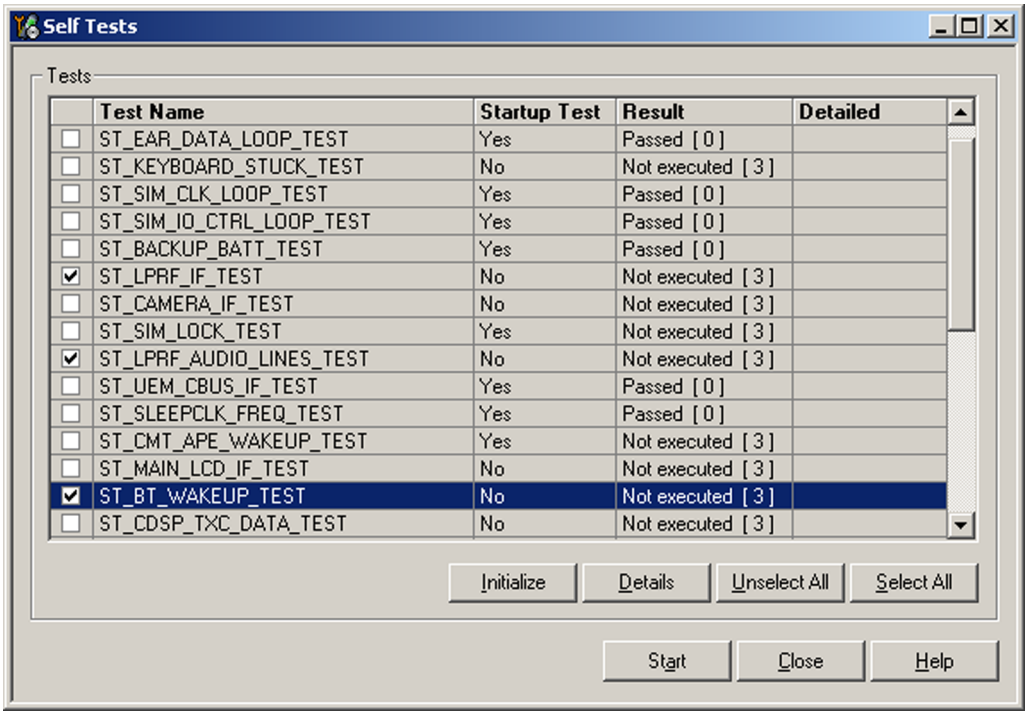

Figure 44 Bluetooth self tests in *Phoenix*

Bluetooth BER failure troubleshooting

Context

Basic encoding rules, BER, is a self-identifying and self-delimiting encoding scheme, which means that each data value can be identified, extracted and decoded individually.

Copyright © 2006 Nokia. All rights reserved.

Part 1: Bluetooth self test passed but BER test failed

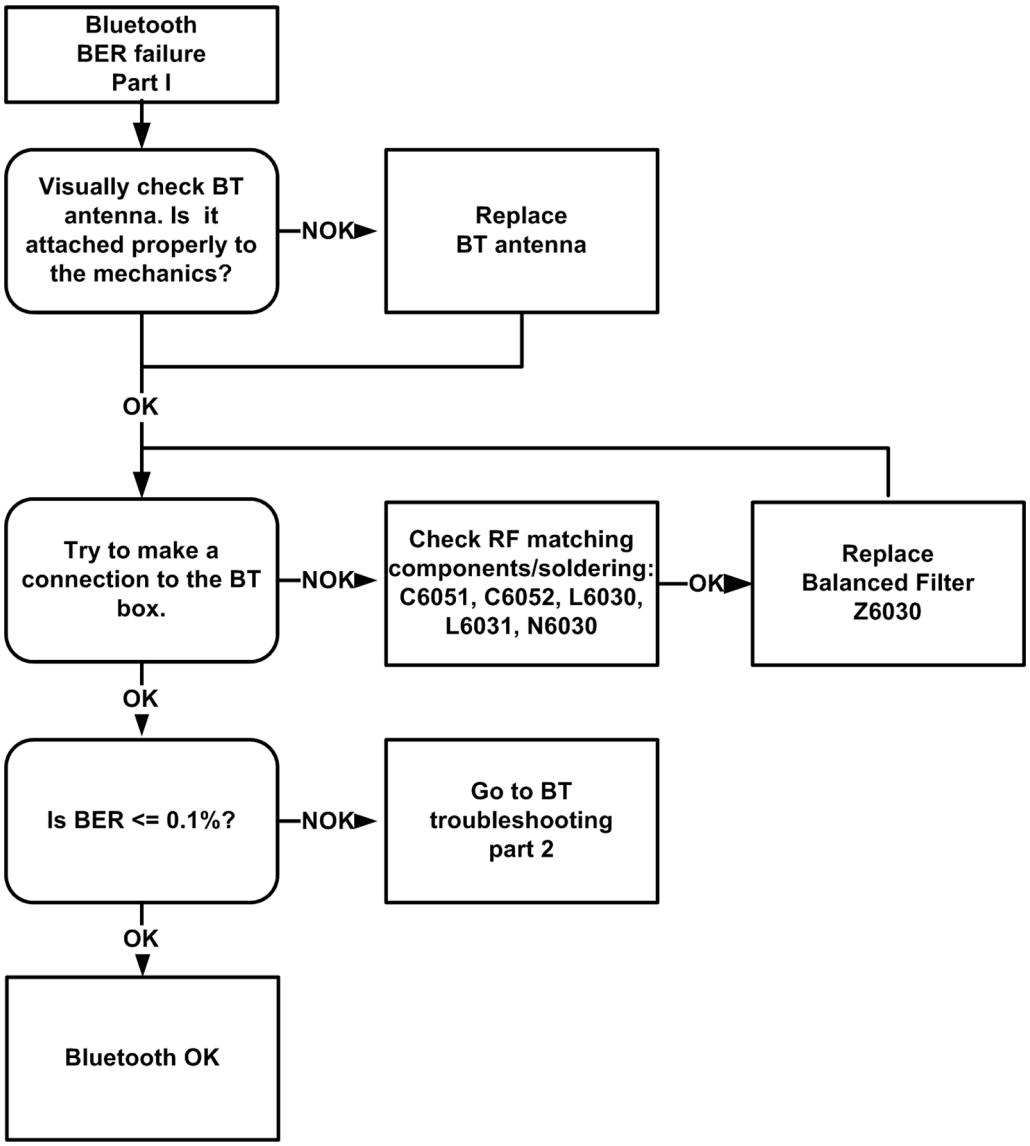

Copyright © 2006 Nokia. All rights reserved.

Part 2: Bluetooth self test failed

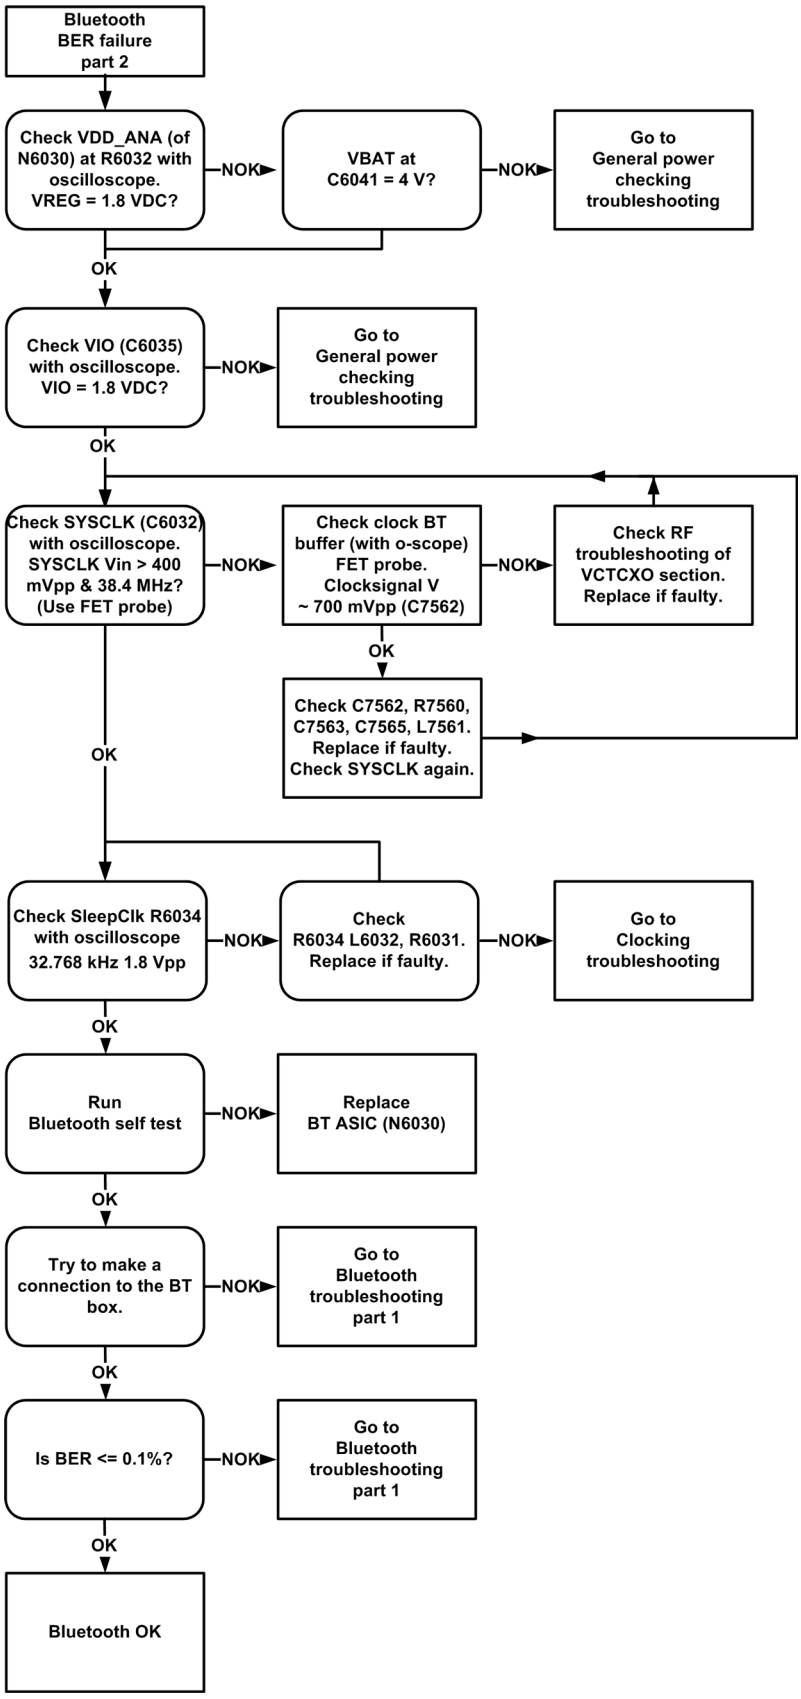

Copyright © 2006 Nokia. All rights reserved.

Bluetooth audio and UI activation troubleshooting

Troubleshooting flow

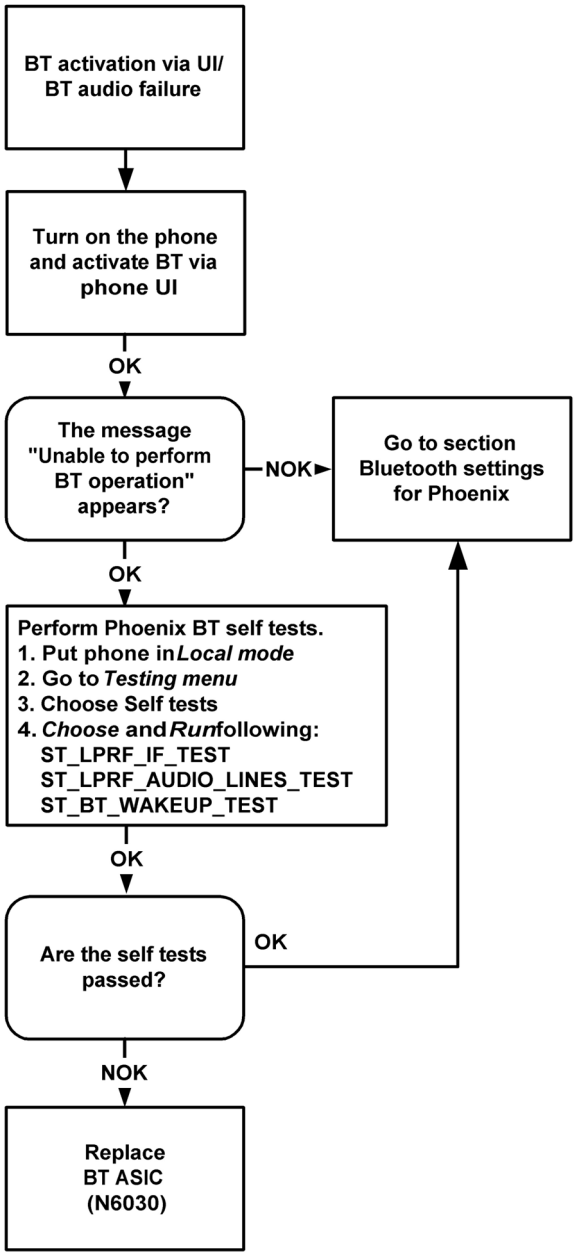

Baseband manual tuning guide

Certificate restoring for BB5 products

Context

This procedure is performed when the device certificate is corrupted for some reason.

All tunings (RF & Baseband, UI) must be done after performing the certificate restoring procedure.

The procedure for certificate restoring is the following:

- Flash the phone with the latest available software using FPS-8 or FPS-10.

Copyright © 2006 Nokia. All rights reserved.

Note: USB flashing does not work for a dead BB5 phone.

- Create a request file.
- Send the file to Nokia by e-mail. Use the following addresses depending on your location:
  - APAC: sydney.service@nokia.com
  - CHINA: repair.ams@nokia.com
  - E&A: salo.repair@nokia.com
  - AMERICAS: fls1.usa@nokia.com
- When you receive a reply from Nokia, carry out certificate restoring.
- Tune the phone completely.

  Note: SX-4 smart card is needed.
- If the phone resets after certificate restoring, reflash the phone again.

Required equipment and setup:

- *Phoenix* service software v 2004.39.7.70 or newer.
- The latest phone model specific *Phoenix* data package.
- PKD-1 dongle
- SX-4 smart card (Enables BB5 testing and tuning features)
- External smart card reader

  Note: The smart card reader is only needed when FPS-8 is used. FPS-10 has an integrated smart card reader.
- Activated FPS-8 flash prommer **OR** FPS-10 flash prommer
- Flash update package 03.18.004 or newer for FPS-8 or FPS-10 flash prommers
- CU-4 control unit
- USB cable from PC USB Port to CU-4 control unit
- Phone model specific adapter for CU-4 control unit
- PCS-1 cable to power CU-4 from external power supply
- XCS-4 modular cable between flash prommer and CU-4

  Note: CU-4 must be supplied with +12 V from an external power supply in all steps of certificate restoring.

Steps

1. Program the phone software.
   i Start *Phoenix* and login. Make sure the connection has been managed correctly for FPS-8 or FPS-10.
   ii Update the phone MCU software to the latest available version.
   If the new flash is empty and the phone cannot communicate with *Phoenix*, reflash the phone.
   iii Choose the product manually from **File→Open Product** , and click **OK**.
   Wait for the phone type designator (e.g. “RM-1”) to be displayed in the status bar.
   iv Go to **Flashing→SW Update** and wait until *Phoenix* reads the product data as shown in the following picture.

Copyright © 2006 Nokia. All rights reserved.

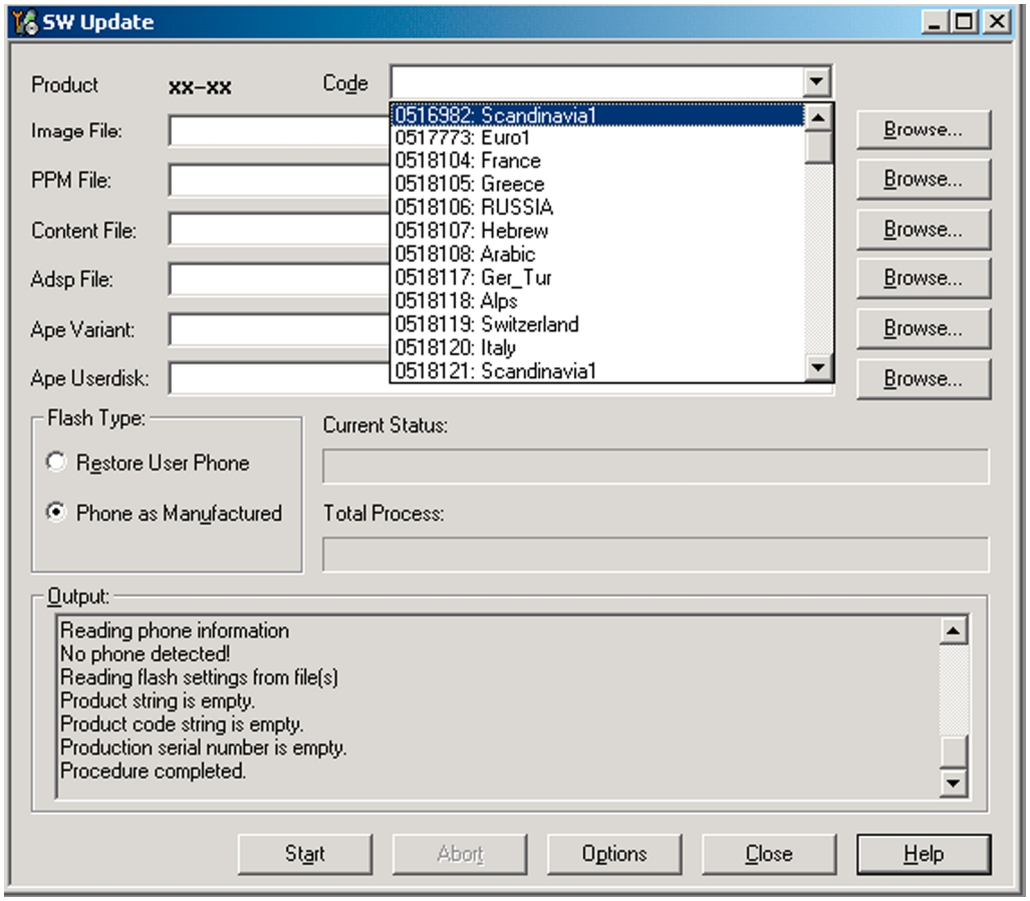

Product	is automatically set according to the phone support module which was opened manually, but the flash files cannot be found because the correct data cannot be read from the phone automatically.
Code	must be chosen manually, it determines the correct flash files to be used. Please choose the correct product code (can be seen in the phone type label) from the dropdown list.
Flash Type	must be set to **Phone as Manufactured**.

v To continue, click **Start**.

Progress bars and messages on the screen show actions during phone programming, please wait.

Copyright © 2006 Nokia. All rights reserved.

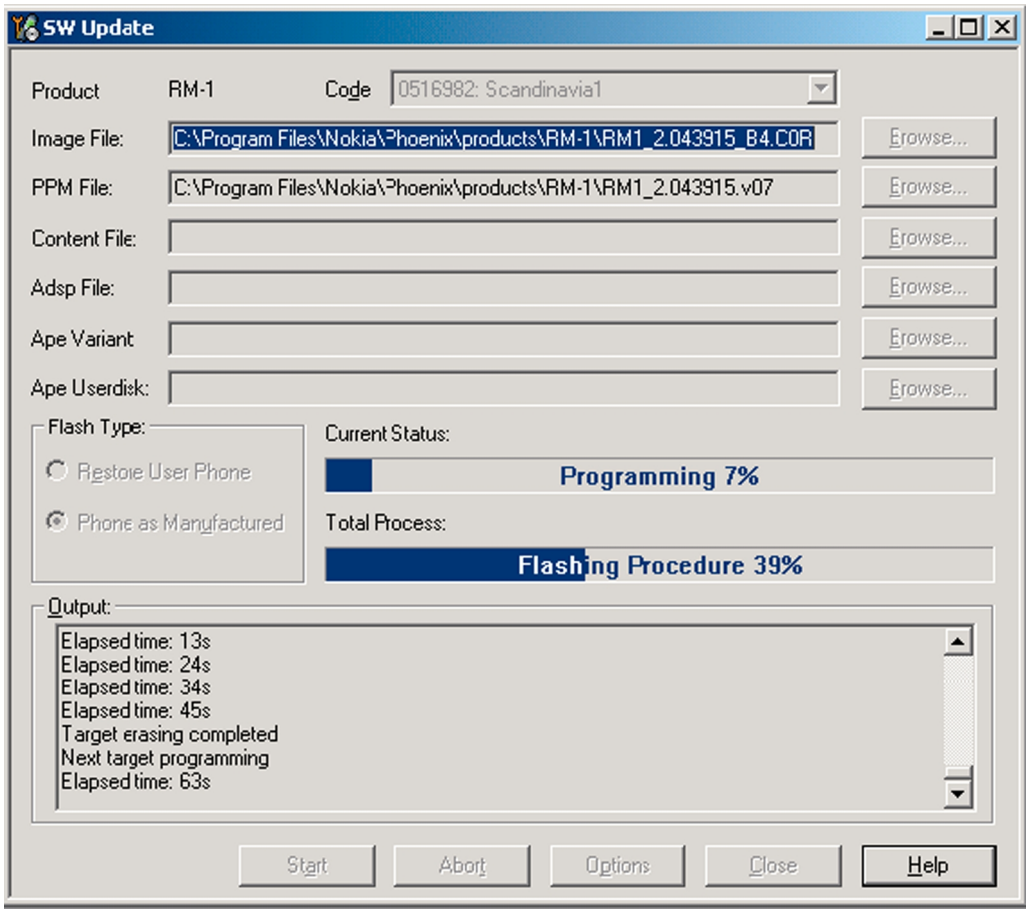

Programming is completed when *Flashing Completed* message is displayed.

The product type designator and MCU SW version are displayed in the status bar.

vi Close the *SW Update* window and then choose **File→Close Product** .

2. Create a *Request* file.

For this procedure, you must supply +12 V to CU-4 from an external power supply.

i To connect the phone with *Phoenix*, choose **File→Scan Product** .

ii Choose **Tools→Certificate Restore** .

iii To choose a location for the request file, click **Browse**.

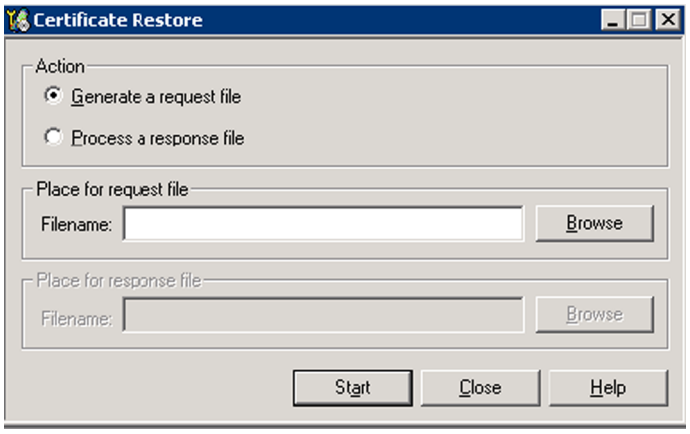

Copyright © 2006 Nokia. All rights reserved.

iv Name the file so that you can easily identify it, and click **Open**.

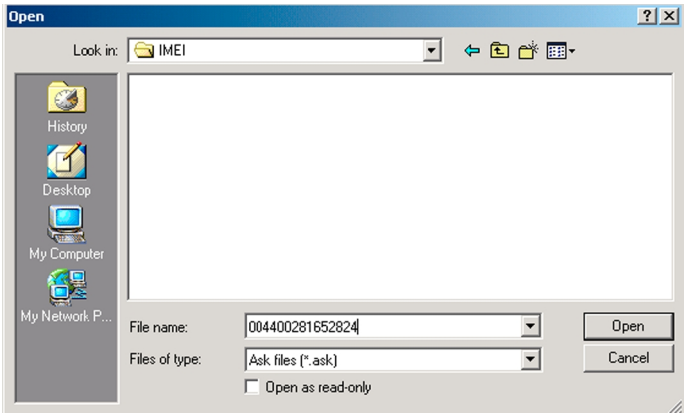

The name of the file and its location are shown.

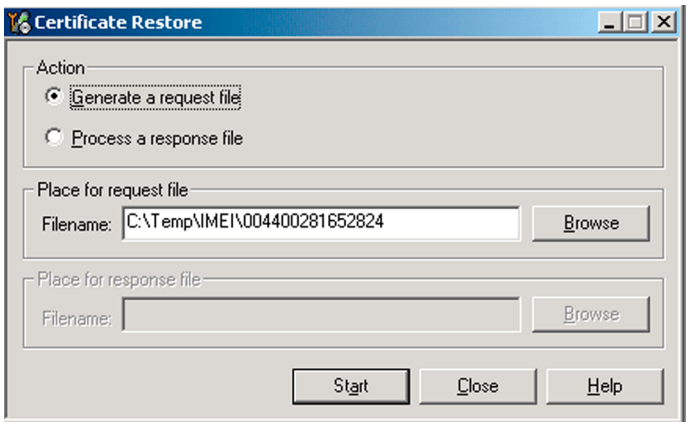

v To create the *Request* file, click **Start**.

vi When the file for certificate restore has been created, send it to Nokia as an e-mail attachment.

3. Restore certificate.

For this procedure, you must supply +12 V to CU-4 from an external power supply.

i Save the reply file sent by Nokia to your computer.

ii Start *Phoenix* service software.

iii Choose **File→Scan Product** .

Copyright © 2006 Nokia. All rights reserved.

iv From the **Tools** menu, choose **Certificate Restore** and select **Process a response file** in the *Action* pane.

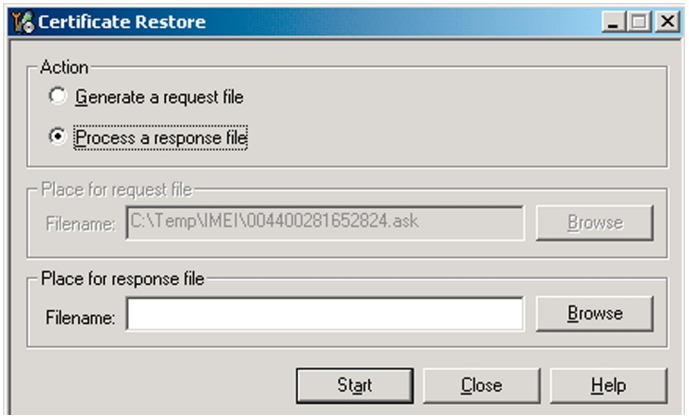

v To choose the location where response file is saved, click **Browse**.

vi Click **Open**.

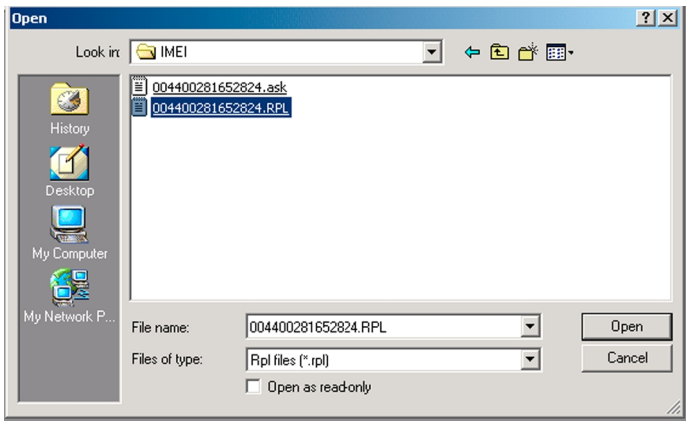

The name of the file and the path where it is located are shown.

vii To write the file to phone, click **Start**.

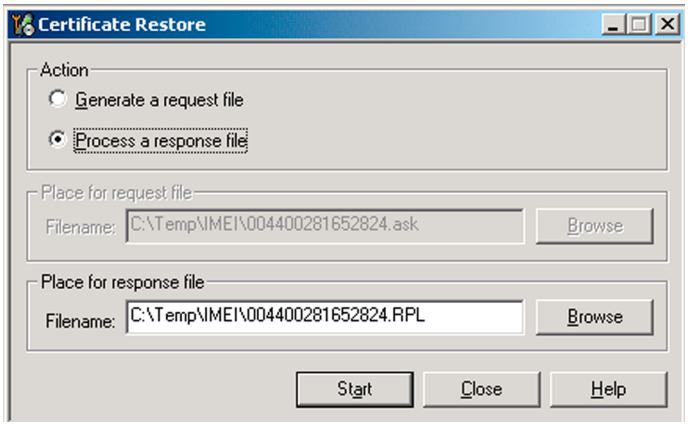

Next actions

After a successful rewrite, you must retune the phone completely by using *Phoenix* tuning functions.

Important: Perform all tunings: RF, BB, and UI.

Copyright © 2006 Nokia. All rights reserved.

Energy management calibration

Prerequisites

Energy Management (EM) calibration is performed to calibrate the setting (gain and offset) of AD converters in several channels (that is, **battery voltage**, **BSI**, **battery current**) to get an accurate AD conversion result.

Hardware setup:

- An external power supply is needed.
- Supply 12V DC from an external power supply to CU-4 to power up the phone.
- The phone must be connected to a CU-4 control unit with a product-specific flash adapter.

Steps

1. Place the phone to the docking station adapter (CU-4 is connected to the adapter).
2. Start *Phoenix* service software.
3. Choose **File→ Scan Product.**
4. Choose **Tuning→Energy Management Calibration.**
5. To show the current values in the phone memory, click **Read**, and check that communication between the phone and CU-4 works.
6. Check that the **CU-4 used** check box is checked.
7. Select the item(s) to be calibrated.

   Note: ADC calibration has to be performed before other item(s). However, if all calibrations are selected at the same time, there is no need to perform the ADC calibration first.
8. Click **Calibrate**.

   The calibration of the selected item(s) is carried out automatically.

   The candidates for the new calibration values are shown in the *Calculated values* column. If the new calibration values seem to be acceptable (please refer to the following "Calibration value limits" table), click **Write** to store the new calibration values to the phone permanent memory.

Table 12 Calibration value limits

Parameter	Min.	Max.
ADC Offset	-20	20
ADC Gain	12000	14000
BSI Gain	1100	1300
VBAT Offset	2400	2650
VBAT Gain	19000	23000
VCHAR Gain	N/A	N/A
IBAT (ICal) Gain	7750	12250

9. Click **Read**, and confirm that the new calibration values are stored in the phone memory correctly. If the values are not stored to the phone memory, click **Write** and/or repeat the procedure again.
10. To end the procedure, close the *Energy Management Calibration* window.

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

7 — RF Troubleshooting and Manual Tuning Guide

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Introduction to RF troubleshooting....7-5
RF key components....7-6
Receiver troubleshooting....7-7
Introduction to RX troubleshooting....7-7
General instructions for RX troubleshooting....7-8
Reciever (RX) troubleshooting....7-9
GSM Rx chain activation for manual measurements / GSM RSSI measurement....7-11
Transmitter troubleshooting....7-11
General instructions for TX troubleshooting....7-11
Transceiver (TX) troubleshooting....7-14
Checking antenna functionality....7-15
Synthesizer troubleshooting....7-16
RF tunings....7-17
Introduction to RF tunings....7-17
Auto tuning for BB5.0....7-17
System mode independent manual tunings....7-18
RF channel filter calibration....7-18
PA (power amplifier) detection....7-19
GSM receiver tunings....7-19
Rx calibration (GSM)....7-19
Rx band filter response compensation (GSM)....7-22
GSM transmitter tunings....7-26
Tx IQ tuning (GSM)....7-26
Tx power level tuning (GSM)....7-27

List of Tables

Table 13 Rf channel filter calibration tuning limits....7-18
Table 14 RF tuning limits in Rx calibration....7-21

List of Figures

Figure 45 RF key components on main board (bottom side)....7-6
Figure 46 RF key components on main board (top side)....7-7
Figure 47 RF Controls window....7-9
Figure 48 RSSI Reading window....7-11
Figure 49 RF Controls window....7-13
Figure 50 Antenna module....7-15
Figure 51 Auto tuning concept with CMU200....7-17
Figure 52 Rf channel filter calibration typical values....7-18

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Introduction to RF troubleshooting

On the following pages you will find a step-by-step troubleshooting procedure and reference measurements at the relevant signal points. For functional descriptions, please refer to the System module section.

Notes on reference measurements

All measurements must be done using:

- spectrum analyser with a high-frequency high-impedance passive probe (LO-/reference frequencies and RF power levels)
- oscilloscope with a 10:1 probe (DC-voltages and low frequency signals)

Important: All measurements with an RF coupler must be performed in an RF shielded environment, or where there are no transmissions on the same frequencies. This may disturb sensitive receiver measurements.

Repairing this phone - important

The RF section of the phone is built around one RF ASIC. Before changing the RF ASIC, please make sure that supply voltages and serial communication coming from baseband to RF are OK.

Please note that the grounding of the FEM module is directly below the FEM module. Therefore, it is difficult to check or change the module.

Most RF semiconductors are static discharge sensitive! ESD protection must be taken care of during repair (ground straps and ESD soldering irons). The RF ASIC and FEM are moisture sensitive, so parts must be pre-baked prior to soldering.

In addition to key components, there are lot of discrete components (resistors, inductors and capacitors) which troubleshooting is done mainly by checking if the soldering of the component is done properly.

Capacitor can be checked for shorts and resistors for value by means of an ohmmeter, but be aware in-circuit measurements should be evaluated carefully.

Keep in mind that all measured voltages or RF levels depicted in the service manual are rough figures. Especially RF levels vary because of different measuring equipment or different grounding of the probe used.

When using an RF probe, use a pair of metallic tweezers to connect the probe ground to the PWB ground as close to the measurement point as possible. If measurements are performed in a product specific module jig, then “GND” pads should be used for the probe ground.

Copyright © 2006 Nokia. All rights reserved.

RF key components

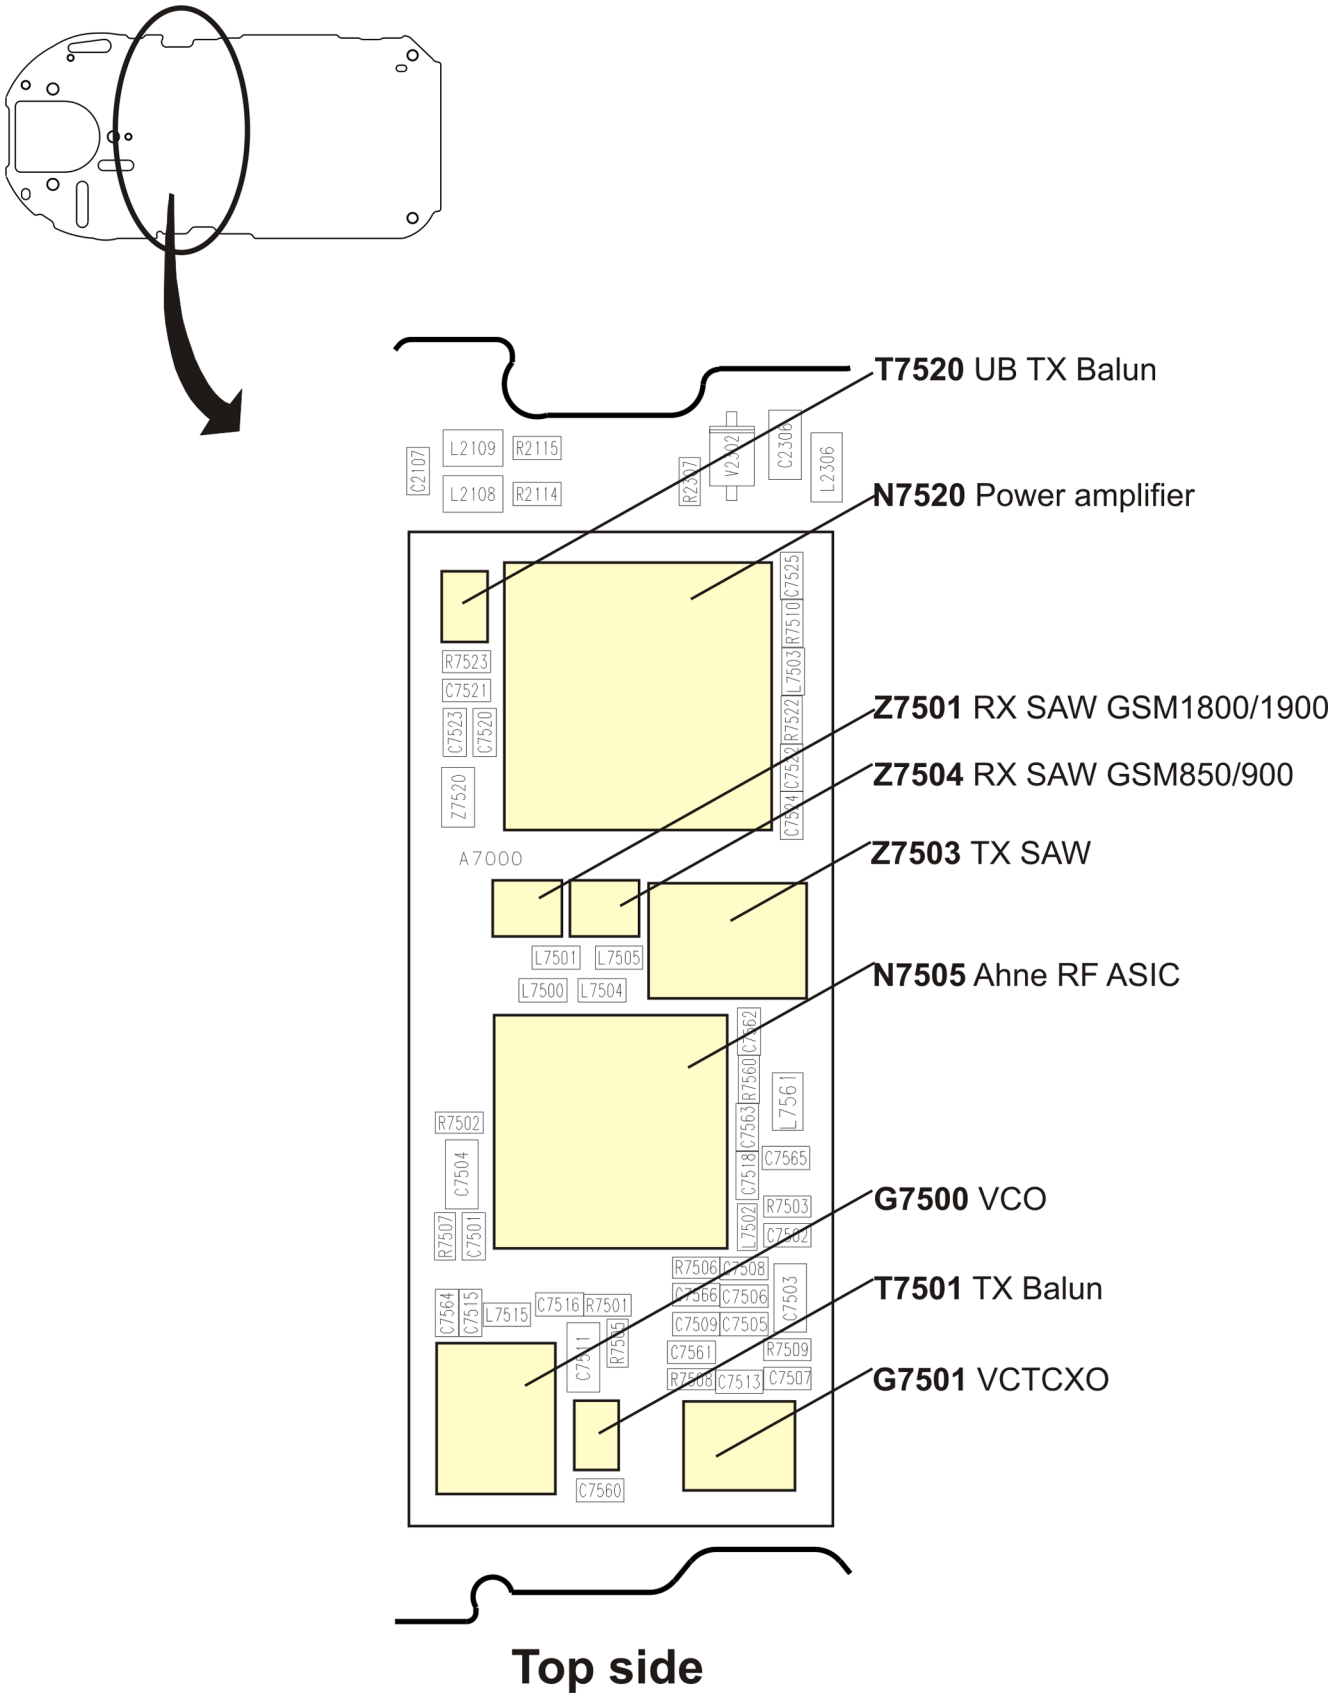

Figure 45 RF key components on main board (bottom side)

Copyright © 2006 Nokia. All rights reserved.

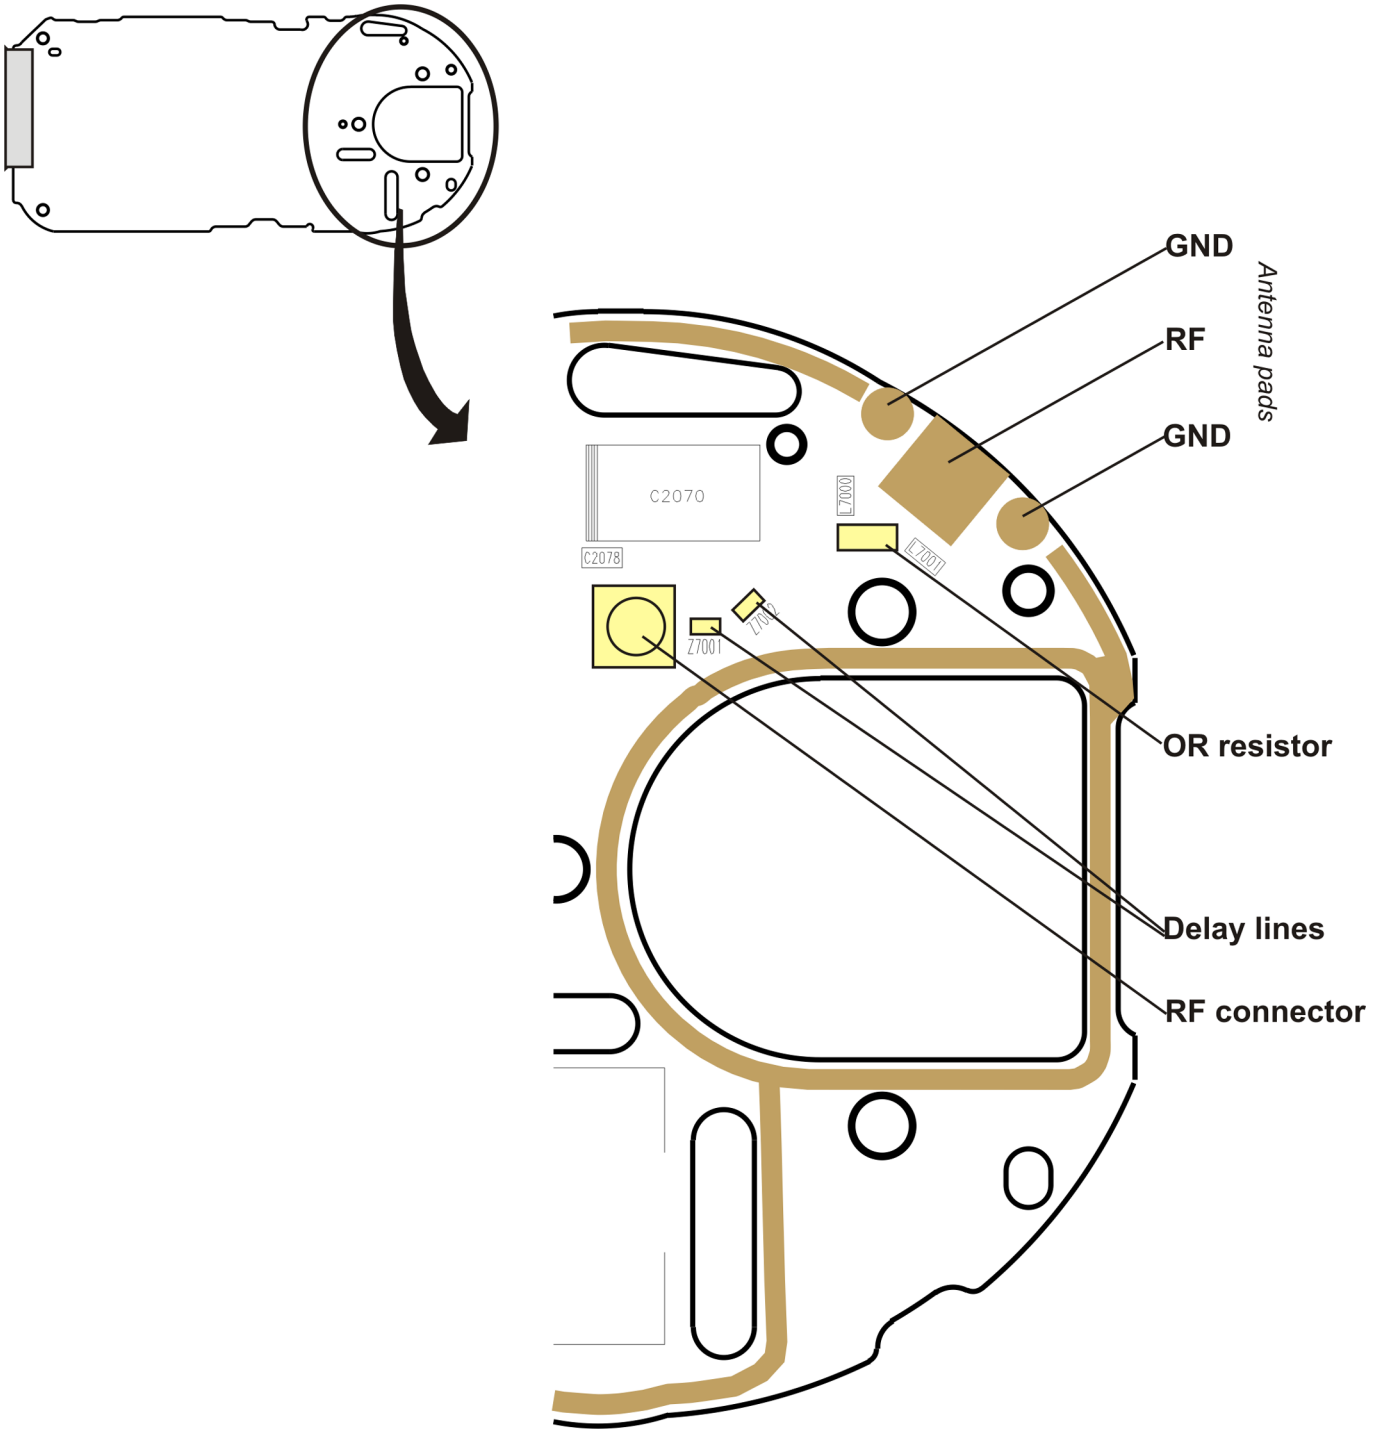

Figure 46 RF key components on main board (top side)

Receiver troubleshooting

Introduction to RX troubleshooting

Rx can be tested by making a phone call or in the local mode. For the local mode testing, use Phoenix service software.

The main Rx troubleshooting measurement is RSSI measurement. This test measures the signal strength of the received signal. I and Q branches can be measured separately.

Copyright © 2006 Nokia. All rights reserved.

In GSM, the input signal can be either a real GSM signal or a CW signal that is 67.771kHz up from the carrier frequency.

For service tool usage instructions, refer to section Service Tools and Service Concepts.

General instructions for RX troubleshooting

Steps

1. Connect a test jig to a computer with a DAU-9S cable or to a FPS-10 flash prommer with a modular cable (XCS-4).

   Make sure that you have a PKD-1 dongle connected to the computer's parallel port.
2. Connect CU-4 with 12 V supply. The DC supply voltage is set to 3.7 V by default (in Phoenix).
3. Connect an RF cable between the RF connector of the module test jig (MJ-117) and measurement equipment or alternatively use a 50 Ω (at least 2 W) dummy load in the module test jig RF connector, otherwise the RF part may be damaged.

   Note: Make sure that all connections are made to the correct RF connector.
4. Set Rx on.
   i Set the phone module to the test jig and start *Phoenix service software*.
   ii Initialize connection to the phone. (With the FPS-10 prommer use FPS10_USB or FPS10_TCP drivers, depending on connection type. When using DAU-9S select FBUS).
   iii From the File menu, choose product: **File -> Choose Product -> xx-x*** (* = type designator of the phone, eg. RM-209), or press **Ctrl + R** to scan product.
   iv From the toolbar, set operating mode to “Local”.
5. EGSM900/1800/1900 troubleshooting
   i From the Testing menu, activate the *RF Controls* window: **Testing -> GSM -> RF Controls** .

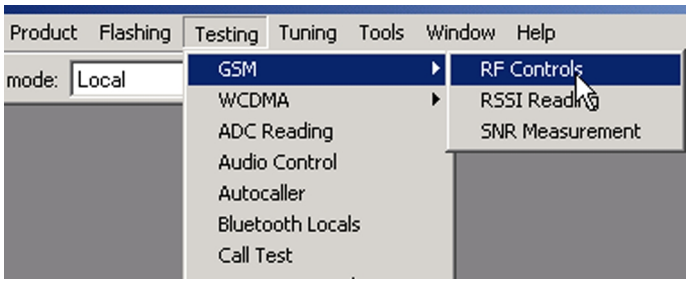

   ii In the *RF Controls* window:
   - Select band (Default = “GSM900”).
   - Set Active unit to “Rx” (Default).
   - Set Operation mode to “Burst” (Default).
   - Set Rx/Tx channel (see table below).
   - Apply a frequency (see table below) to the RF-connector.

     Note: Remember to compensate for cable attenuation, specific for MJ-117. You will find the values in the Service tools section.

     Apply 942.46771 MHz (channel 37 + 67.710 kHz offset), MHz (channel 700 + 67.710 kHz offset) or MHz (channel 661 + 67.71 kHz) –90 dBm signal to the RF-connector (remember to compensate for cable attenuation).

Copyright © 2006 Nokia. All rights reserved.

Band	Channel (RX and TX)	Input frequency (MHz)	Offset (kHz)	Power level (dBm)
GSM900	37	942.46771	67.710	-90
GSM1800	700	1842.86771	67.710	-90
GSM1900	661	1960.06771	67.710	-90

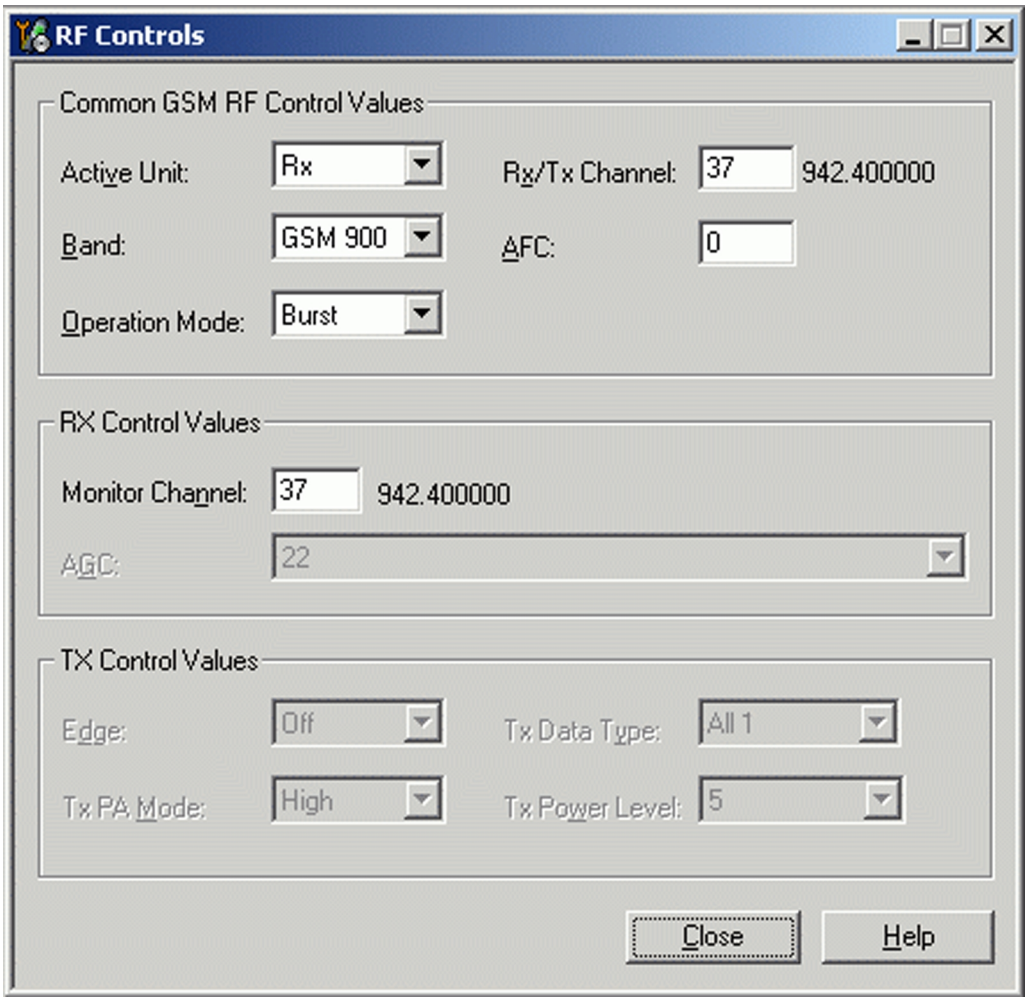

Figure 47 RF Controls window

Reciever (RX) troubleshooting

Context

Troubleshoot one band at a time. Start with the GSM900 and end with GSM1900.

Receiver troubleshooting

Apply a signal according to the table in General instructions for RX troubleshooting (page 7–8)

Copyright © 2006 Nokia. All rights reserved.

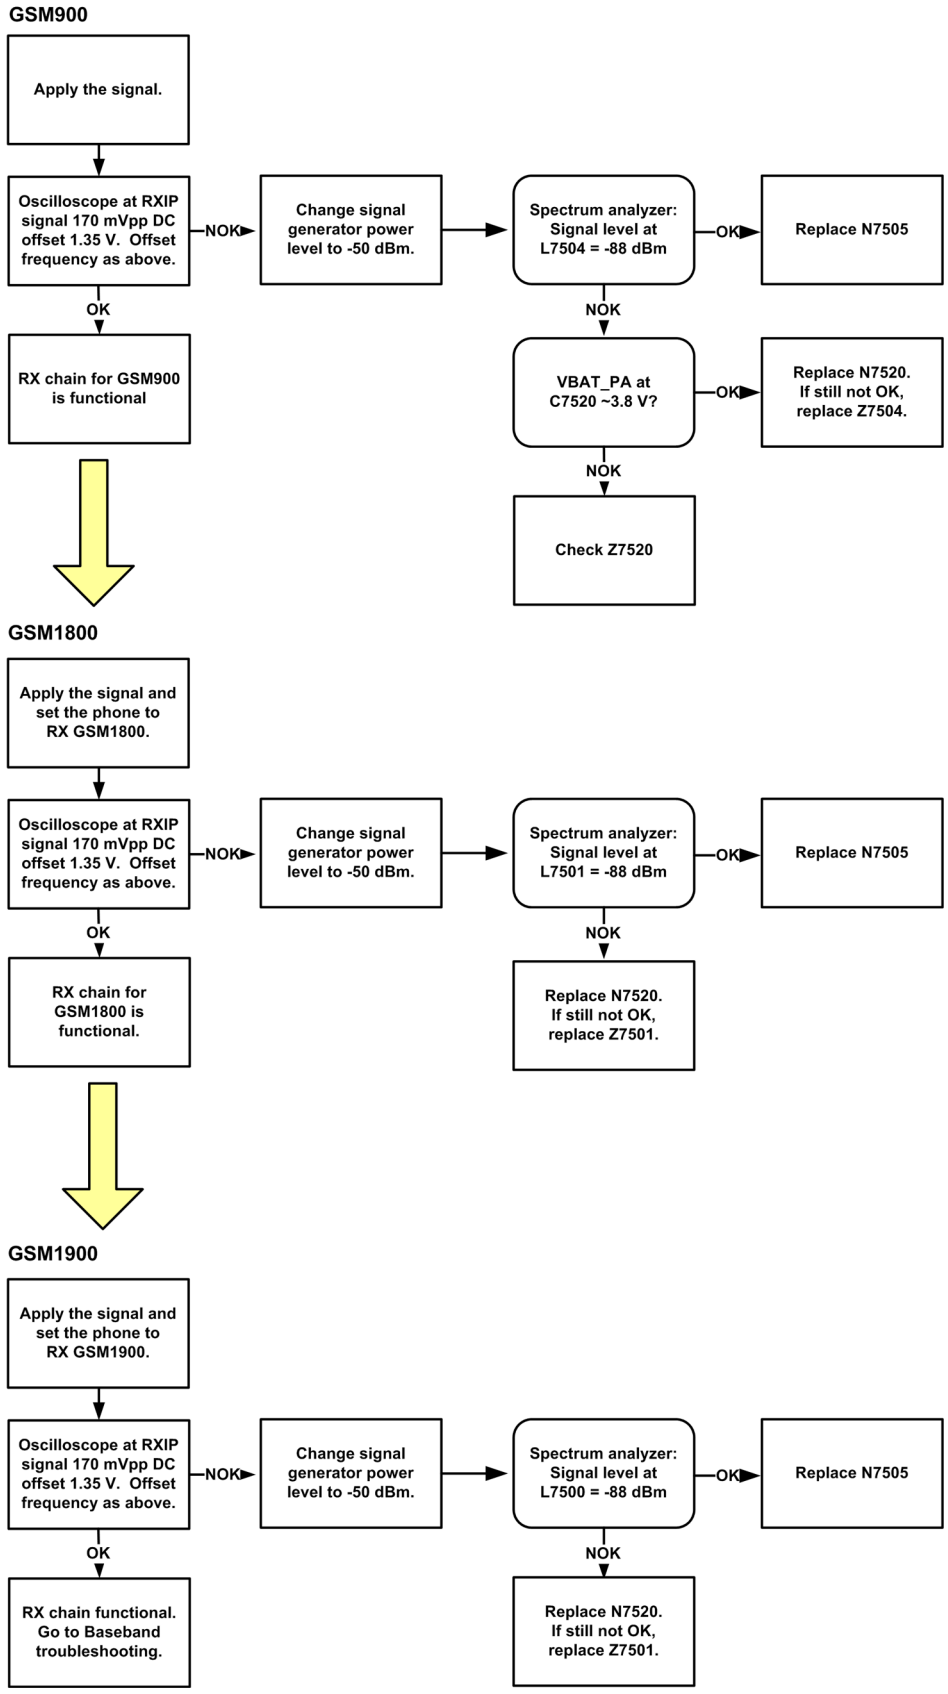

Copyright © 2006 Nokia. All rights reserved.

GSM Rx chain activation for manual measurements / GSM RSSI measurement

Context

RSSI signal measurement is the main Rx troubleshooting measurement. The test measures the strength of the received signal.

I and Q branches can be measured separately. In GSM, the input signal can be either real GSM signal or a CW (Continuous Wave) signal that is 67.771 kHz above the carrier frequency.

Steps

1. Start *Phoenix* service software.
2. Choose **Testing→GSM→RSSI Reading** .
3. Set the RF signal generator for channel frequency +67.771 kHz CW mode with –80 dBm signal.

   Alternatively set the cellular tester downlink channel to the appropriate channel. Make sure that the tester is set to continuous mode, not to burst mode.
4. In the *RSSI Reading* window, select the appropriate band and channel.

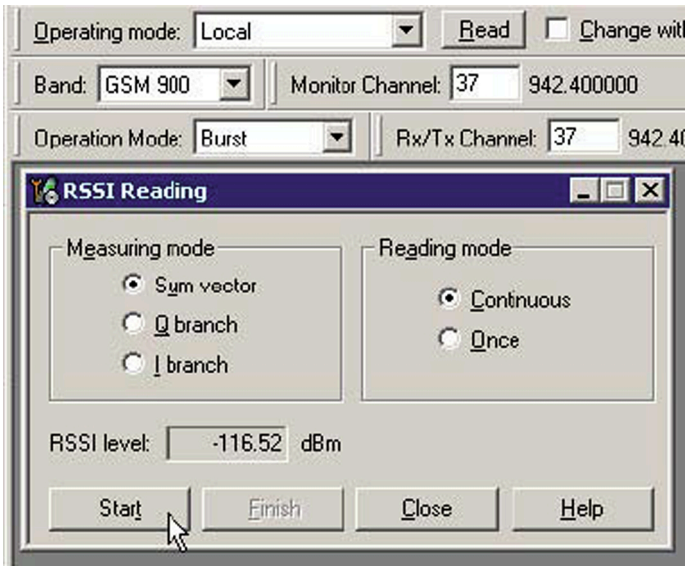

Figure 48 *RSSI Reading* window

5. To start the measurement, activate GSM Rx chain, click **Start**.

Results

RSSI reading values of the selected band and channel are displayed. The RSSI level must be the same value which is set at the signal generator (-80 dBm).

Transmitter troubleshooting

General instructions for TX troubleshooting

Context

- Tx troubleshooting requires Tx operation.
- Do not transmit on frequencies that are in use!
- Transmitter can be controlled in the local mode for diagnostic purposes.
- The most useful Phoenix tool for GSM transmitter testing is "RF Controls".

Copyright © 2006 Nokia. All rights reserved.

- Tx IQ tuning and Tx power tuning can be also used in some cases.
- Remember that retuning is not a fix! Phones are tuned correctly in production.

The first set of steps instructs how to assemble the test setup. This setup is general for all Tx troubleshooting tasks.

Alternative steps provide specific troubleshooting instructions for *Phoenix* service software.

> **Caution:** Never activate the GSM transmitter without a proper antenna load. There should be always 50 Ω load connected to the RF connector (antenna, RF-measurement equipment or at least 2 W dummy load), otherwise the GSM Power amplifier may be damaged.

Steps

1. Connect a test jig to a computer with a DAU-9S cable or to a FPS-8 flash prommer with a modular cable (XCS-4).

   Make sure that you have a PKD-1 dongle connected to the computer's parallel port.
2. Connect CU-4 with 12 V supply. The DC supply voltage is set to 3.7 V by default (in Phoenix).
3. Connect an RF cable between the RF connector of the module test jig (MJ-117) and measurement equipment or alternatively use a 50 Ω (at least 2 W) dummy load in the module test jig RF connector, otherwise GSM may be damaged.

   > **Note:** There are two antenna connectors in the module jig:
   > - one for GSM
   > - one for Bluetooth
   >
   > Make sure that all connections are made to the correct RF connector.

   Normally a spectrum analyser is used as measurement equipment.

   > **Note:** The maximum input power of a spectrum analyser is +30 dBm.
   >
   > To prevent any damage, it is recommended to use 10 dB attenuator on the spectrum analyzer input.
4. Set Tx on.
   i Set the phone module to the test jig and start *Phoenix service software*.
   ii Initialize connection to the phone. (With FPS-8 use Combox driver. When using DAU-9S select FBUS driver).
   iii From the File menu, choose product: **File -> Choose Product -> xx-x*** (* = type designator of the phone)RM-209), or press**Ctrl + R** to scan product.
   iv From the toolbar, set operating mode to “Local”.
5. EGSM900/1800/1900 troubleshooting
   i From the Testing menu, activate the *RF Controls* window: **Testing -> GSM -> RF Controls** .

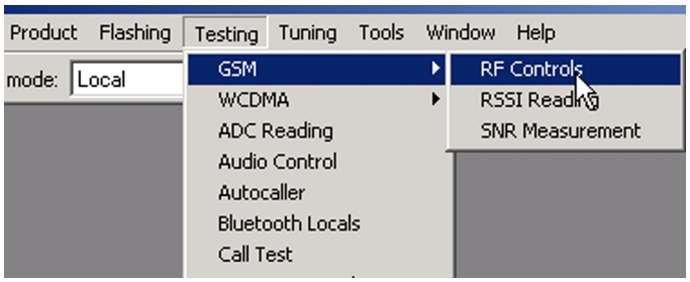

   ii In the *RF Controls* window:
   - Select band “GSM900” or “GSM1800” or “GSM1900” (Default = “GSM900”).
   - Set Active unit to “Tx” (Default = “Rx”).

Copyright © 2006 Nokia. All rights reserved.

- Set Operation mode to “Burst” (Default).
- Set Tx data type to “All1” (Default).
- Set Rx/Tx channel (see table below)
- Set Edge to “Off” (Default).
- Set Tx PA mode to “High” (Default).
- Set power level (see table below)

Band	Channel (RX and TX)	TX power level
GSM900	37	5
GSM1800	700	0
GSM1900	661	0

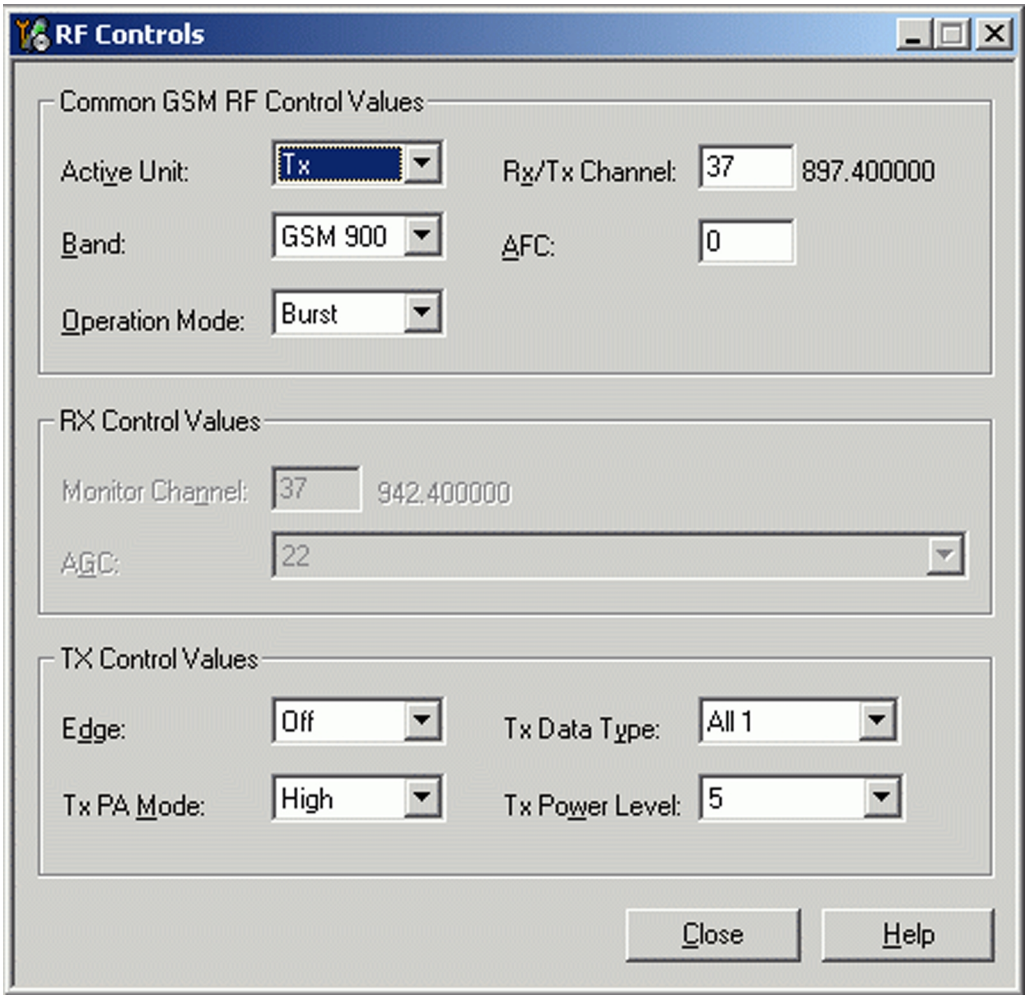

Figure 49 RF Controls window

Copyright © 2006 Nokia. All rights reserved.

Transceiver (TX) troubleshooting

Troubleshooting flow

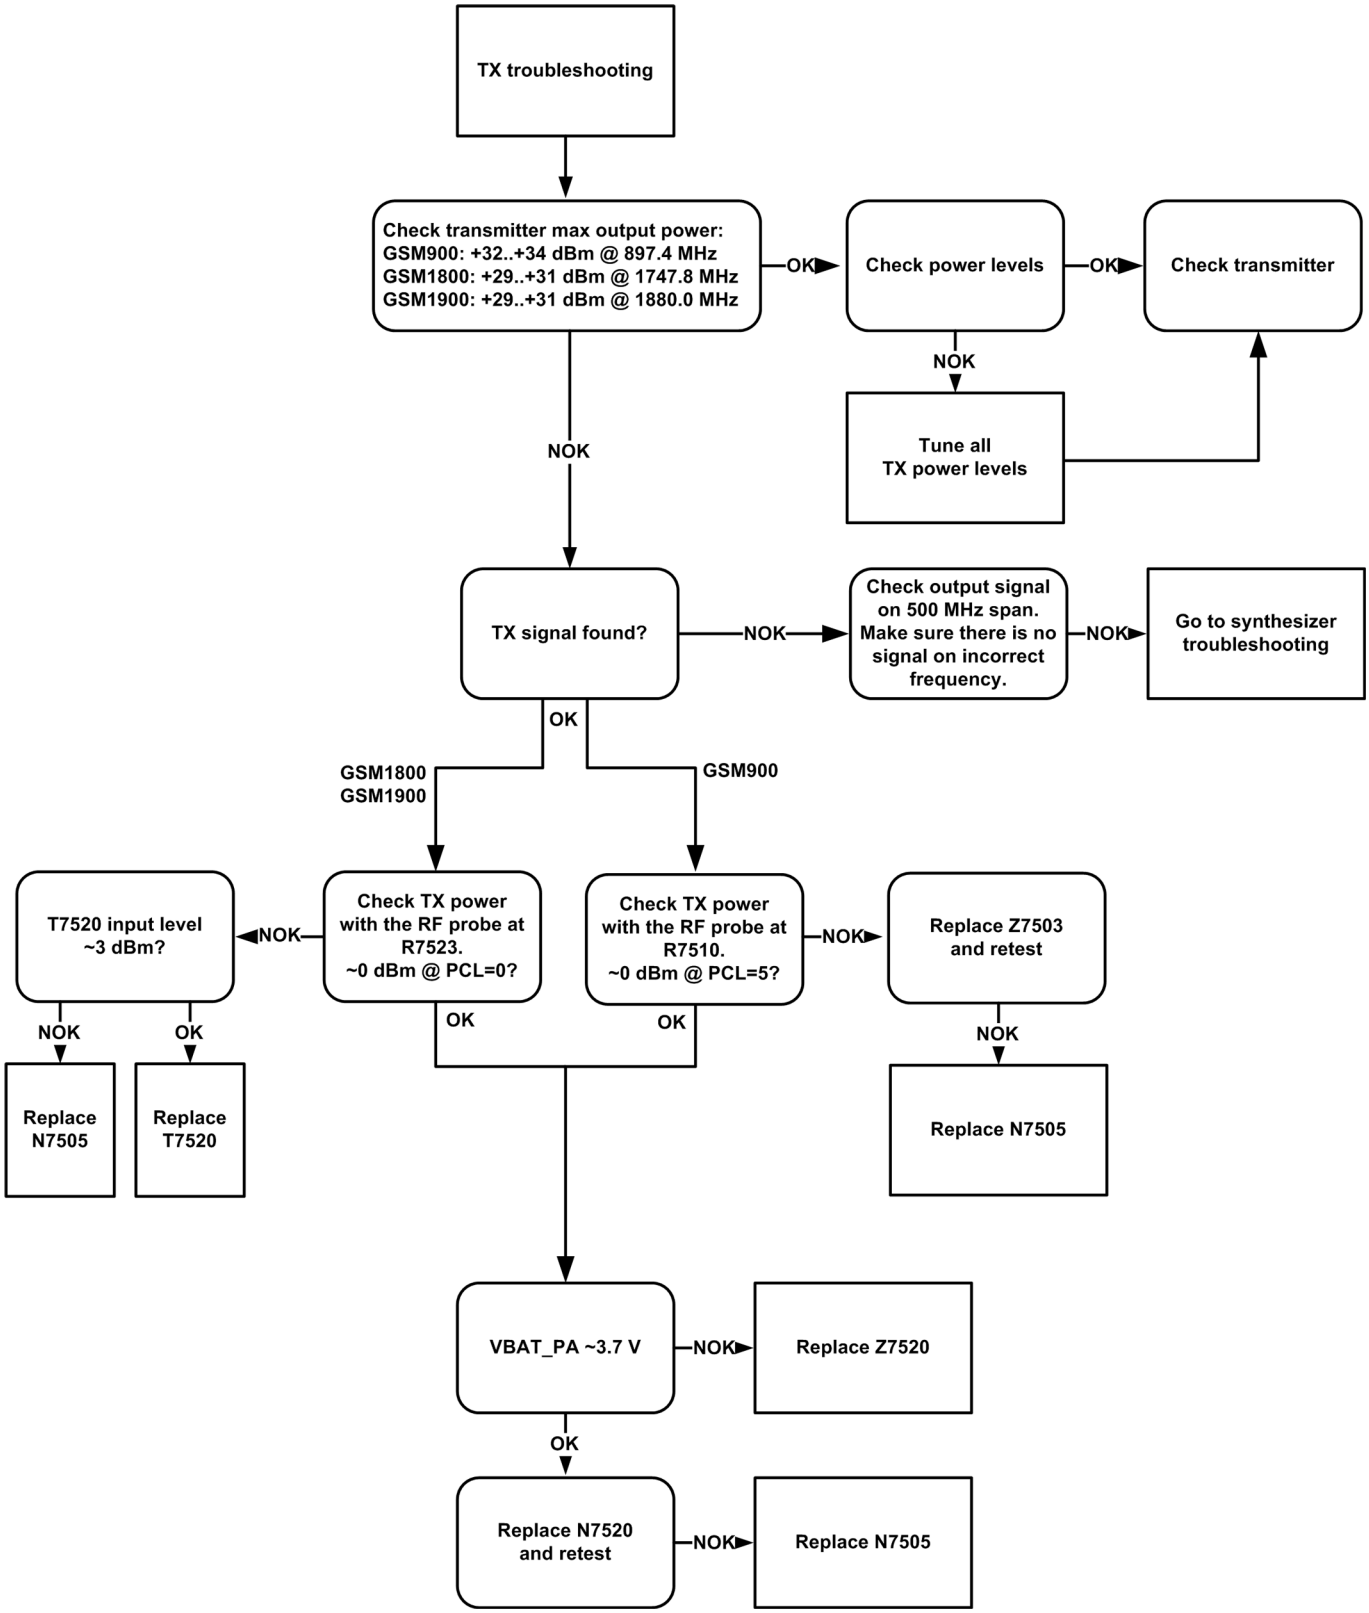

Copyright © 2006 Nokia. All rights reserved.

Checking antenna functionality

In the antenna, there is one Feed and two GND contacts.

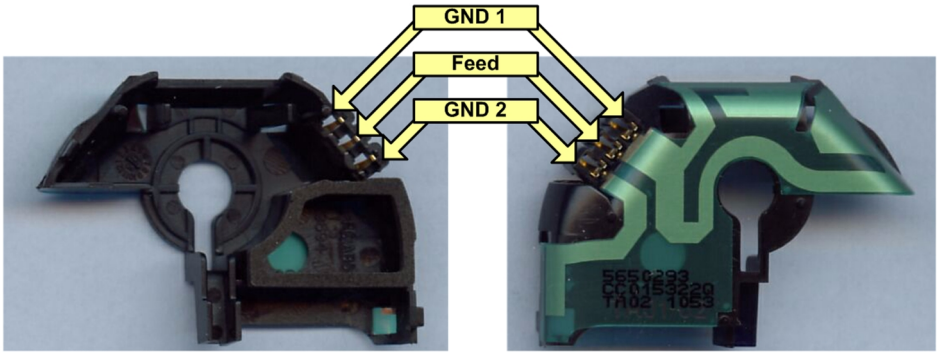

Figure 50 Antenna module

Between GND1 and Feed, a DC short-circuit can be measured.

GND2 has no DC connection to the other contacts.

The antenna is functioning normally when the contacts function (Feed-GND1 = 0 Ω) Also check visually to make sure that the antenna is intact.

Copyright © 2006 Nokia. All rights reserved.

Synthesizer troubleshooting

Synthesizer troubleshooting

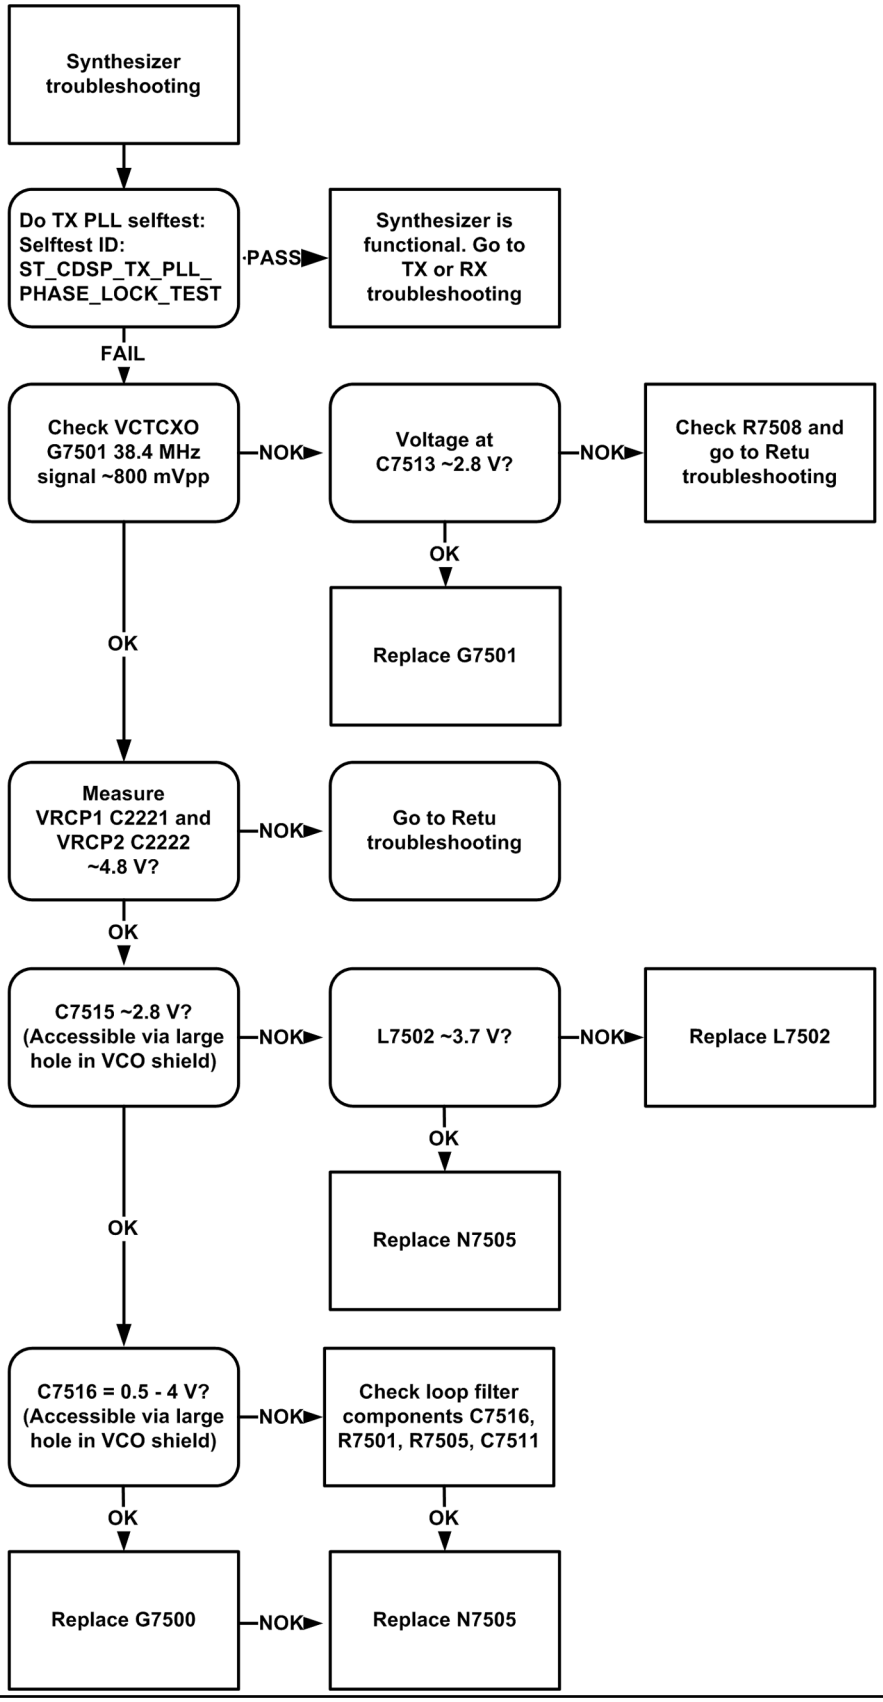

Copyright © 2006 Nokia. All rights reserved.

RF tunings

Introduction to RF tunings

Important: Only perform RF tunings if:

- one or more of the RF components have been replaced
- flash memory chip is replaced or corrupted.

RF calibration is always performed with the help of a product-specific module jig (MJ-117), never with an RF coupler. Using an RF coupler in the calibration phase will cause a complete mistuning of the RF part.

Important: After RF component replacements, **always** use autotuning. Manual tunings are only required in rare cases.

Cable and adapter losses

RF cables and adapters have some losses. They have to be taken into account when the phone is tuned. As all RF losses are frequency dependent, the user has to act very carefully and understand the measurement setup.

For RF attenuations of the module jig, please refer to the Service tools section.

Auto tuning for BB5.0

This phone can be tuned automatically.

Autotune is designed to align the phone's RF part easier and faster. It performs calibrations, tunings and measurements of RX and TX. The results are displayed and logged in a result file, if initiated.

Hardware set up

Hardware requirements for auto tuning:

- PC (Windows 2000/XP) with GPIB card
- Power supply
- Product specific module jig
- Cables: XRF-1 (RF cable), USB cable, GBIP cable and DAU-9S
- Signal analyser (TX), signal generator (RX) and RF-splitter *or* one device including all.

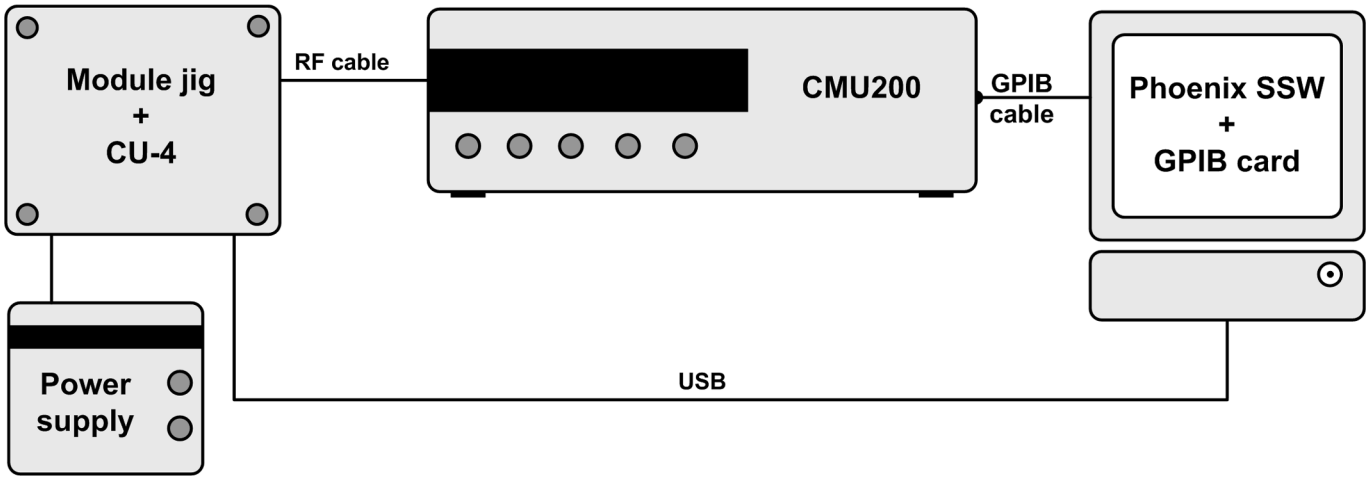

Figure 51 Auto tuning concept with CMU200

Copyright © 2006 Nokia. All rights reserved.

Phoenix preparations

Install the phone specific data package, for example *RM-209_dp_1.78_sw_sh3.26.exe*. This defines phone specific settings..

Auto tuning procedure

1 Make sure the phone (in the jig) is connected to the equipment. Else, some menus will not be shown in Phoenix.

2 To go to autotune, select *Tuning (Alt-U)* > *Auto-Tune (Alt-A)* from the menu.

3 Start autotuning, clicking the *Tune* button.

System mode independent manual tunings

RF channel filter calibration

Context

Rf channel filter calibration tunes the internal low pass filters of the RF ASIC, that limit the bandwidth of BB IQ signals.

Table 13 Rf channel filter calibration tuning limits

	Min	Typ	Max
Tx filter	0	10	31
RX mixer	0	13	31
Rx filter	0	16	31

Steps

1. From the **Operating mode** drop-down menu, set mode to **Local**.
2. Choose **Tuning→Rf Channel Filter Calibration** .
3. Click **Tune**.
4. To save the values to the PMM (Phone Permanent Memory) area, click **Write**.
5. To close the *Rf Channel Filter Calibration* window, click **Close**.

Results

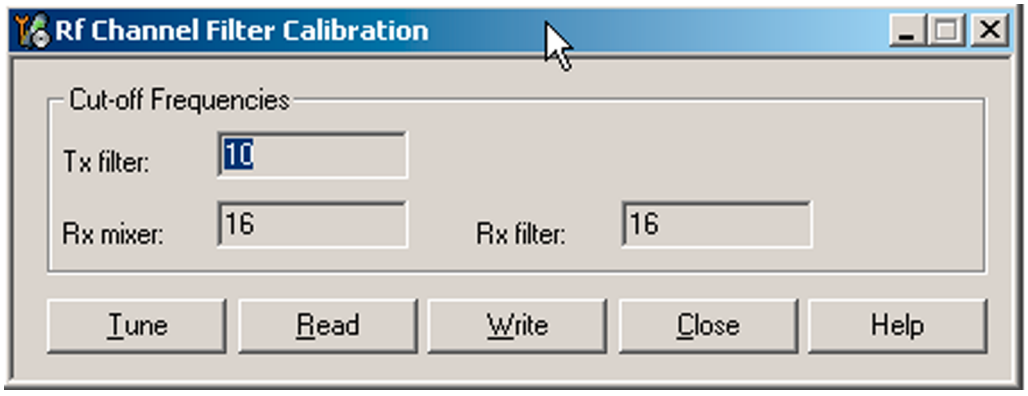

Figure 52 Rf channel filter calibration typical values

Copyright © 2006 Nokia. All rights reserved.

PA (power amplifier) detection

Context

The PA detection procedure detects which PA manufacturer is used for phone PAs.

If a PA is changed or if the permanent memory (PMM) data is corrupted, PA detection has to be performed before Tx tunings.

Steps

1. From the **Operating mode** drop-down menu, set mode to **Local**.
2. Choose **Tuning→PA Detection** .
3. Click **Tune**.
4. Check that the detected PA manufacturers are corresponding to the actual chips on the board.
5. To end the procedure, click **Close**.

GSM receiver tunings

Rx calibration (GSM)

Context

Rx Calibration is used to find out the real gain values of the GSM Rx AGC system and tuning response of the AFC system (AFC D/A init value and AFC slope)

Steps

1. Connect the GSM connector of the module jig to a signal generator.
2. Start *Phoenix* service software.
3. From the **Operating mode** drop-down menu, set mode to **Local**.
4. Choose **Tuning→GSM→Rx Calibration** .

Copyright © 2006 Nokia. All rights reserved.

5. Click **Start**.

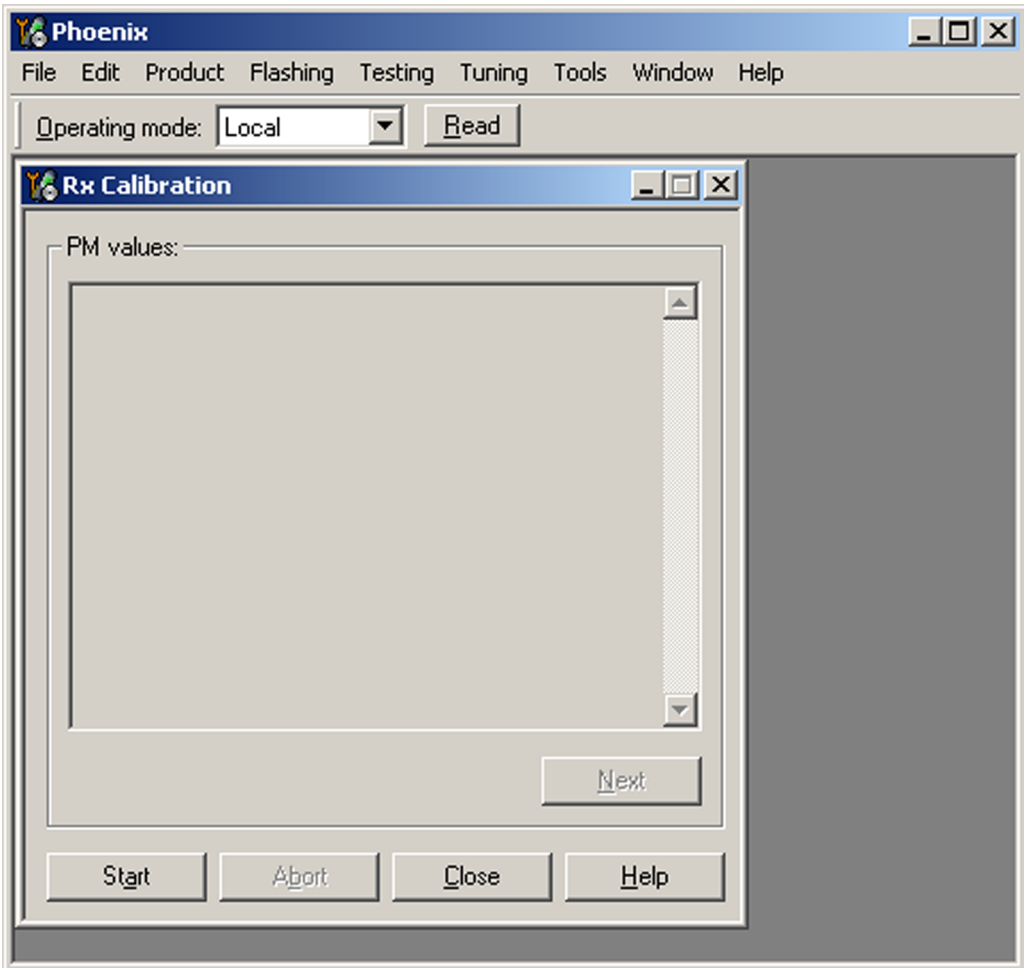

6. Connect the signal generator to the phone, and set frequency and amplitude as instructed in the **Rx Calibration with band EGSM900** (step 1-3) pop-up window.

   Important: The calibration uses a non-modulated CW signal. Increase the signal generator level by cable attenuation and module jig probe attenuation.

Copyright © 2006 Nokia. All rights reserved.

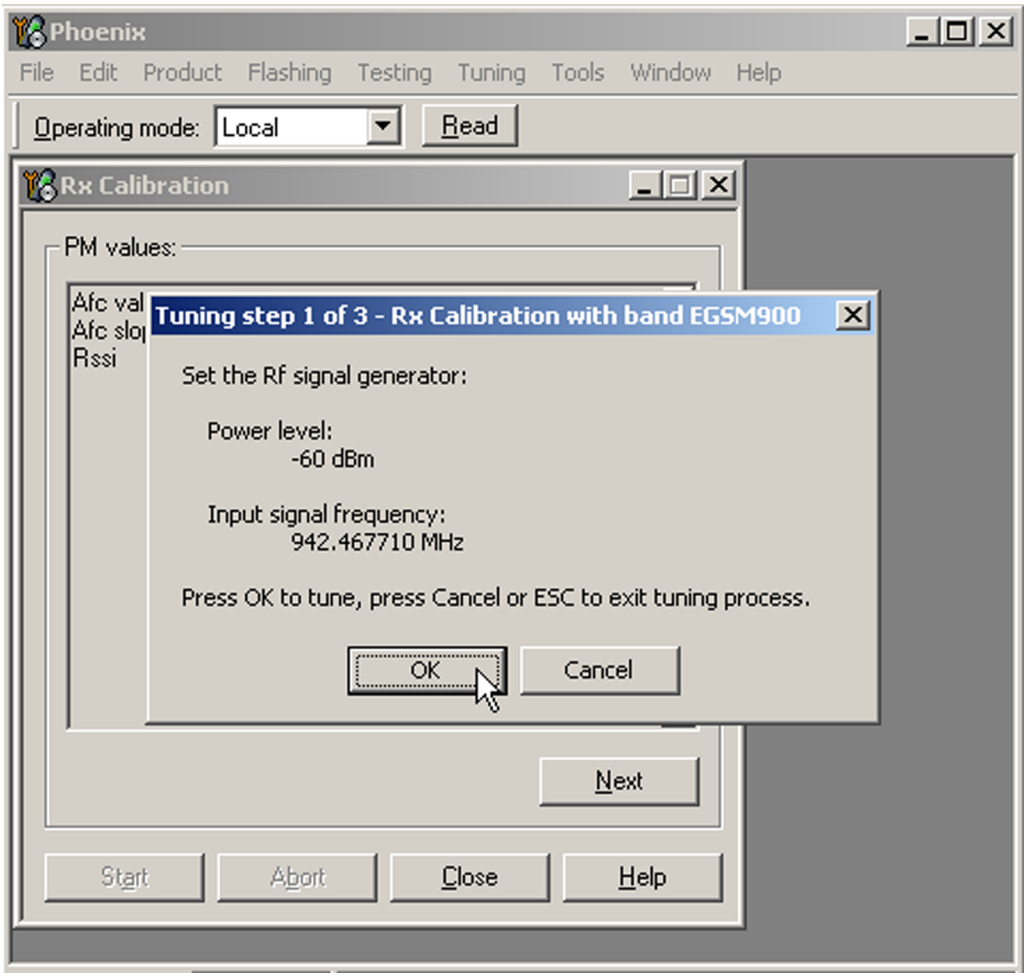

7. To perform the tuning, click **OK**.
8. Check that the tuning values are within the limits specified in the following table:

Table 14 RF tuning limits in Rx calibration

	Min	Typ	Max	Unit
GSM900				
AFC Value	-200	-105...62	200	
AFC slope	0	122	200	
RSSI0	106	107...110	114	dB
GSM1800				
RSSI0	104	104...109	114	dB
GSM1900				
RSSI0	104	104...109	114	dB

Copyright © 2006 Nokia. All rights reserved.

9. Click **Next** to continue with GSM1800 Rx tuning.

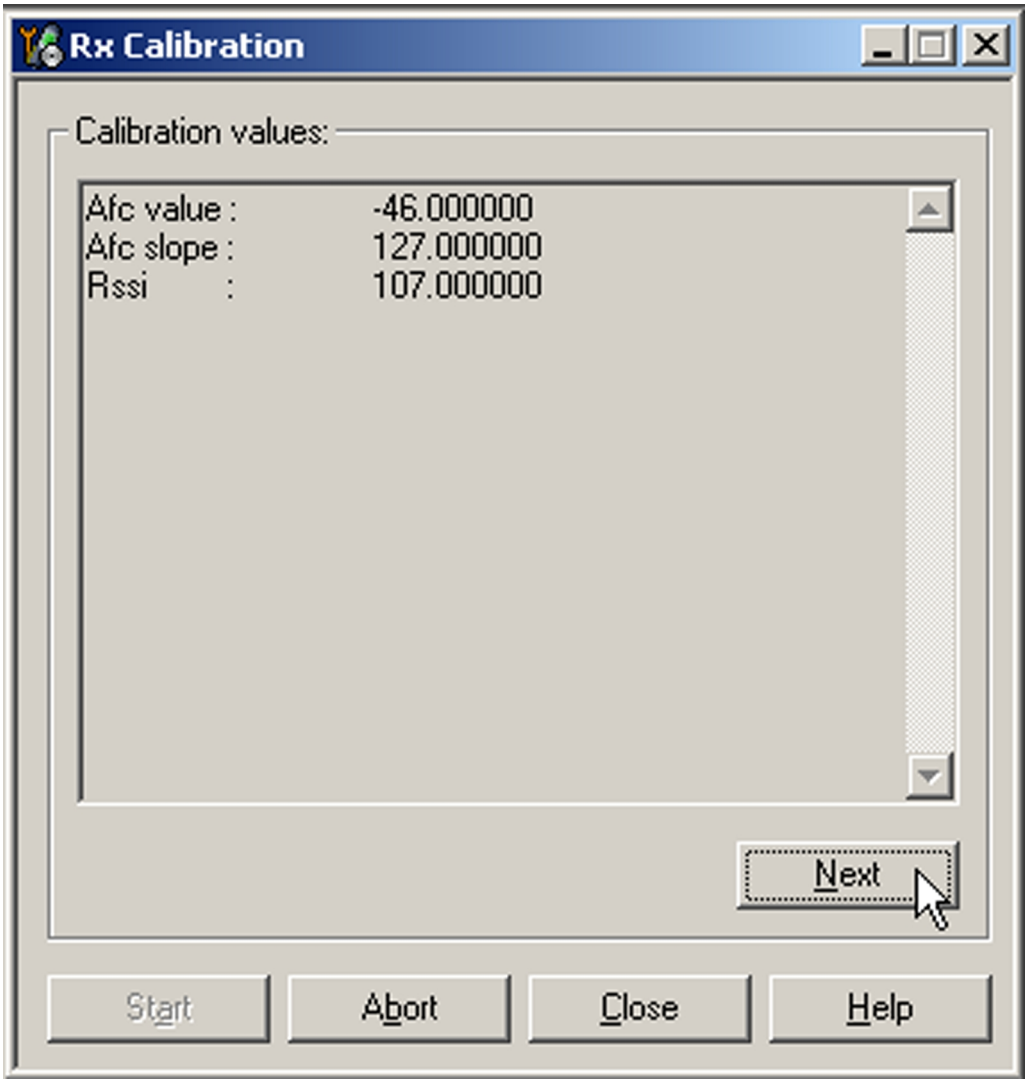

Next actions

Repeat steps 6 to 9for GSM1800 and GSM1900

Rx band filter response compensation (GSM)

Prerequisites

Rx calibration must be performed before the Rx band filter response compensation.

Context

On each GSM Rx band, there is a band filter in front of the RF ASIC front end. The amplitude ripple caused by these filters causes ripple to the RSSI measurement, and therefore calibration is needed.

The calibration has to be repeated for each GSM band.

Steps

1. Connect the GSM connector of the module jig to a signal generator.
2. Start *Phoenix* service software.
3. From the **Operating mode** drop-down menu, set mode to **Local**.

Copyright © 2006 Nokia. All rights reserved.

4. Select **GSM900** band.
5. Choose **Tuning→GSM→Rx Band Filter Response Compensation** .
6. Select **Tuning mode: manual**
7. Click **Start**.

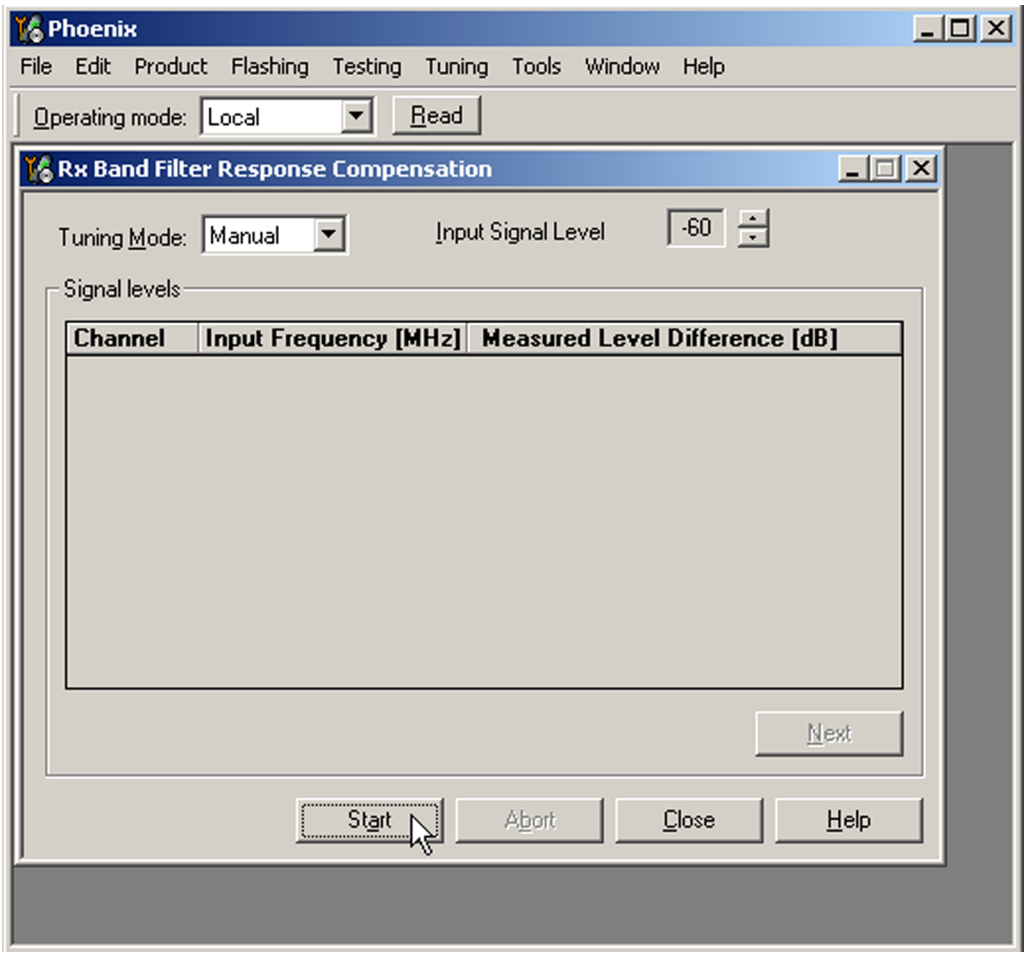

8. Connect the signal generator to the phone, and set frequency and amplitude as instructed in the *Rx Band Filter Response Compensation for EGSM900* pop-up window, step 1-3.

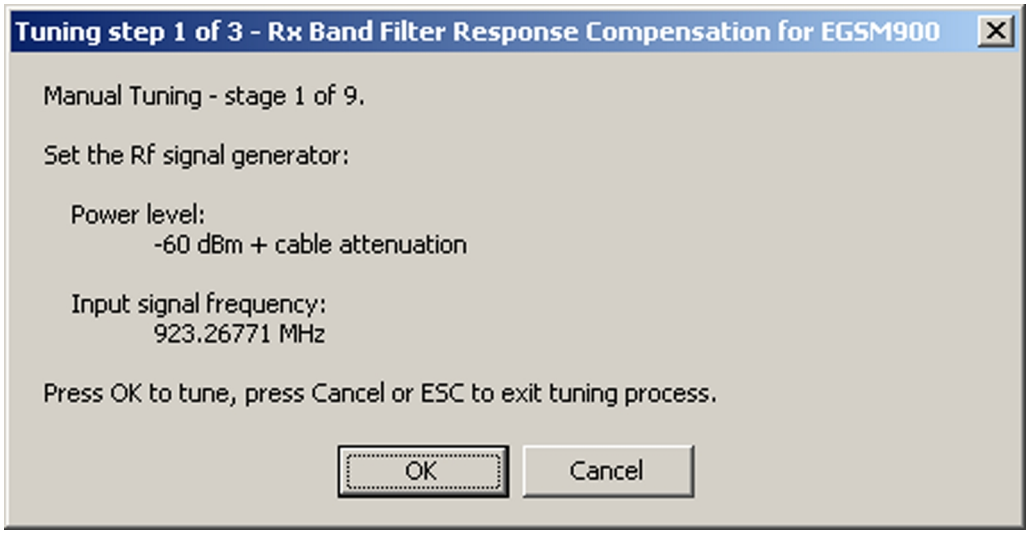

Copyright © 2006 Nokia. All rights reserved.

9. To perform tuning, click **OK**.
10. Go through all 9 frequencies. The following table will be shown:

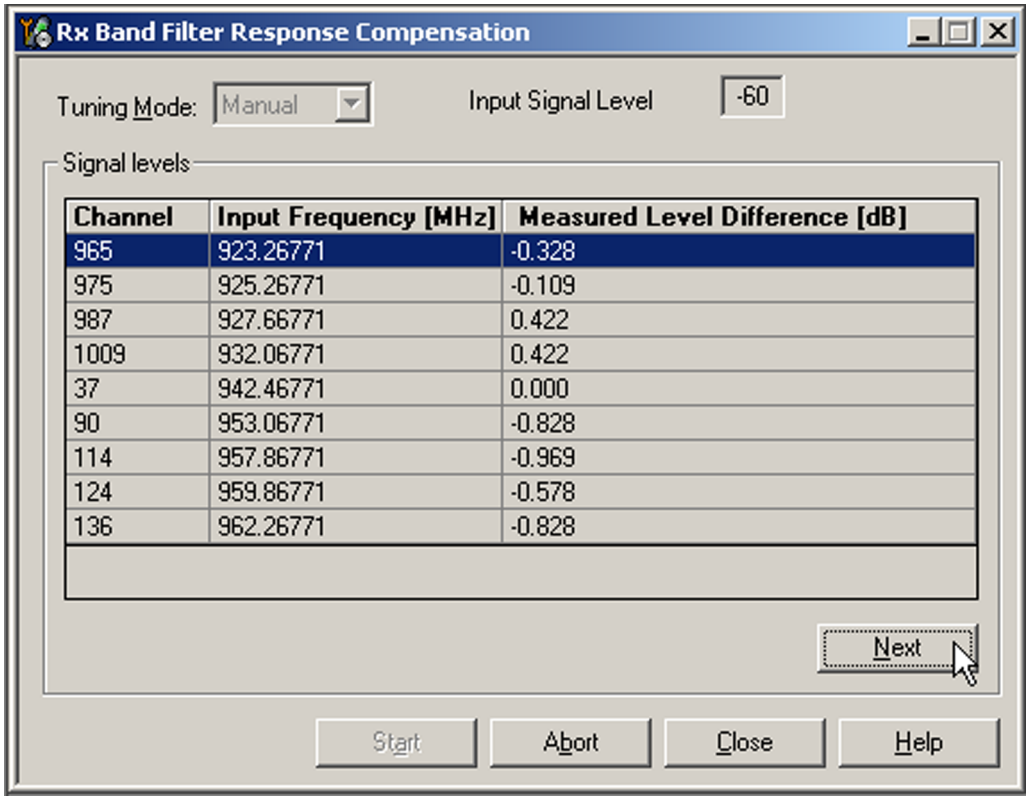

11. Check that the tuning values are within the limits specified in the following table:

	Min	Typ	Max	Unit
GSM900				
Ch. 965 / 923.26771 MHz	-6	-1	2	dB
Ch. 975 / 925.26771 MHz	-3	0	2	dB
Ch. 987 / 927.66771 MHz	-3	0	2	dB
Ch. 1009 / 932.06771 MHz	-2	0	2	dB
Ch. 37 / 942.46771 MHz	-2	0	2	dB
Ch. 90 / 953.06771 MHz	-2	0	2	dB
Ch. 114 / 957.86771 MHz	-3	0	2	dB
Ch. 124 / 959.86771 MHz	-3	0	2	dB

Copyright © 2006 Nokia. All rights reserved.

	Min	Typ	Max	Unit
Ch. 136 / 962.26771 MHz	-6	-1	2	dB
GSM1800				
Ch. 497 / 1802.26771 MHz	-6	-1	3	dB
Ch. 512 / 1805.26771 MHz	-3	0	3	dB
Ch. 535 / 1809.86771 MHz	-3	0	3	dB
Ch. 606 / 1824.06771 MHz	-3	0	3	dB
Ch. 700 / 1842.86771 MHz	-3	0	3	dB
Ch. 791 / 1861.06771 MHz	-3	0	3	dB
Ch. 870 / 1876.86771 MHz	-3	0	3	dB
Ch. 885 / 1879.86771 MHz	-3	0	3	dB
Ch. 908 / 1884.46771 MHz	-6	-1	3	dB
GSM1900				
Ch. 496 / 1927.06771 MHz	-6	-1	2	dB
Ch. 512 / 1930.26771 MHz	-3	0	2	dB
Ch. 537 / 1935.26771 MHz	-3	0	2	dB
Ch. 586 / 1945.06771 MHz	-3	0	2	dB
Ch. 661 / 1960.06771 MHz	-3	0	2	dB
Ch. 736 / 1975.06771 MHz	-3	0	2	dB
Ch. 794 / 1986.66771 MHz	-3	0	2	dB
Ch. 810 / 1989.86771 MHz	-3	0	2	dB
Ch. 835 / 1994.86771 MHz	-6	-1	2	dB

12. If the values are within the limits, click **Next** to continue to the next band.

Copyright © 2006 Nokia. All rights reserved.

Next actions

Repeat the steps 8 to 12 for GSM1800 and GSM1900.

GSM transmitter tunings

Tx IQ tuning (GSM)

Context

The Tx path branches to I and Q signals at RF I/Q modulator. Modulator and analog hardware located after it cause unequal amplitude and phase disturbance to I and Q signal paths. Tx IQ tuning balances the I and Q branches.

Tx IQ tuning must be performed for all GSM bands.

Steps

1. Start *Phoenix* service software.
2. From the **Operating mode** drop-down menu, set mode to **Local**.
3. Choose **Tuning→GSM→Tx IQ Tuning** .
4. Select **Mode: Automatic**.

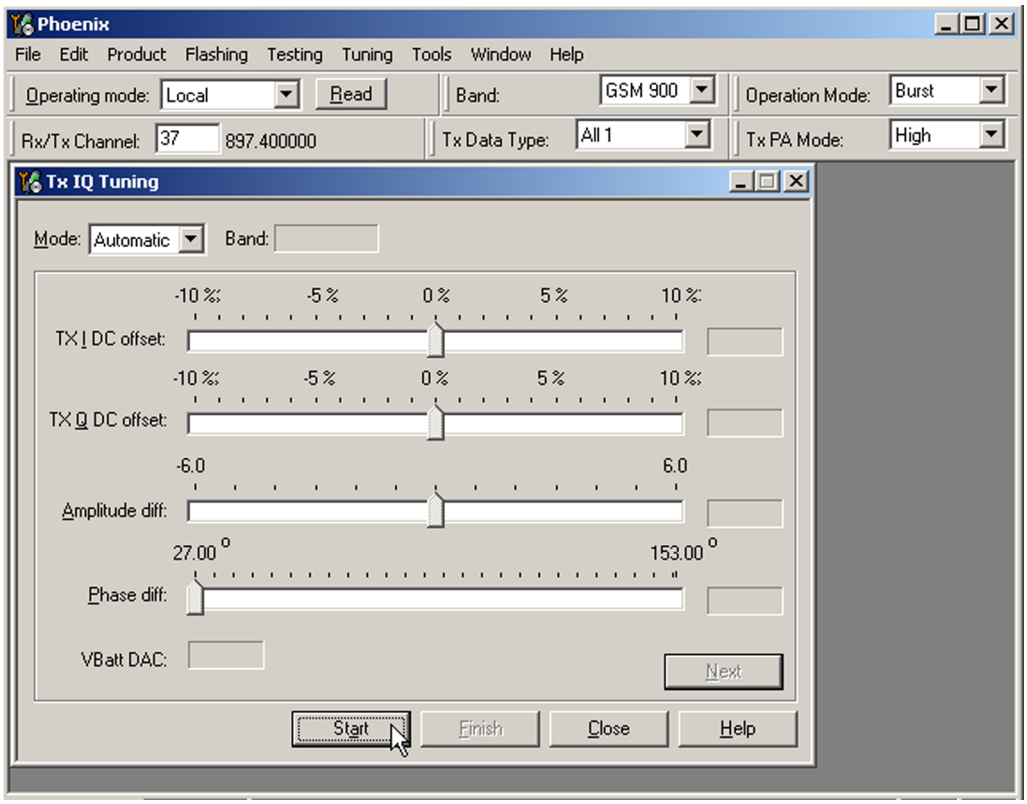

5. Select **Band: GSM900** and click **Start**.
6. Click **Next** to start GSM1800 band TX IQ tuning.
7. Click **Next** to start GSM1900 band TX IQ tuning.
8. Click**Finish** and then **Close**.

Copyright © 2006 Nokia. All rights reserved.

Next actions

Tuning sliders should be close to the center of the scale after the tuning and within the limits specified in the following table. If they are not within the limits, check Tx IQ quality manually.

	Min	Typ	Max	Unit
GSM900				
I DC offset / Q DC offset	-6	-4	6	dB
Ampl	-1	0	1	dB
Phase	85	90	95	dB
GSM1800/GSM1900				
I/Q DC	-6	0.5	6	dB
Ampl	-1	0	1	dB
Phase	95	100	110	dB

Tx power level tuning (GSM)

Context

Because of variations at the IC (Integrated Circuit) process and discrete component values, the actual transmitter RF gain of each phone is different. Tx power level tuning is used to find out mapping factors called 'power coefficients'. These adjust the GSM transmitter output power to fulfill the specifications.

For EDGE transmission, the bias settings of the GSM PA are adjusted in order to improve linearity. This affects the PA gain and hence the power levels have to be aligned separately for EDGE transmission.

Tx power level tuning has to be performed on all GSM bands.

Steps

1. Connect the phone to a spectrum analyzer.
2. Start *Phoenix* service software.
3. From the **Operating mode** drop-down menu, set mode to **Local**.
4. Choose **Tuning→GSM→Tx Power Level Tuning** .

Copyright © 2006 Nokia. All rights reserved.

5. Click **Start**.l

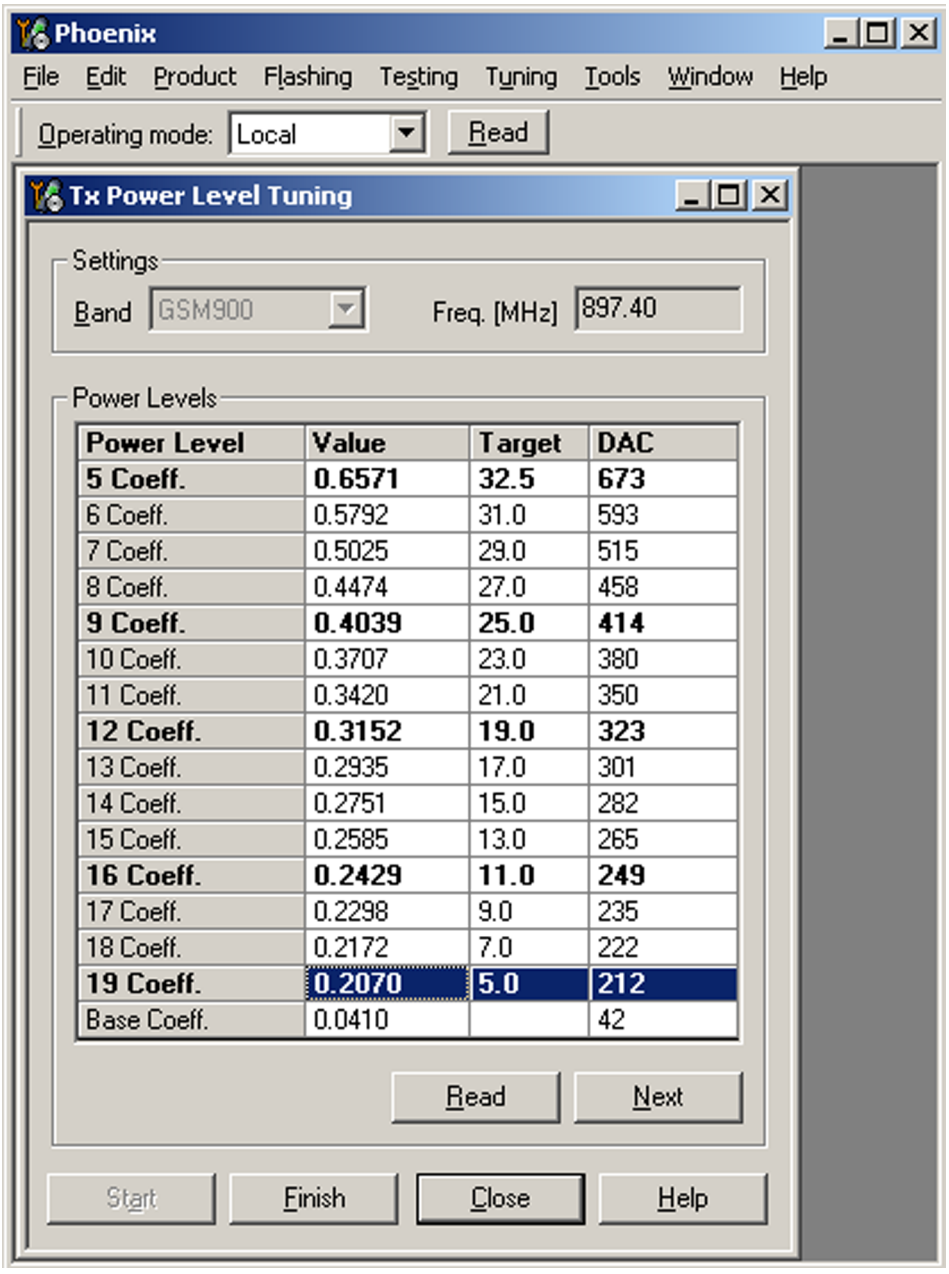

6. Set the spectrum analyzer for power level tuning:

Frequency	Channel frequency: • **897.4MHz GSM900** • **1747.8MHz GSM1800** • **1880MHz GSM1900**
Span	0 Hz
Sweep time	2ms
Trigger	Video triggering (-10dBm)
Resolution BW	3MHz
Video BW	3MHz

Copyright © 2006 Nokia. All rights reserved.

Reference level offset	sum cable attenuation with module jig attenuation
Reference level	33dBm

A power meter with a peak power detector can be also used. Remember to take the attenuations into account.

7. Adjust power for all bold power levels to correspond the **Target dBm** column by pressing **+** or **–** keys.
8. If all bold power levels are adjusted, click **Next** to continue with **GSM900 EDGE**.
9. Adjust power for all bold power levels to correspond the **Target dBm** column by pressing **+** or **–** keys.

Next actions

Continue tuning the bold power levels of the GSM1800 and GSM1900 bands. You will see this message, if finished successfully:

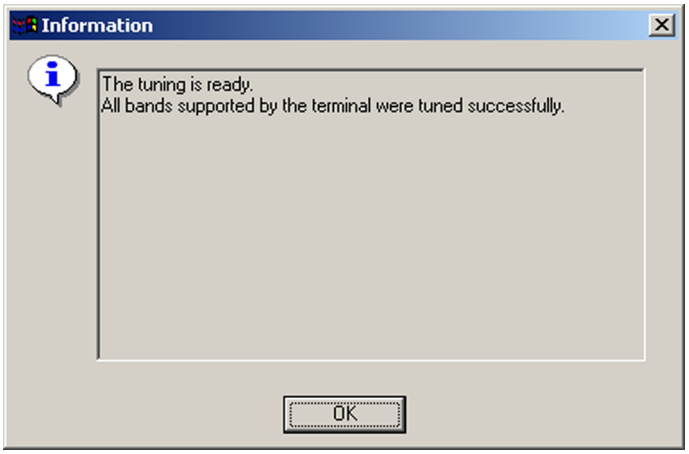

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

8 — System module

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Phone description....8–5
Engine....8–8
Engine modules....8–8
RF engine....8–8
Main processor....8–9
Energy management....8–9
Battery and charging....8–10
Test pattern....8–11
Interfaces....8–12
PopPort system connector....8–12
FM radio....8–12
Camera....8–13
SIM....8–13
µSD card interface....8–14
User interface....8–15
User interface....8–15
Swivel switch....8–16
Audio concept....8–17
Audio hardware architecture....8–17
Internal microphone....8–18
External microphone....8–18
Internal earpiece....8–18
Internal speakers....8–18
External earpiece....8–19
Vibra circuitry....8–19
Connections....8–19
USB interface....8–19
Bluetooth....8–20
Technical specifications....8–20
General specifications....8–20
Battery endurance....8–21
Environmental conditions....8–21
Electrical characteristics....8–21
Main RF characteristics....8–22

List of Tables

Table 15 PopPort connector pins and signals....8–12
Table 16 Key signal matrix....8–16
Table 17 Normal and extreme voltages....8–21
Table 18 Channel numbers and frequencies....8–22
Table 19 Main RF characteristics....8–22
Table 20 Transmitter characteristics....8–23
Table 21 Receiver characteristics....8–23

List of Figures

Figure 53 Main board overview....8–6
Figure 54 System module block diagram....8–7
Figure 55 Board and module connections....8–8

Copyright © 2006 Nokia. All rights reserved.

Figure 56 BL-4B battery and battery connector....8–10
Figure 57 Blade battery connector....8–10
Figure 58 Old (left) and new (right) charger plugs....8–11
Figure 59 Test pattern....8–11
Figure 60 PopPort connector pins....8–12
Figure 61 FM radio interface....8–13
Figure 62 Camera interface....8–13
Figure 63 SIM interface connections....8–14
Figure 64 User interface block diagram....8–15
Figure 65 Keyboard layout....8–16
Figure 66 Audio block diagram....8–17
Figure 67 Internal microphone circuitry....8–18
Figure 68 Internal speaker circuitry....8–19
Figure 69 Vibra circuitry....8–19
Figure 70 USB interface to engine....8–20
Figure 71 Bluetooth interface block diagram....8–20

Copyright © 2006 Nokia. All rights reserved.

Phone description

Introduction

This chapter describes the baseband module including engine, power management, interfaces, audio etc.

The baseband is based on BB5.0 with a RAPGSM main processor and Retu/Tahvo energy management. All blocks that require high voltage process are in Tahvo and all other in Retu. The RF part is based on the ASIC Ahne.

This phone operates on the GSM900/1800/1900 bands.

The phone is a swivel phone, with one main part and one movable UI-part. They are connected with a micro coax cable harness.

Main board includes: BB and RF blocks, Bluetooth, FM radio, HWA, camera, etc.

Wing board includes: LCD display and earpiece

Key components

Function	Name	Item
RF ASIC	Ahne	N7505
Energy management	Retu Tahvo	D2200 N2300
Main processor	RAPGSM	D2800
Memory	Combo: 128 Mbit SDRAM & 256 Mbit NOR flash	D3000
Power amplifier	RF9282	N7520
System connector	PopPort	X2001
Battery	BL-4B, 3.7 V, 700 mAh, Li-ion	
Swivel detection	2 Hall ICs and 2 permanent magnets	
Bluetooth	BC4-ROM	N6030
FM radio	TEA5761, single chip	N6156
Stereo IHF Speaker	13mm ALE	I202
Earpiece	7/11	B2101
Microphone		I203
Vibra		M2100
Charger connector	2 mm Nokia charger interface	X2000
Camera	2 Mpix SMIA85, no flash light	X3300

Copyright © 2006 Nokia. All rights reserved.

Main board overview

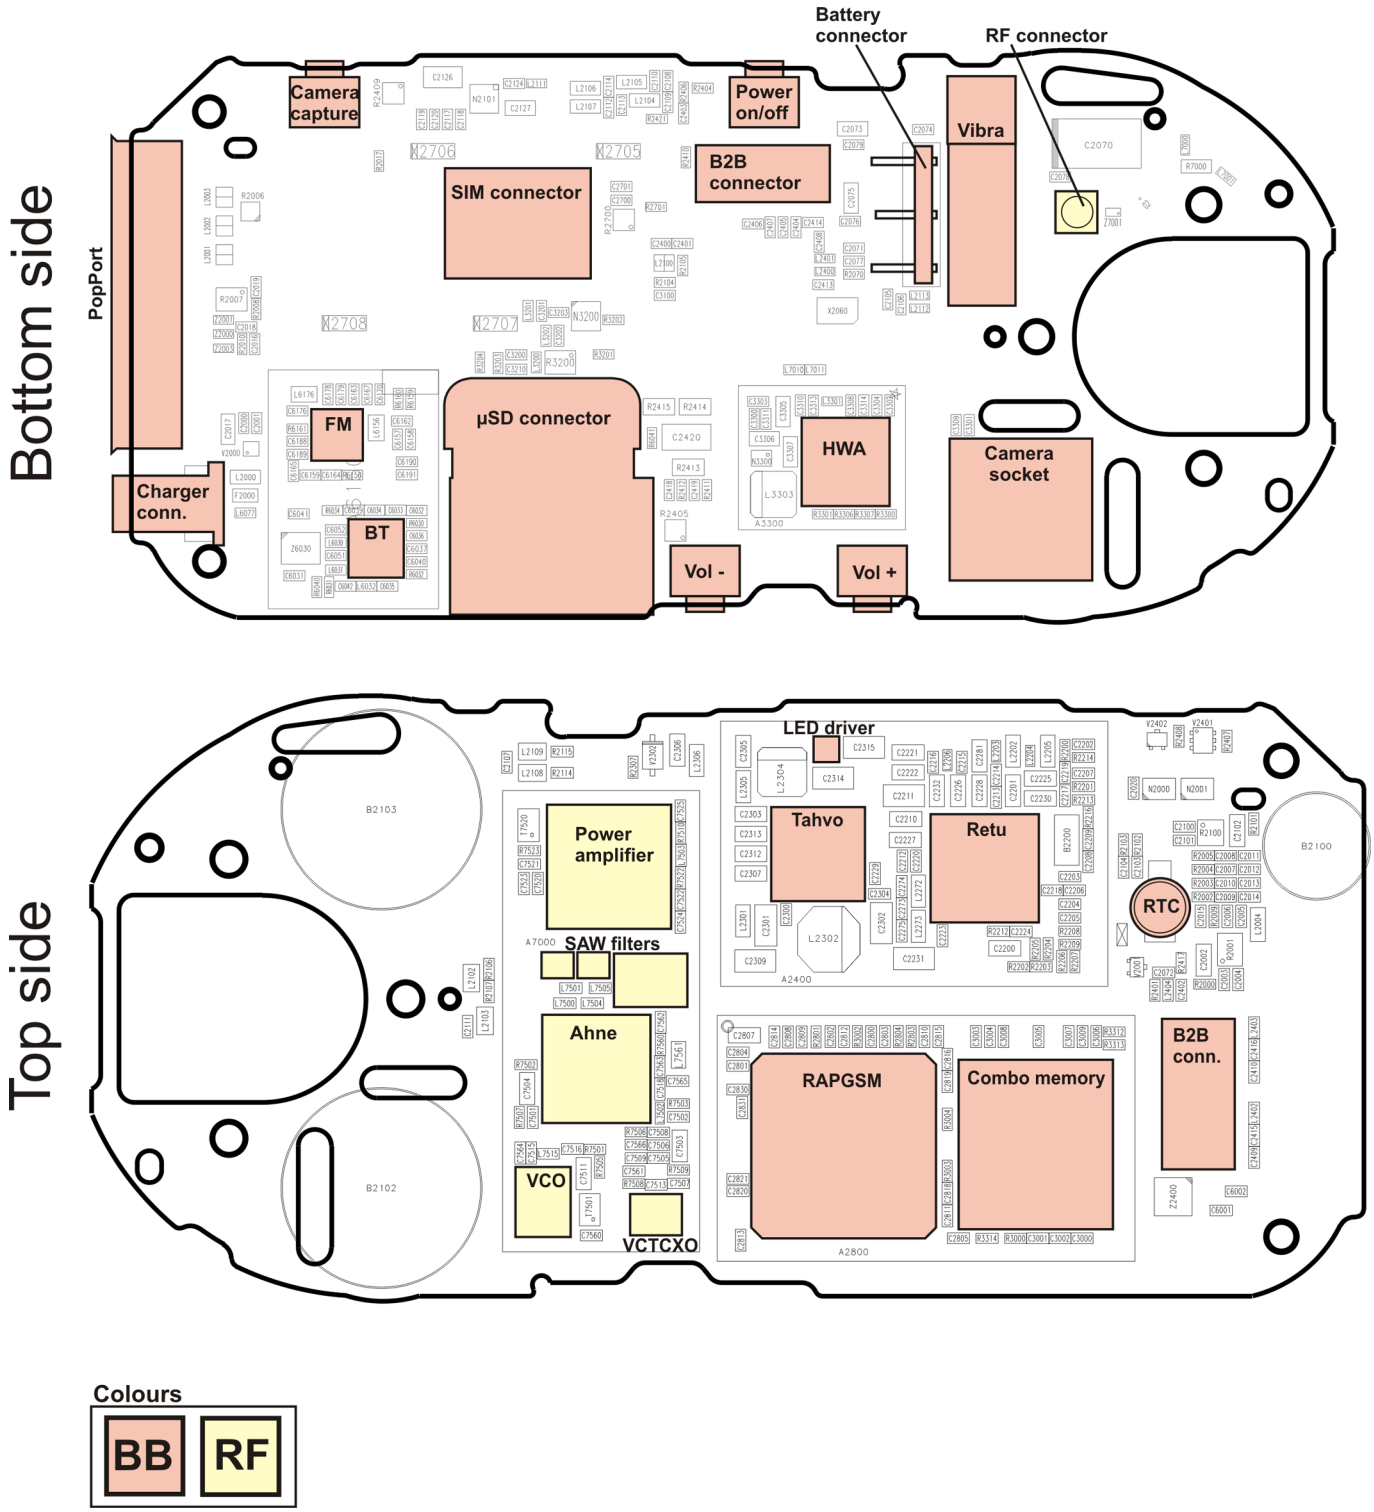

Figure 53 Main board overview

Copyright © 2006 Nokia. All rights reserved.

System module block diagram

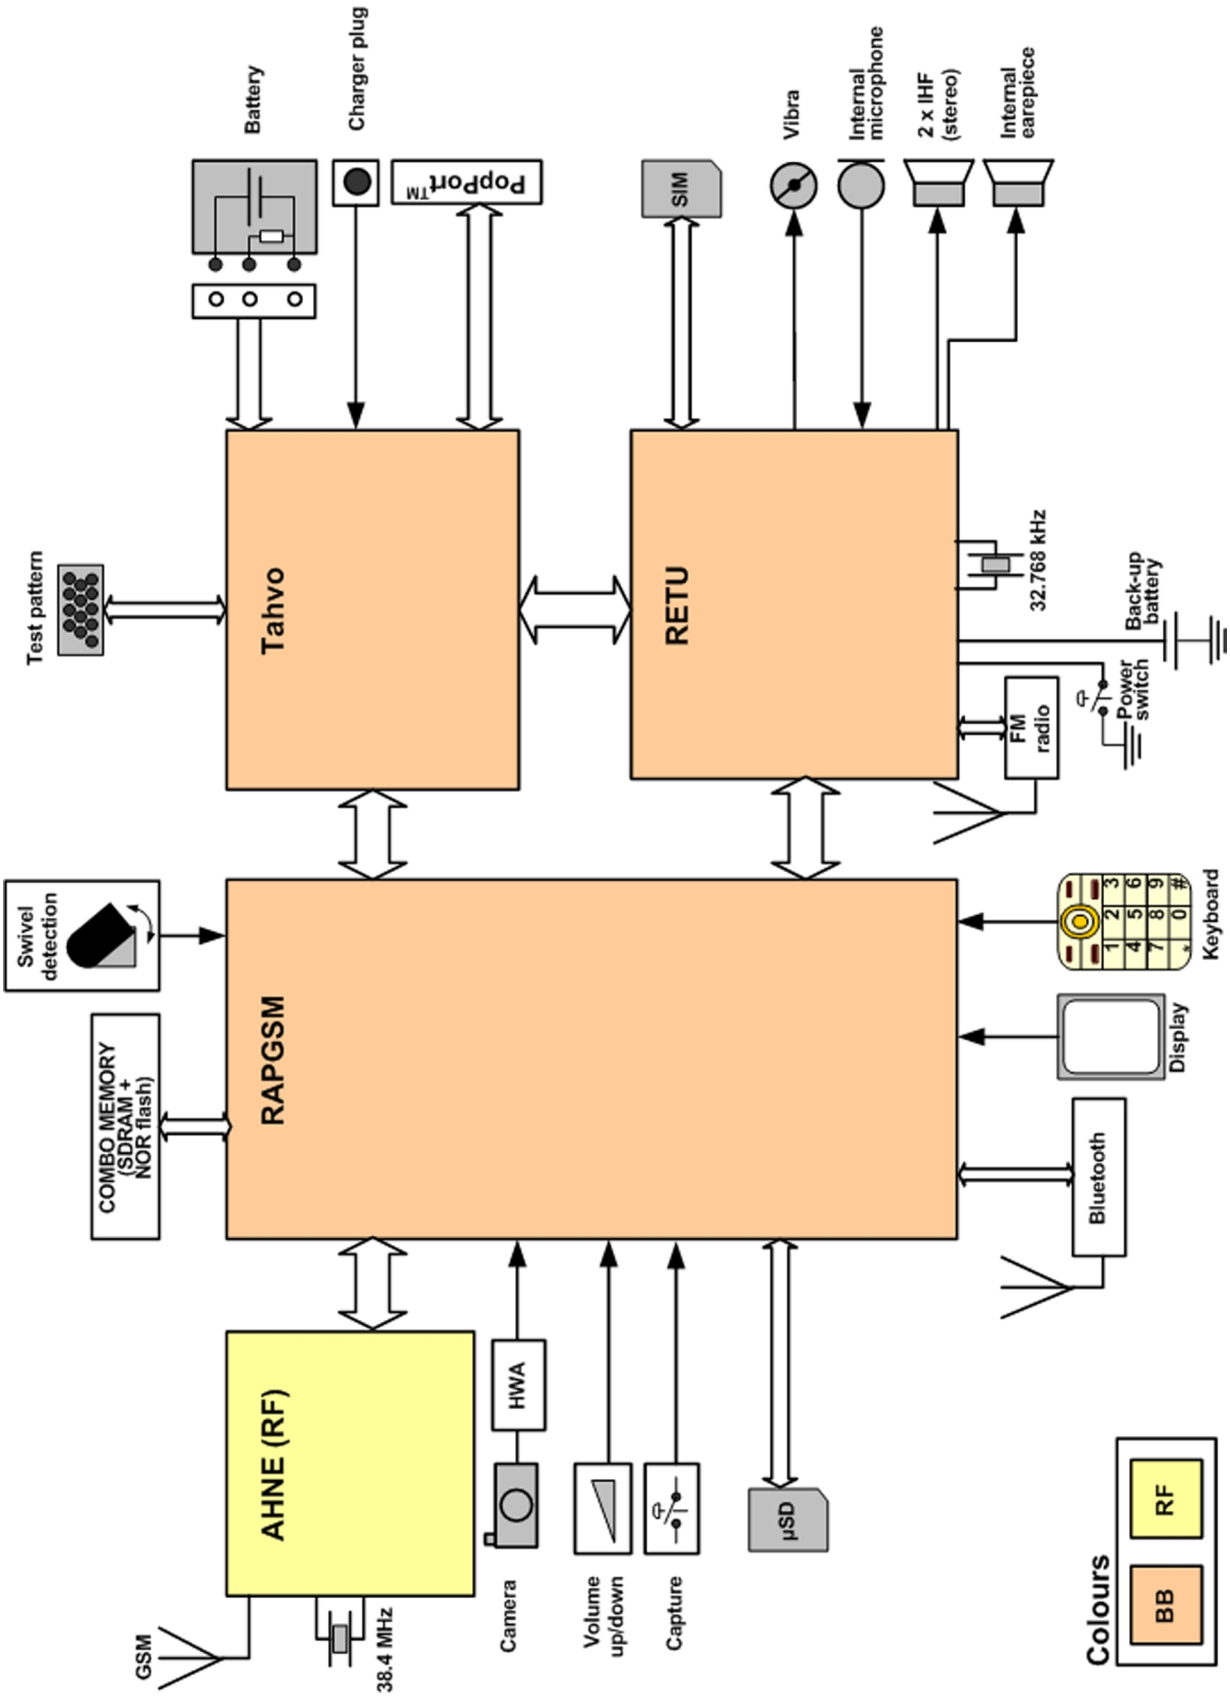

Figure 54 System module block diagram

Copyright © 2006 Nokia. All rights reserved.

Board and module connections

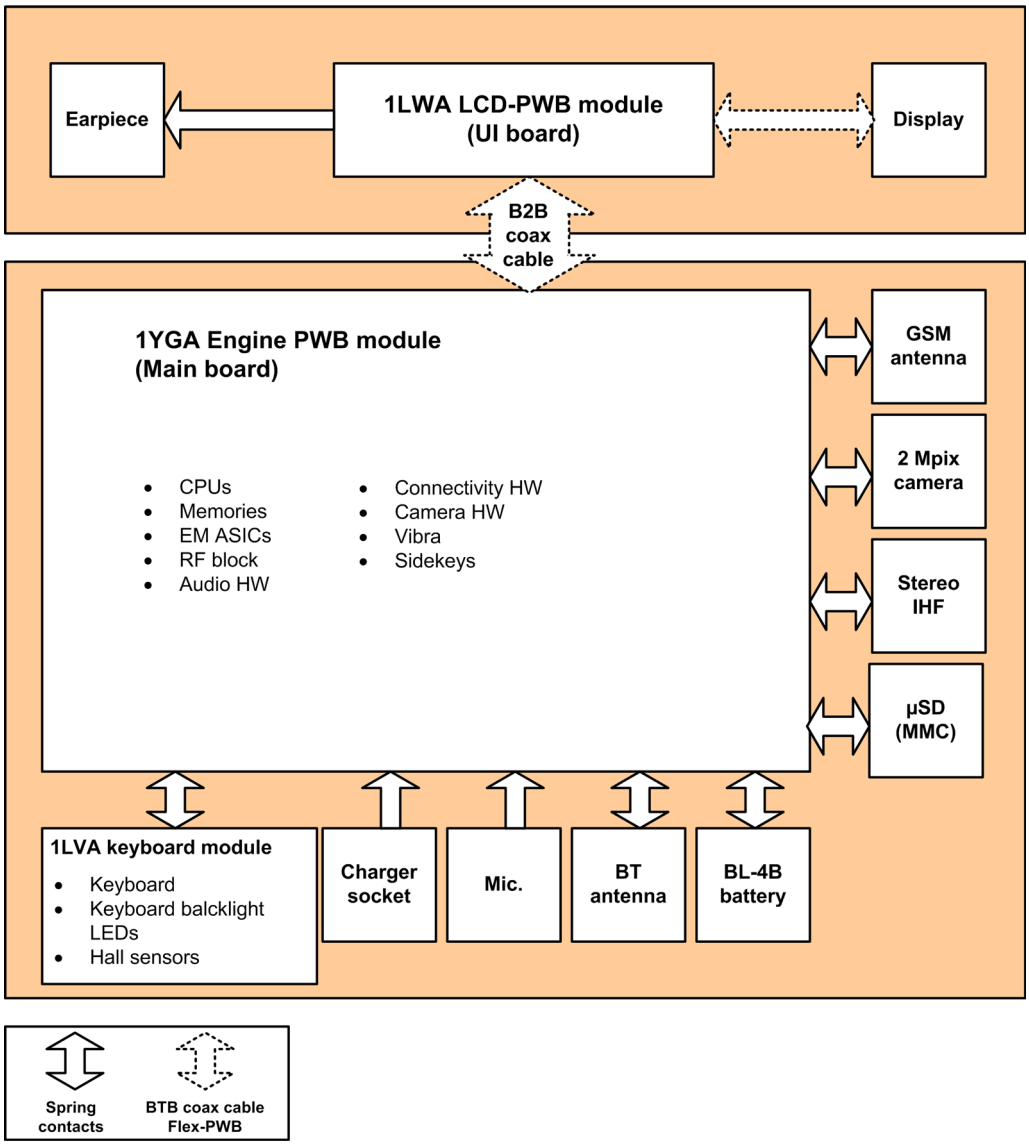

Figure 55 Board and module connections

Engine

Engine modules

The engine contains

- RF module with Ahne ASIC
- Main processor with integrated memory (Baseband)
- Energy management - Retu and Tahvo (Baseband)
- SDRAM and NOR flash memories

RF engine

The RF module performs the high frequency operations of the engine for GSM. In both transmitter and receiver, the modulator and demodulator operate at the channel frequency.

The core components of the RF module are:

Copyright © 2006 Nokia. All rights reserved.

- Ahne RF ASIC (application specific integrated circuit)
- Front end module (FEM) module (Power amplifier and Antenna switch)

The RF engine also includes:

- Voltage controlled oscillators (VCO and VCTCXO)
- SAW filters

The baseband section controls the RF module through the serial bus, RFBus. This passes information about eg. frequency band and mode of operation. Ahne RF ASIC controls the mode of operation, and further sends control signals to the front end module.

In addition to the RFBus there are other interface signals for the power control loop, VCTCXO control and for the modulated waveforms.

Main processor

The main processor in this device is RAPGSM, a BB5.0 ASIC.

Some of its interfaces, processors and controllers are:

- General purpose UARTs
- Processor modules
- I2C (between ICs) interface
- GSM coder
- Interfaces to user interface, SIM and MMC
- Accessory interface
- Handling of RF-BB interface
- I/O voltage = 1.8 V, Core voltage <1.8 V

Energy management

Two ASICs manages the energy in the phone; Retu and Tahvo. Together they cover the analogue audio and energy management function needs.

Tahvo

All blocks that need a special silicon process are included in Tahvo.

Tahvos main features are:

- Energy management control
- Supply voltage generation
- Charge control
- Digital core supply
- Current control for LED supply

Retu

The blocks that do not have special needs are included in Retu.

Retu controls for example:

- Audio block
- SIM
- FM radio

Copyright © 2006 Nokia. All rights reserved.

Modes of operation

The functional behavior can be divided into seven different states. Each of these states will affect the general functionality of the phone:

- No supply
- Backup
- Power off
- Reset
- Power on
- Deep sleep

Battery and charging

Battery

This device uses the BL-4B battery, a 700 mAh minimum Li-ion battery. It has a three contacts interface and it is based on a blade type connector.

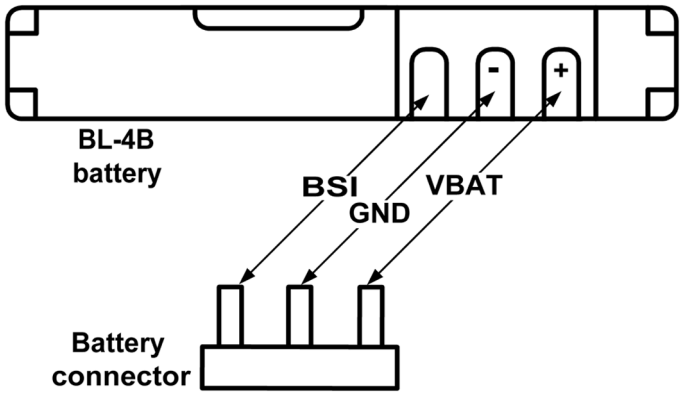

Figure 56 BL-4B battery and battery connector

Battery connector

The battery connector is a blade connector. It has three blades;

- BSI (Battery size indicator)
- GND (Ground)
- VBAT (Battery voltage)

The BSI line is used to recognize the battery capacity by a battery internal pull down resistor.

Figure 57 Blade battery connector

Charging

This phone is charged through the smaller Nokia standard interface (2.0 mm plug). The old standard charger (3.5 mm) can be used together with the CA-44 charger adapter.

Copyright © 2006 Nokia. All rights reserved.

Figure 58 Old (left) and new (right) charger plugs

Charging is controlled by energy management, and external components are needed to protect the baseband module against EMC, reverse polarity and transient frequency deviation.

Test pattern

The test pattern is placed on the bottom side of the main board. The points can be used for service and test purposes.

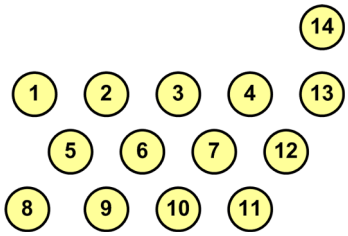

Figure 59 Test pattern

Pin	Name
1	VBUS
2	TXD/FBUS TX
3	RXD/FBUS RX
4	RXD2
5	VPP
6	CLK/MBUS
7	GND
8	TX1
9	CLK
10	TX0
11	TX2
12	RX
13	TX3
14	VBACK

Copyright © 2006 Nokia. All rights reserved.

Interfaces

PopPort™ system connector

The PopPort™ connector is an interface between the phone and the accessories. The configuration may vary between different phone models. In this model it includes:

- Audio
- Power out
- Detection/controlling
- USB
- FBus
- Charging

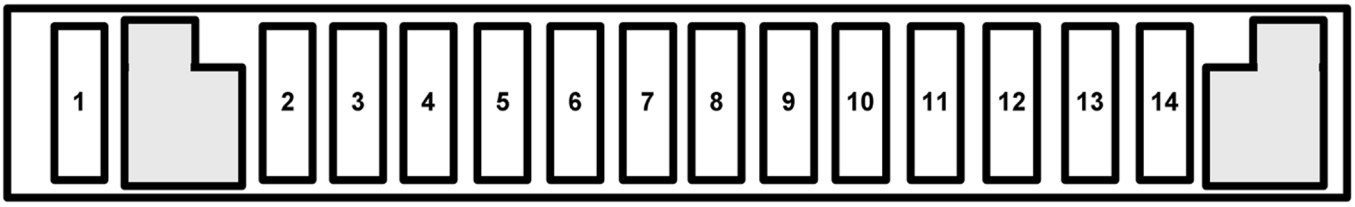

Figure 60 PopPort ™connector pins

Table 15 PopPort™ connector pins and signals

Pin #	Signal	Pin #	Signal
1	Charge	8	USB Data GND
2	Charge GND	9	XMIC N
3	ACI	10	XMIC P
4	Vout	11	XEAR N
5	USB VBus	12	XEAR P
6	USB D+/FBus_RX	13	XEAR RN
7	USB D-/FBus_TX	14	XEAR RP

FM radio

This phone uses a single-chip electronically tuned FM stereo radio with low voltage application.

Copyright © 2006 Nokia. All rights reserved.

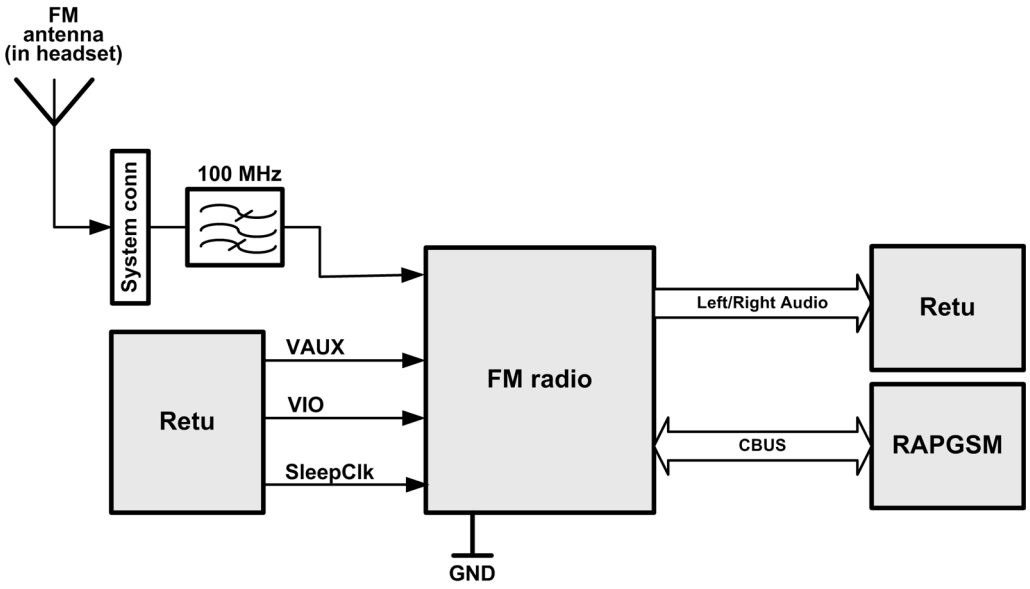

Figure 61 FM radio interface

Camera

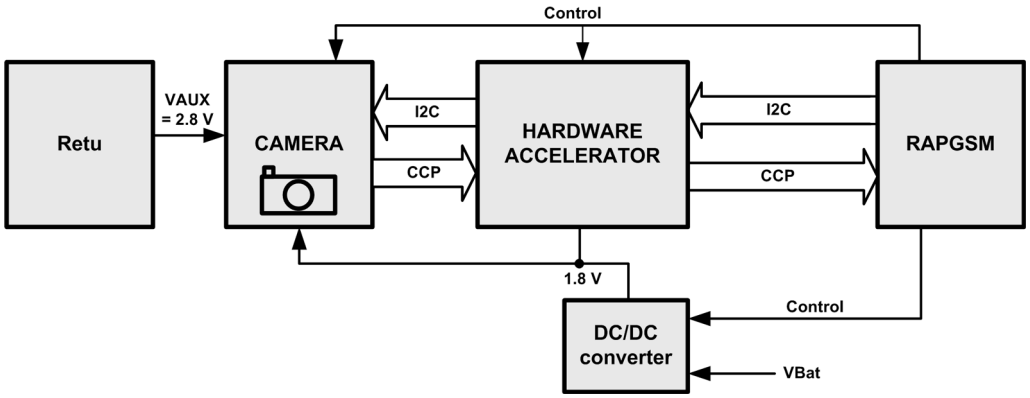

Figure 62 Camera interface

This phone is equipped with a 2 megapixel camera. The module has only one operating mode; raw pixel data output.

A hardware accelerator includes features like pixel defect correction, colour interpolation, image sharpness enhancement, selective noise filtering, cropping and scaling. The image can be JPEG-compressed in real-time. The hardware accelerator also performs sensor housekeeping functions such as automatic exposure and white balance controls.

SIM

The SIM interface is the electrical interface between the SIM card and the mobile phone engine.

The data communication between the SIM card and the phone is asynchronous half duplex.

Copyright © 2006 Nokia. All rights reserved.

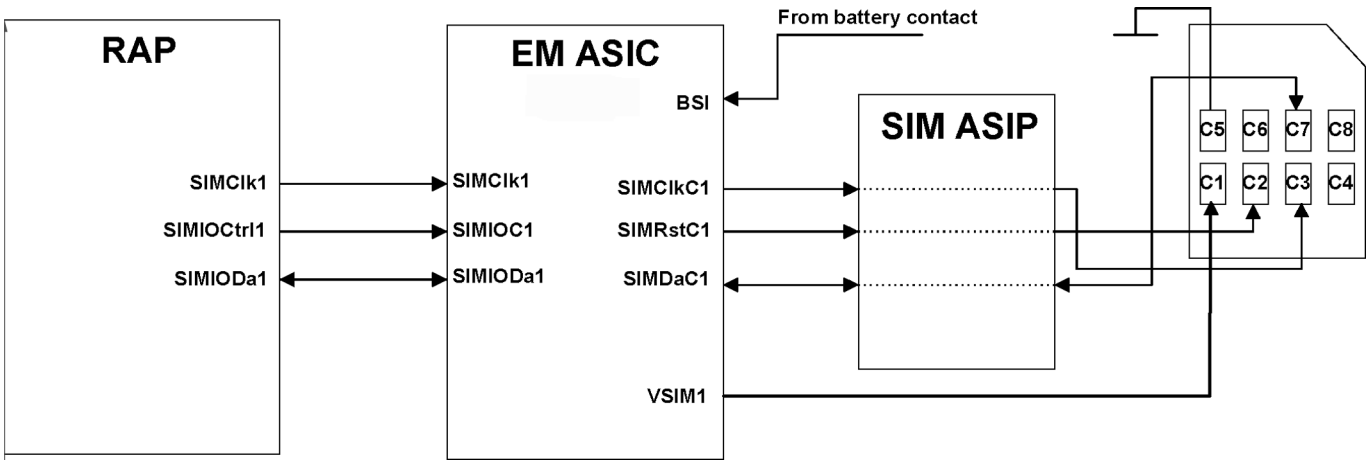

Figure 63 SIM interface connections

SIM Logic level shifting

The SIM interface can support 3V and 1.8V SIM cards.

SIM Power up/down

The SIM power up/down sequence is generated in Retu. This means that Retu generates the reset switch (RST) signal to the SIM. In addition, the SIMCardDet signal is connected to Retu.

The SIM interface is powered up when the SIMCardDet signal indicates “card in”.

µSD card interface

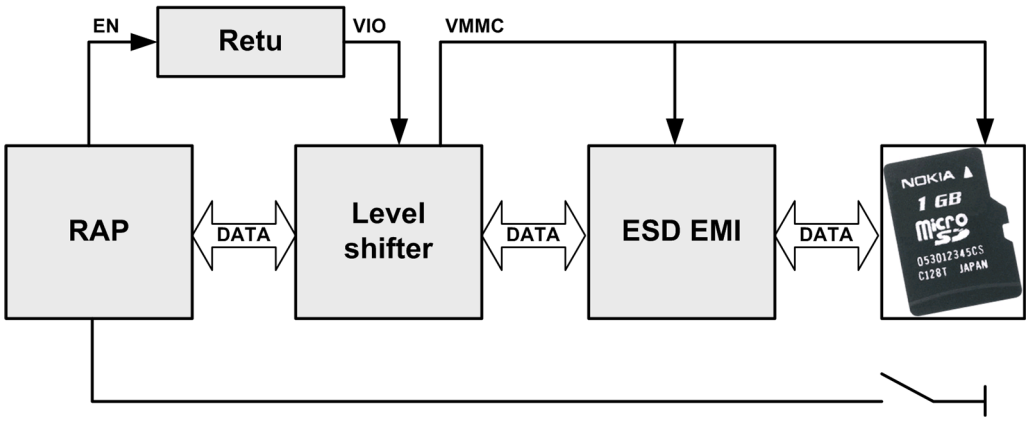

The µSD card is connected to the engine by an external level shifter and ESD protection filter. Supplied voltages:

- VMMC: 2.85 V (from level shifter)
- VIO: 1.8 V (from Retu)

Copyright © 2006 Nokia. All rights reserved.

User interface

User interface

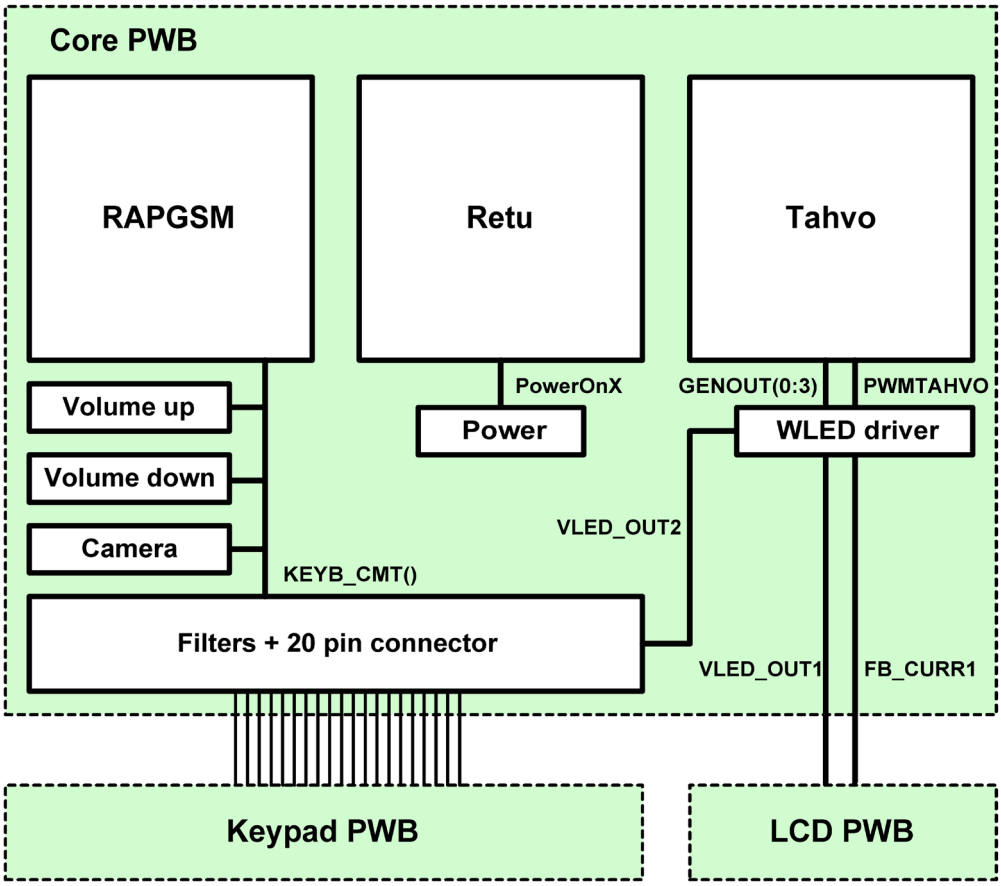

Figure 64 User interface block diagram

Display and display backlight

The display is controlled by RAPGSM, with signal conditioning by serial resistors.

Logic power supply (1.65V-1.95V) is connected to VIO and driver power supply (2.3V-2.9V) is connected to VAUX.

The display includes four white LEDs for display backlights inside of the display module. Display backlight current is monitored using LED driver feedback input

Keyboard and keyboard backlight

This phone has a specific keyboard PWB. Most keys are placed here. Camera, Power and Volume up/down are placed on the main board/Core PWB.

Copyright © 2006 Nokia. All rights reserved.

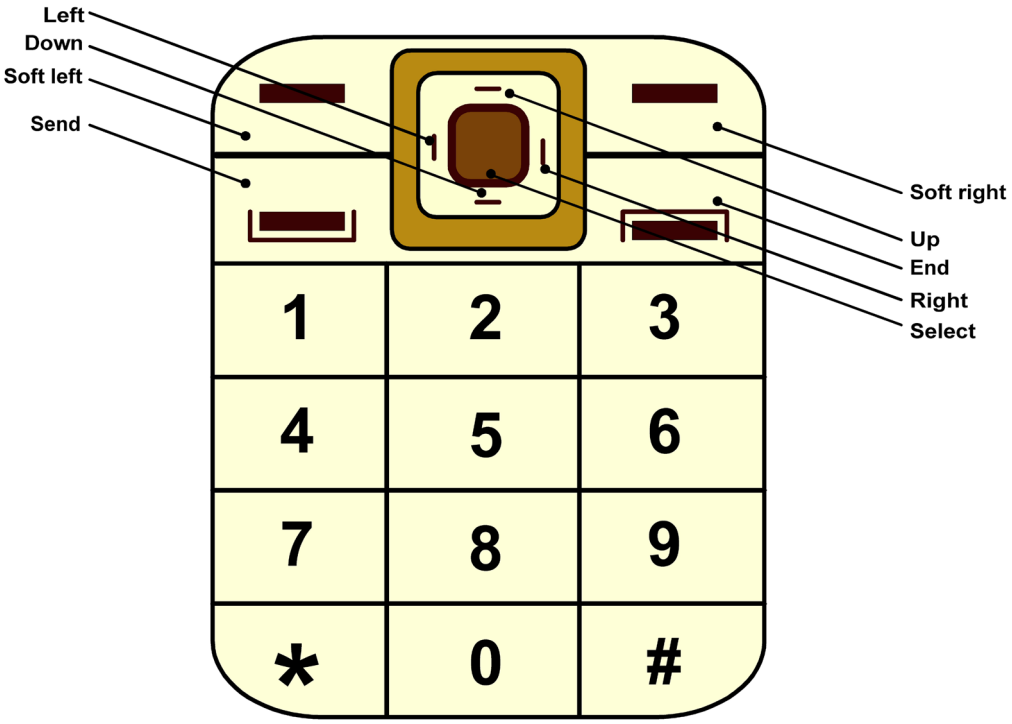

Figure 65 Keyboard layout

Table 16 Key signal matrix

GENIO		39	40	41	42
		KEYB_CMT8 (COL0)	KEYB_CMT9 (COL1)	KEYB_CMT10 (COL2)	KEYB_CMT11 (COL3)
32	KEYB_CMT0 (ROW0)	Soft left	Soft right	Left	Right
33	KEYB_CMT1 (ROW1)	Select	Send	Up	Down
34	KEYB_CMT2 (ROW2)	7	2	3	8
35	KEYB_CMT3 (ROW3)	5	Camera	1	6
36	KEYB_CMT4 (ROW4)	9	*	Vol+	#
37	KEYB_CMT5 (ROW5)	End	0	Vol-	4

There are four white LEDs placed on the keyboard PWB for illumination of the keyboard. Supply source for backlights is implemented using an external white LED driver. The driver increases battery voltage up to 18V. The white LED driver is enabled by Tahvo's PWM300 output. PWMTAHVO (PWM300) is SW controlled pulse width modulated (PWM) output.

Keyboards backlight LEDs are current controlled and switchable via TAHVO GENOUT3.

Swivel switch

The detection of the position of the swivel is made through two Hall sensors, connected to GENIO44, and two magnets. The magnets are positioned in the upper block in the swivel construction. The output of the Hall sensor is connected to GND.

When the swivel is opened, the applied magnetic field is high. This is sensed by an internal switch, also connected to GND. When the construction is closed, at least one of the two Hall sensors is fluxed by magnetic field.

Copyright © 2006 Nokia. All rights reserved.

Audio concept

Audio hardware architecture

The functional core of the audio hardware is built around two ASICs: RAPGSM engine ASIC and the mixed-signal ASIC Retu.

Retu provides an interface for the transducers and the accessory connector. Integrated hands free stereo speakers are driven by a D-class audio amplifier.

There are four audio transducers:

- Dynamic earpiece
- Two dynamic speakers
- Microphone module

In addition to the audio transducers, Retu also provides an output for the dynamic vibra component.

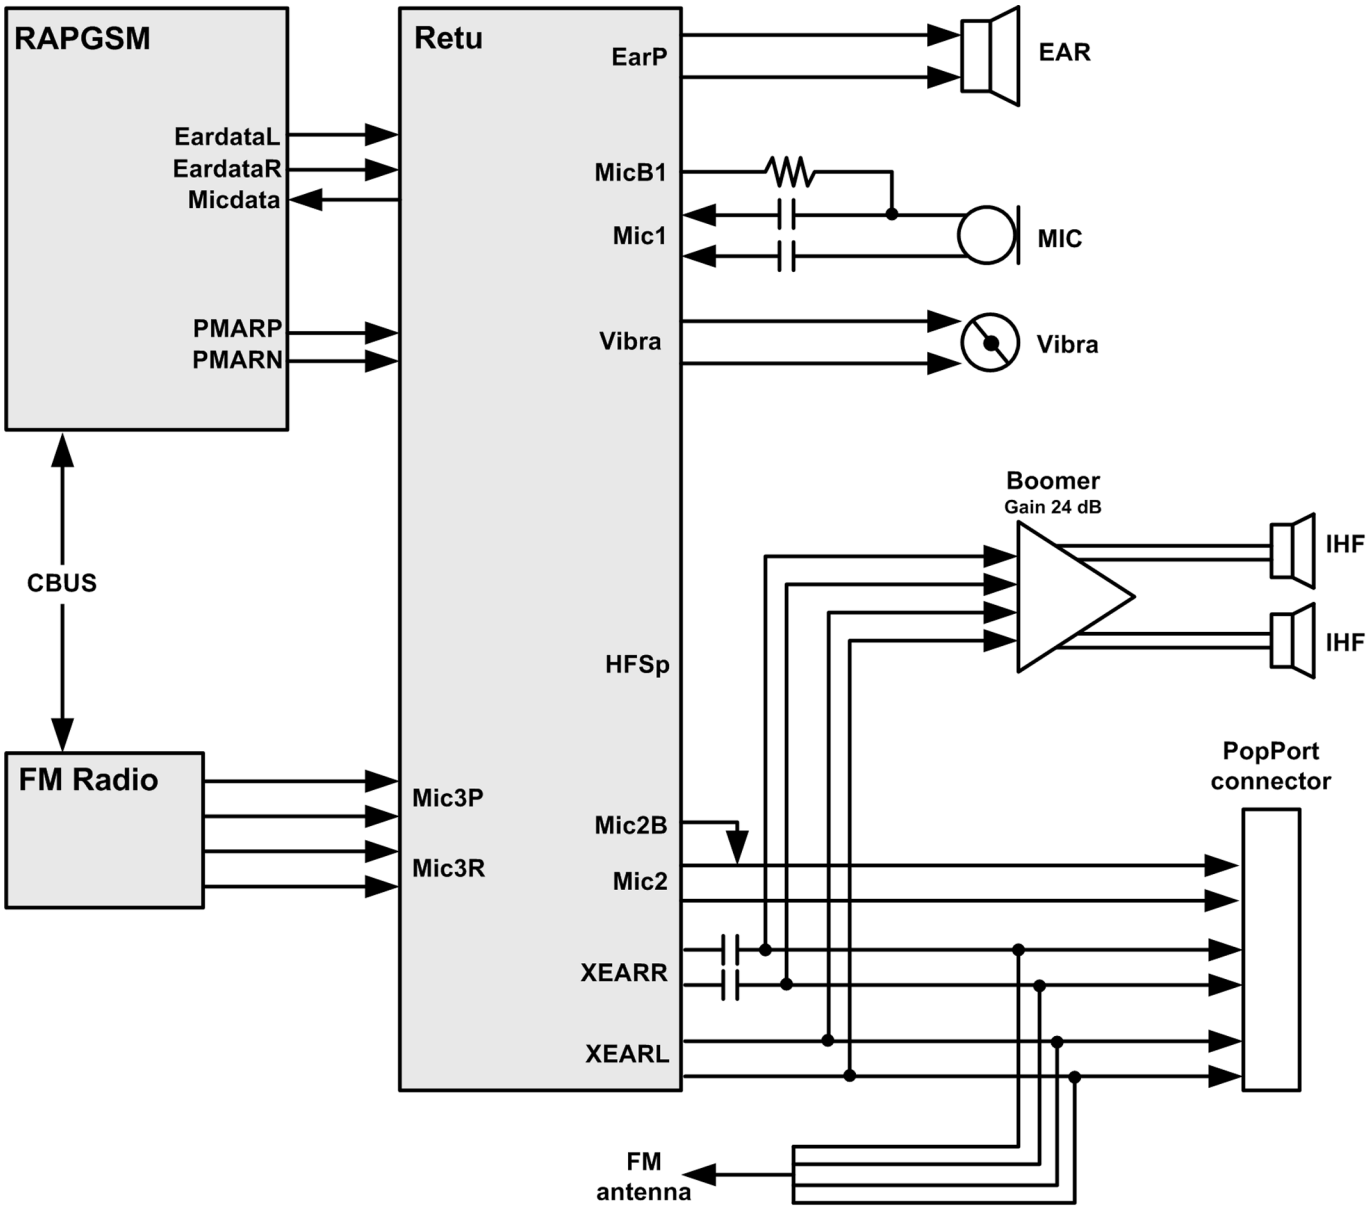

Figure 66 Audio block diagram

Copyright © 2006 Nokia. All rights reserved.

Internal microphone

Internal microphone is used for HandPortable (HP) and Internal HandsFree (IHF) call modes.

An analogue electret microphone is connected to N2200 Mic1P and Mic1N inputs via asymmetric electrical connection.

The microphone is biased by N2200 MicB1 bias voltage output.

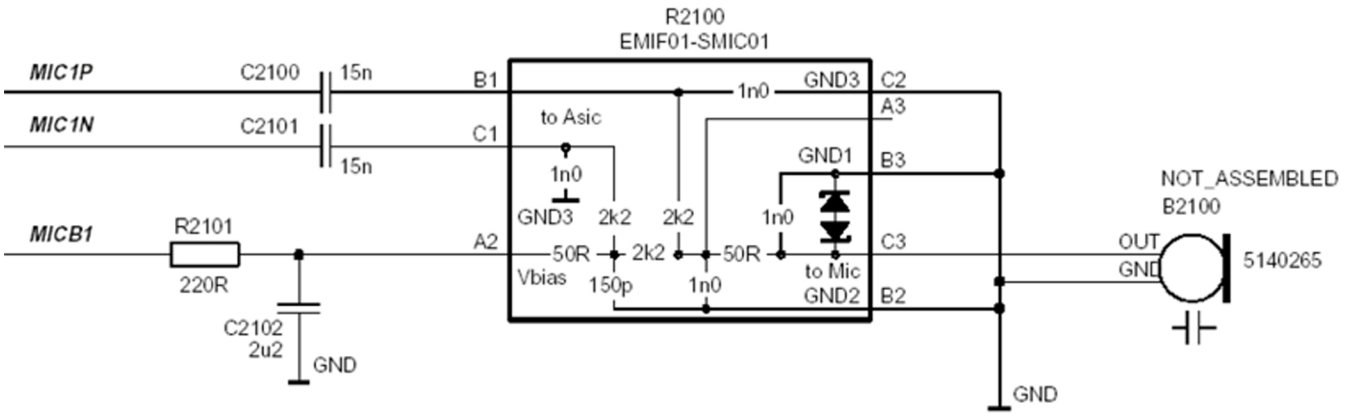

Figure 67 Internal microphone circuitry

External microphone

Galvanic accessories are connected to the system connector (Pop-Port™).

Accessory audio mode is automatically enabled/disabled during connection/disconnection of dedicated phone accessories.

Internal earpiece

Internal earpiece is used for the HandPortable (HP) call mode. A dynamic earpiece capsule is connected to Retu's differential output EarP and EarN.

Internal speakers

Internal speakers are used for Internal HandsFree (IHF) call mode, ringing tones, FM-radio and music listening.

Two dynamic 13mm speakers are connected to Retu ASIC's outputs XearR/XearL via stereo D-class IHF amplifier TPA2012D2.

The amplifier has 24 dB fixed gain and it is put to shutdown mode when not in use.

Copyright © 2006 Nokia. All rights reserved.

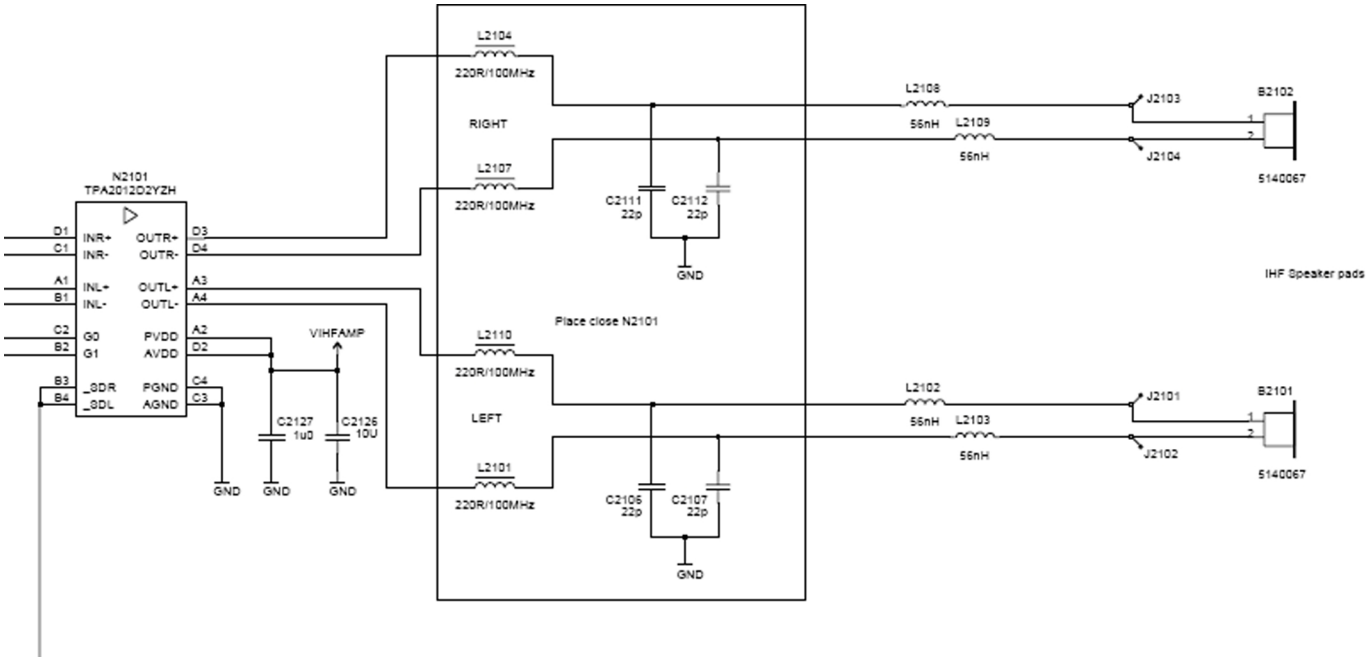

Figure 68 Internal speaker circuitry

External earpiece

All galvanic accessories are connected to the system connector (Pop-Port™).

The accessory audio mode is automatically enabled/disabled during connection/disconnection of dedicated phone accessories.

Vibra circuitry

Vibra is used for vibra-alarm function.

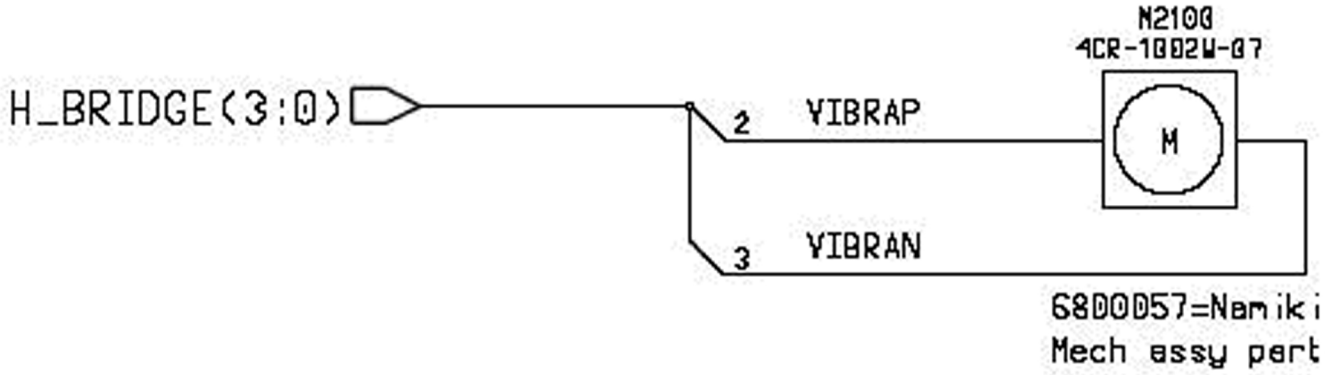

Figure 69 Vibra circuitry

Connections

USB interface

USB (Universal serial bus) provides a wired connectivity between host PC and peripheral devices.

Copyright © 2006 Nokia. All rights reserved.

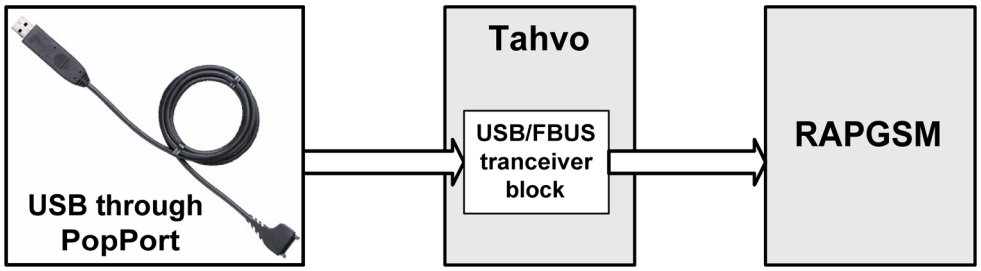

Figure 70 USB interface to engine

The Nokia USB device solution is supported using the Wireless 2 Function Controller (W2FC) core. This core is included in the RAPGSM. The core completes several USB functions automatically and is controlled by the MCU.

The USB solution is also compatible with USB 2.0, with a full speed of 12 Mbps.

Bluetooth

Bluetooth provides a fully digital link for communication between a master unit and one or more slave units.

This bluetooth solution is a single chip solution.

Bluetooth connects to RAPGSM on the GENIO and GPIO busses.

The Bluetooth module is provided with power from VBat.

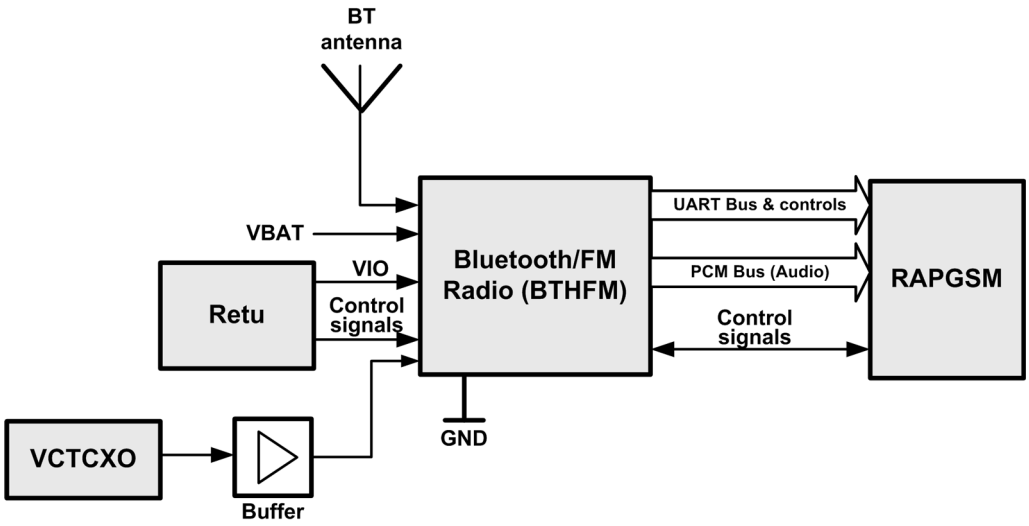

Figure 71 Bluetooth interface block diagram

Technical specifications

General specifications

Unit	Dimension (mm)	Weight (g)	Volume (cc)
Transceiver with BL-4B 700 mAh Li-Ion battery pack	88x43x23	104 g	76 cc

Copyright © 2006 Nokia. All rights reserved.

Battery endurance

Battery	Talk time	Standby time
BL-4B 700 mAh Li-ion	2.9 hours	Up to 8 days

Note: Variation in operation times will occur depending on SIM card, network settings and usage. Talk time is increased by up to 30% if half rate is active, and reduced by 5% if enhanced full rate is active.

Environmental conditions

Temperature

Temperature range	Min °C	Max °C
Operational (all specs met)	-5	+55
Functional (reduced performance)	-30	+70
Storage	-30	+85

The HW module complies with the SPR4 Operating Conditions.

Humidity

Relative humidity range is 5...95%.

The hardware module is not protected against water. Condensed or splashed water might cause malfunction. Any submerge of the phone will cause permanent damage. Long-term high humidity, with condensation, will cause permanent damage because of corrosion.

The hardware module complies with the SPR4 Operating Conditions.

Electrical characteristics

Table 17 Normal and extreme voltages

Voltage	Voltage (V)	Condition
General conditions		
Nominal voltage	3.700	
Lower extreme voltage	3.145	a
Higher extreme voltage	4.230	b
HW shutdown voltages		
Vmstr+	2.1 ± 0,1	Off to on
Vmstr-	1.9 ± 0,1	On to off
SW shutdown voltages		
SW shutdown	3.1	In call
SW shutdown	3.2	In idle

Copyright © 2006 Nokia. All rights reserved.

Min operating voltage		
Vcoff+	3. 1 ± 0,1	Off to on
Vcoff-	2. 8 ± 0,1	On to off

a. ADC settings in the SW might shutdown the phone above this value.

b. During fast charging of an empty battery, this voltage might exceed this value. Voltages between 4.20 and 4.60 might appear for a short while.

Main RF characteristics

Table 18 Channel numbers and frequencies

System	Channel number	TX frequency	RX frequency	Unit
GSM900	0 < =n <= 124	F = 890 + 0.2*n	F = 935 + 0.2*n	MHz
	975 <= n <= 1023	F = 890 + 0.2* (n - 1024)	F = 935 + 0.2*(n -1024)	MHz
GSM1800	512 <= n <= 885	F = 1710.2 + 0.2* (n - 512)	F = 1805.2 + 0.2* (n-512)	MHz
GSM1900	512 <= n <= 810	F = 1850.2 + 0.2* (n - 512)	F = 1930.2 + 0.2* (n-512)	MHz

Table 19 Main RF characteristics

Parameter	Unit and value
Cellular systems	EGSM900/GSM1800/GSM1900
RX Frequency range	EGSM900: 925 ... 960 MHz
	GSM1800: 1805...1880 MHz
	GSM1900: 1930...1990 MHz
TX Frequency range	EGSM900: 880 ... 915 MHz
	GSM1800: 1710 ...1785 MHz
	GSM1900: 1850...1910 MHz
Duplex spacing	EGSM900: 45 MHz
	GSM1800: 95 MHz
	GSM1900: 80 MHz
Channel spacing	200 kHz
Number of RF channels	EGSM900: 174
	GSM1800: 374
	GSM1900: 300

Copyright © 2006 Nokia. All rights reserved.

Parameter	Unit and value
Output Power	EGSM900: GSMK 5...33 dBm
	EGSM900: 8-PSK 5...27 dBm
	GSM1800: GSMK 0...30 dBm
	GSM1800: 8-PSK 0...26 dBm
	GSM1900: GSMK 0...30 dBm
	GSM1900: 8-PSK 0...26 dBm
Number of power levels GMSK	EGSM900: 15
	GSM1800: 16
	GSM1900: 16
Number of power levels 8-PSK	EGSM900: 12
	GSM1800: 14
	GSM1900: 14

Table 20 Transmitter characteristics

Item	Values
Type	Direct conversion, nonlinear, FDMA/TDMA
LO frequency range	EGSM900: 3520...3660 MHz (4 x TX freq)
	GSM1800: 3420...3570 MHz (2 x TX freq)
	GSM1900: 3700...3820 MHz (2 x TX freq)
Output power	GMSK 33/30/30 dBm
(EGSM900/GSM1800/GSM1900)	8-PSK 27/26/26 dBm

Table 21 Receiver characteristics

Item	Values
Type	Direct conversion, Linear, FDMA/TDMA
LO frequencies	EGSM900: 3700...3840 MHz (4 x RX freq)
	GSM1800: 3610...3760 MHz (2 x RX freq)
	GSM1900: 3860...3980 MHz (2 x RX freq)
Typical 3 dB bandwidth	+/- 91 kHz
Sensitivity	min. - 102 dBm (normal condition)
Total typical receiver voltage gain (from antenna to RX ADC)	86 dB
Receiver output level (RF level -95 dBm)	230 mVpp, single-ended I/Q signals to RX ADCs

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

9 — Schematics

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

Table of Contents

Schematics.....9–4

Copyright © 2006 Nokia. All rights reserved.

Schematics

System connector, IHF speaker

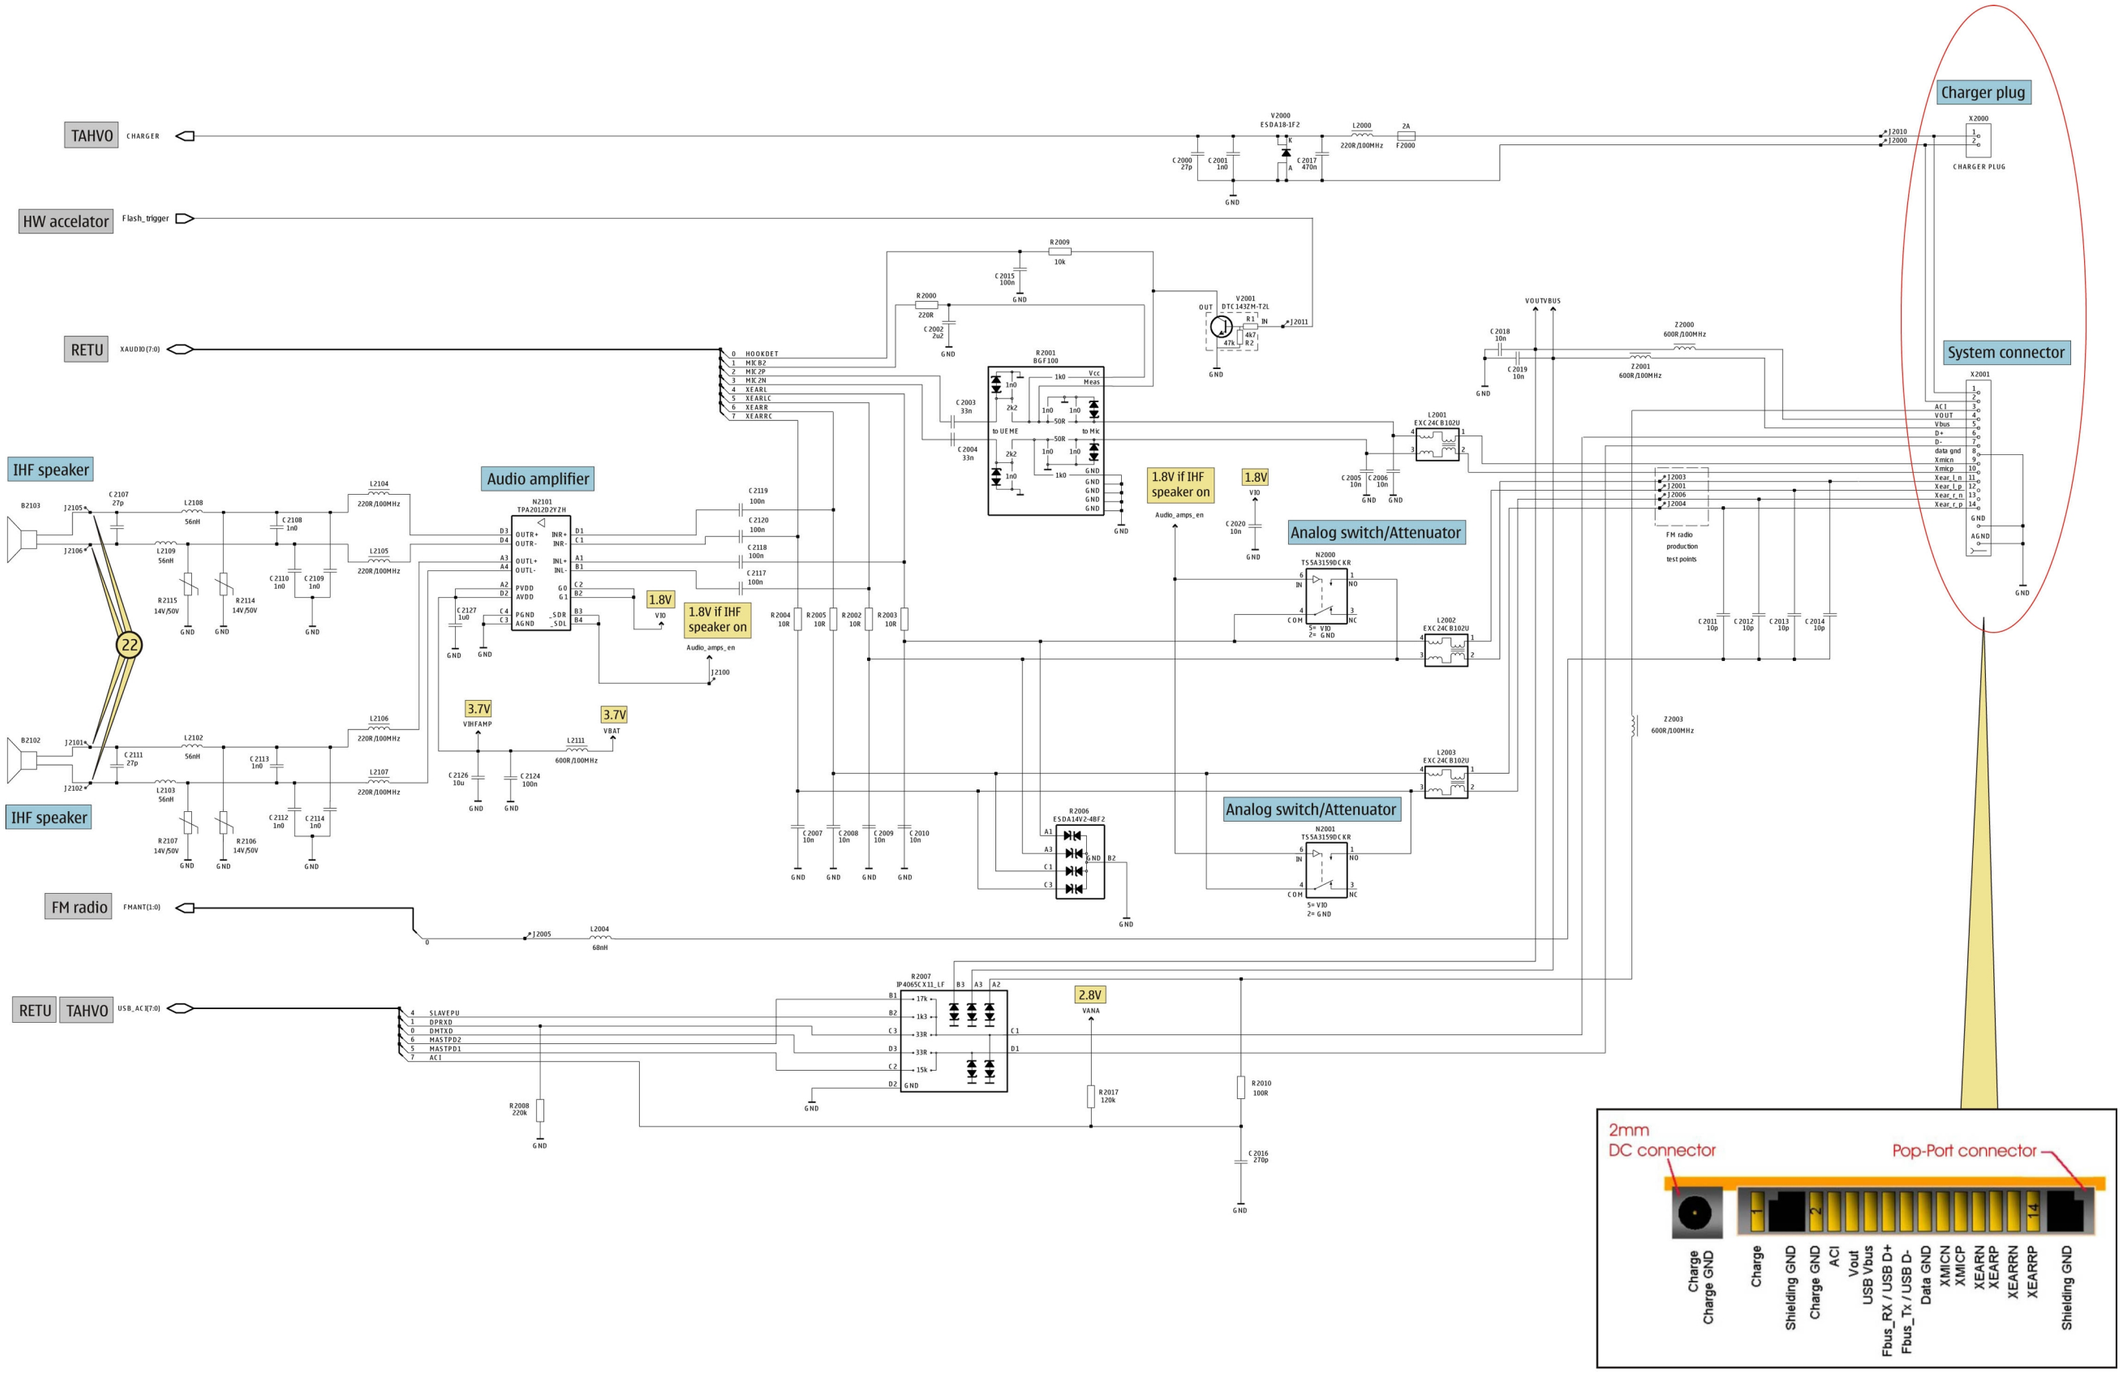

COMPANY CONFIDENTIAL
Copyright © 2006 Nokia. All rights reserved.

Retu, SIM, Micro, Vibra

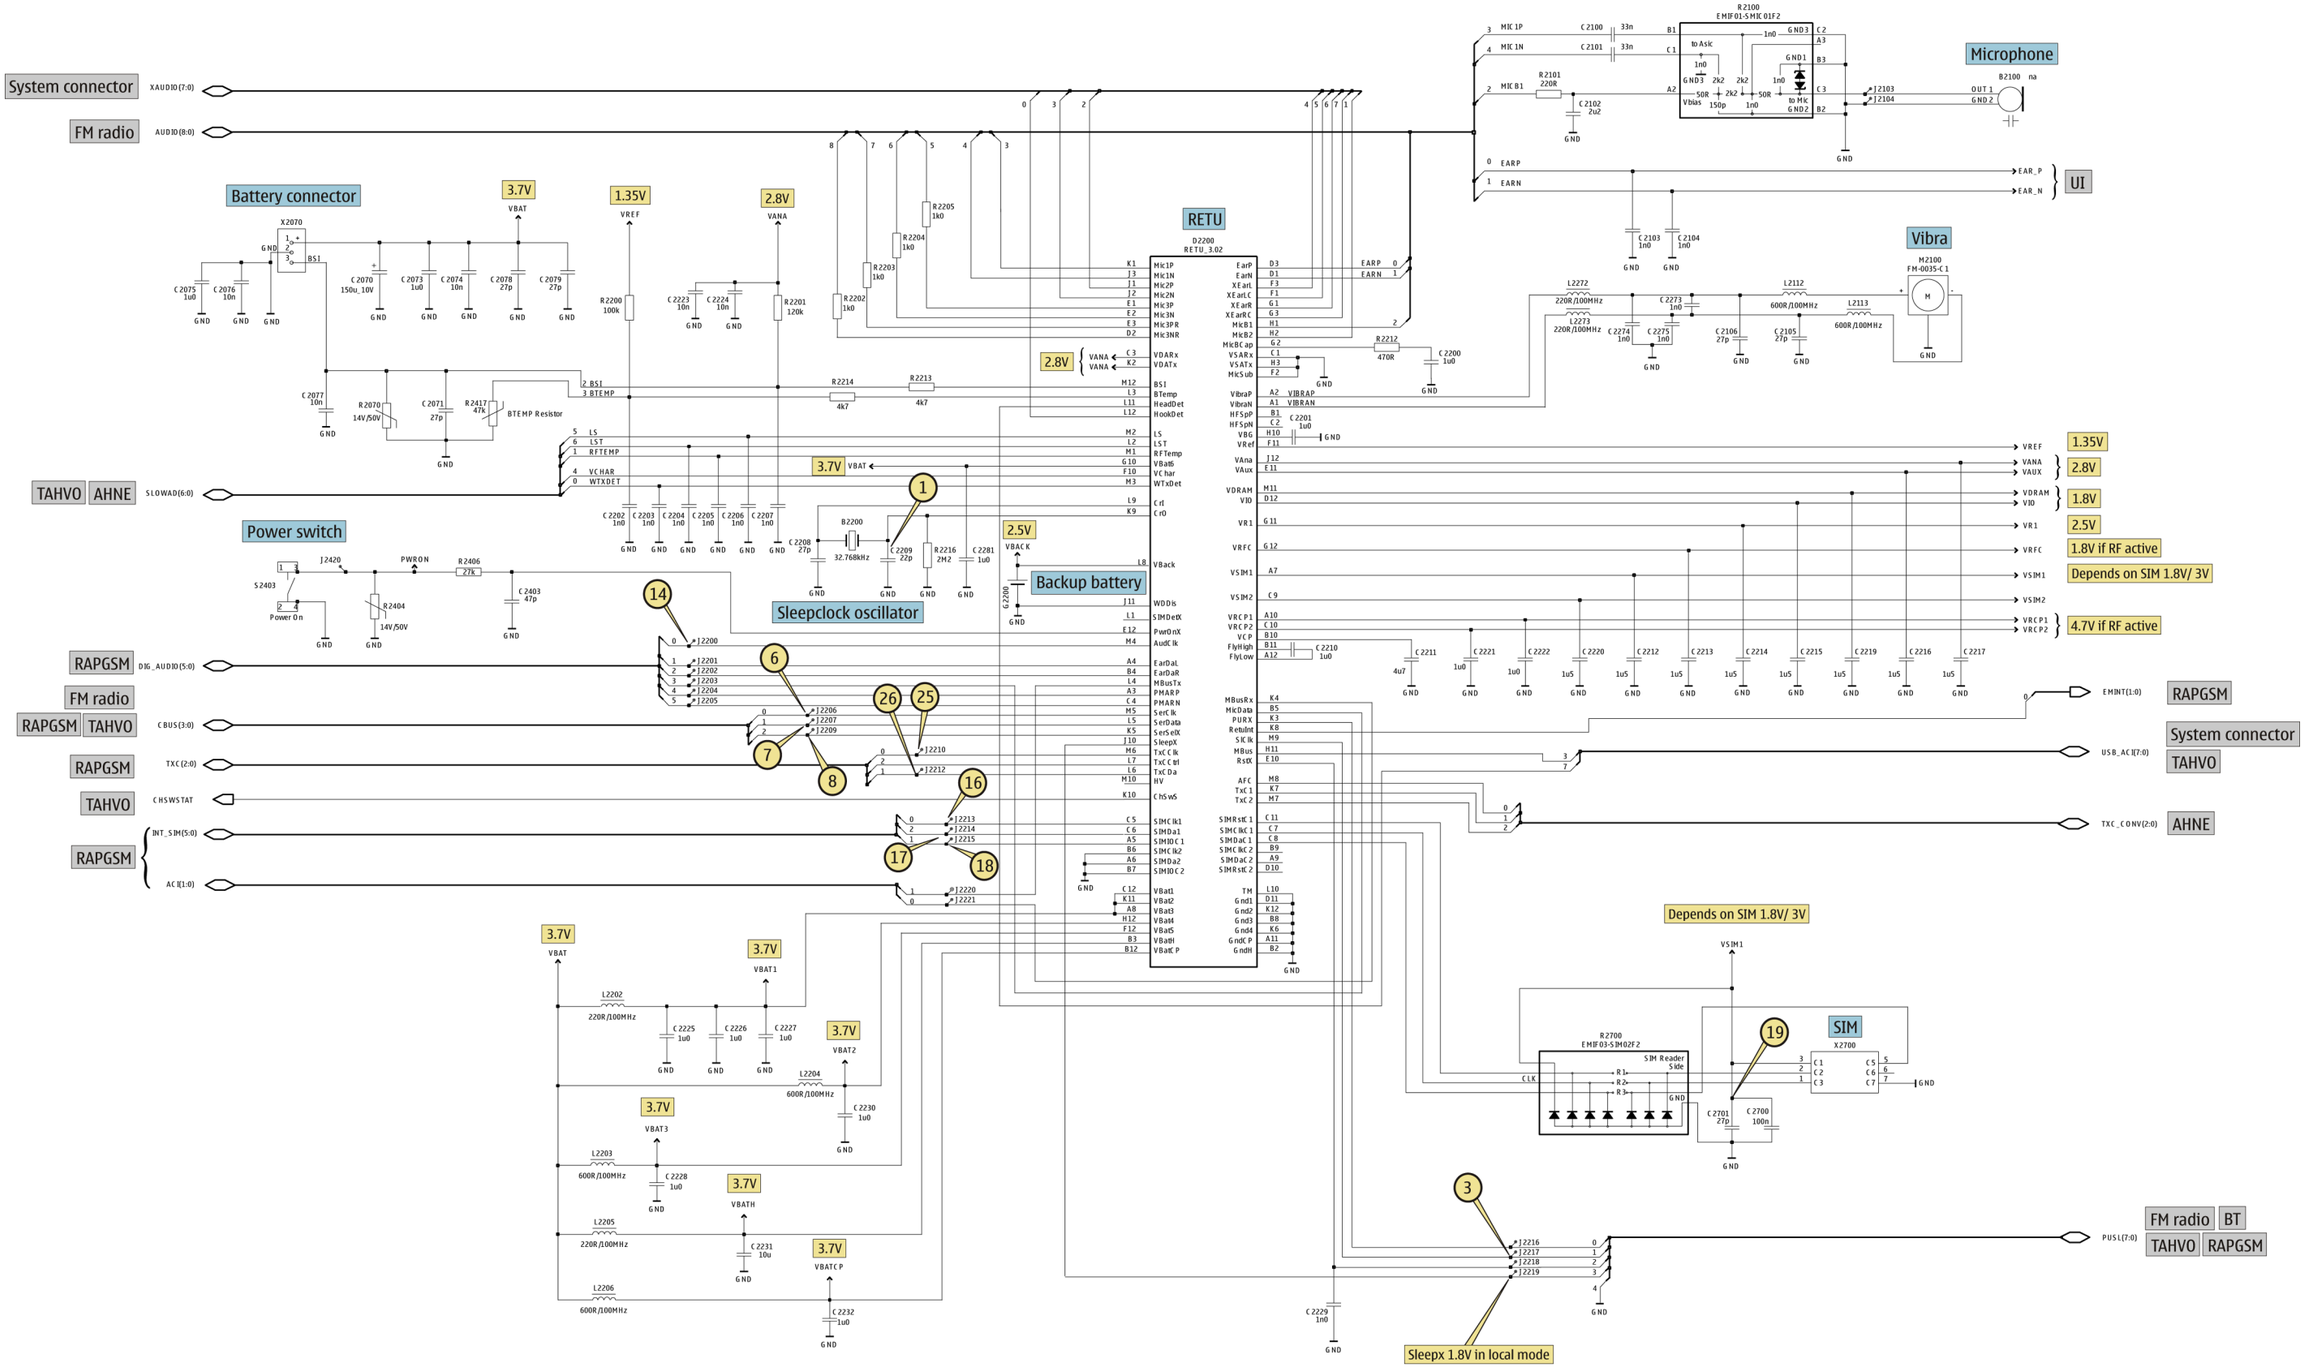

Copyright © 2006 Nokia. All rights reserved.

Tahvo

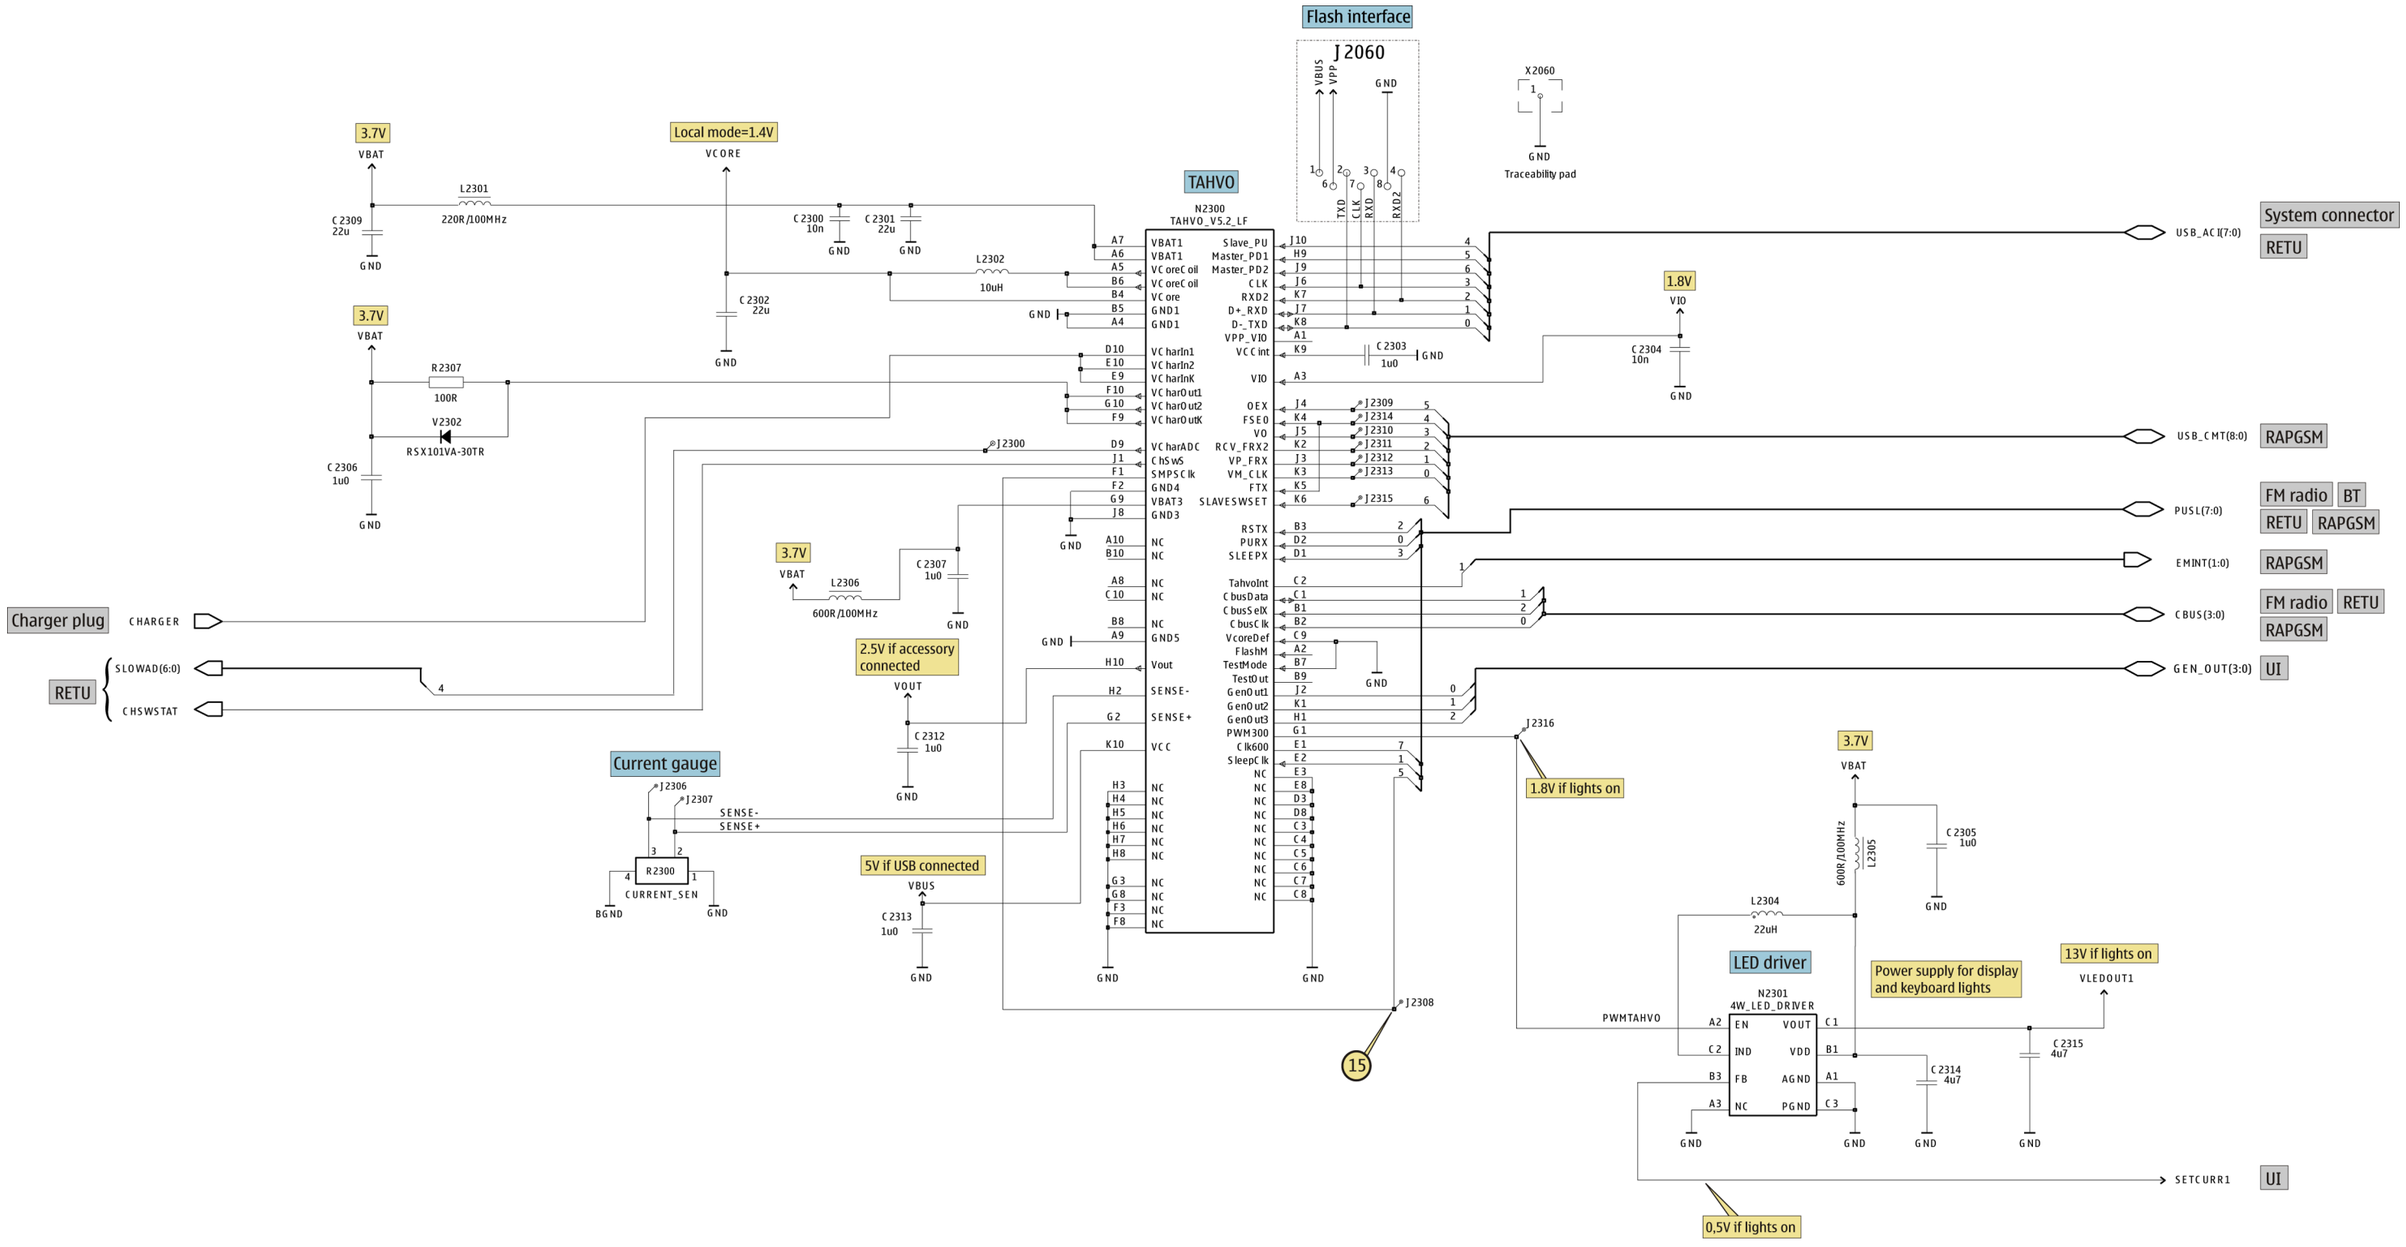

COMPANY CONFIDENTIAL
Copyright © 2006 Nokia. All rights reserved.

RAPGSM, Combo memory, Camera

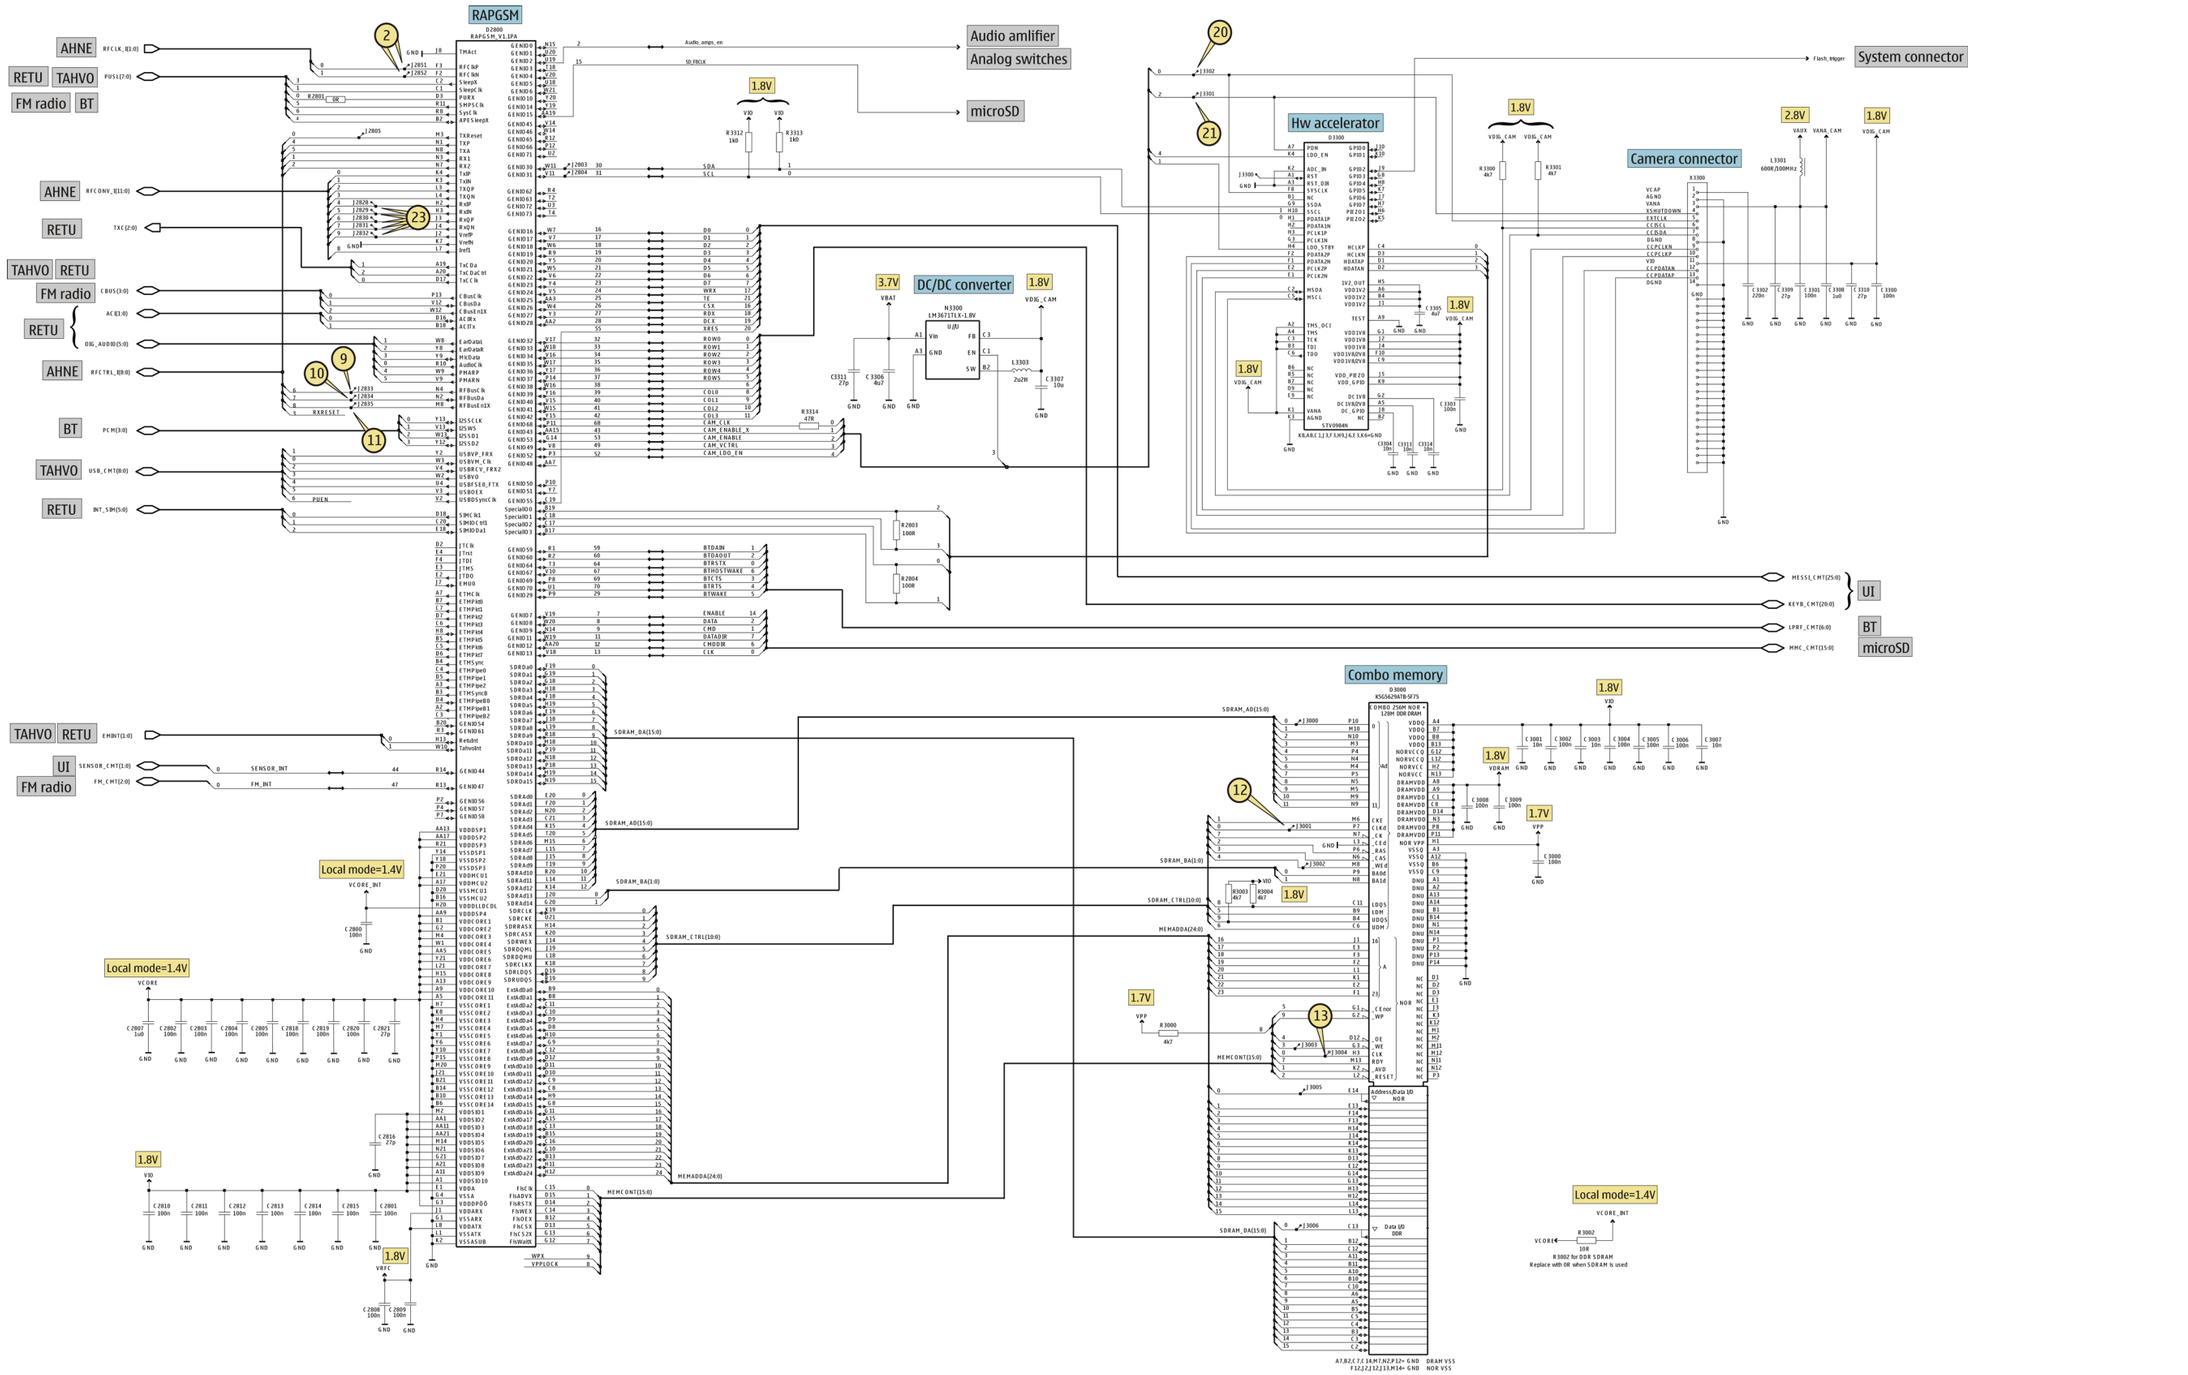

COMPANY CONFIDENTIAL
Copyright © 2006 Nokia. All rights reserved.

UI, Key PWB, UI PWB, Earpiece

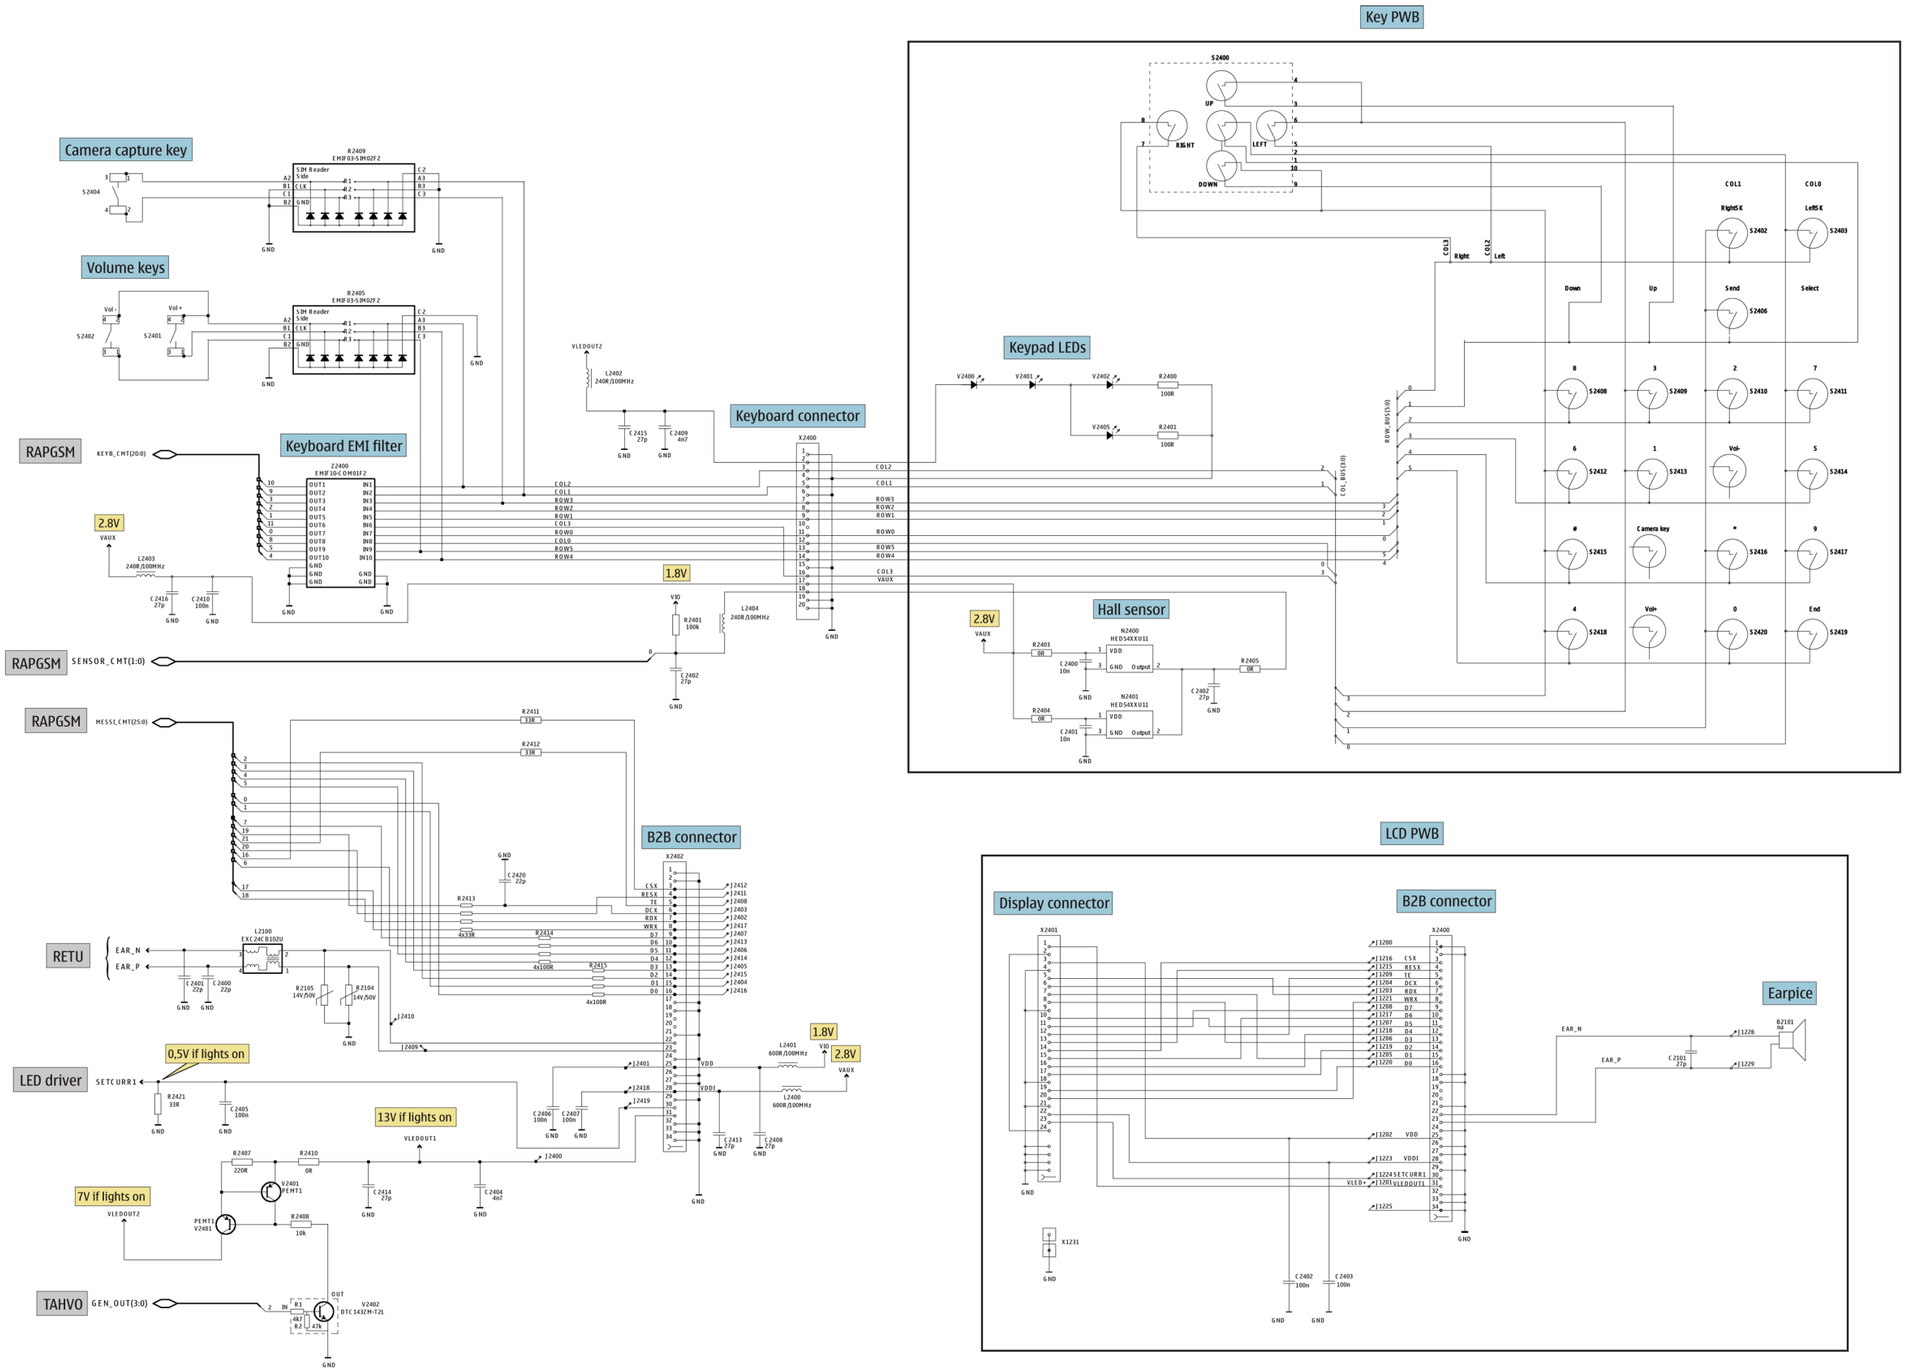

COMPANY CONFIDENTIAL
Copyright © 2006 Nokia. All rights reserved.

Bluetooth, FM radio, microSD

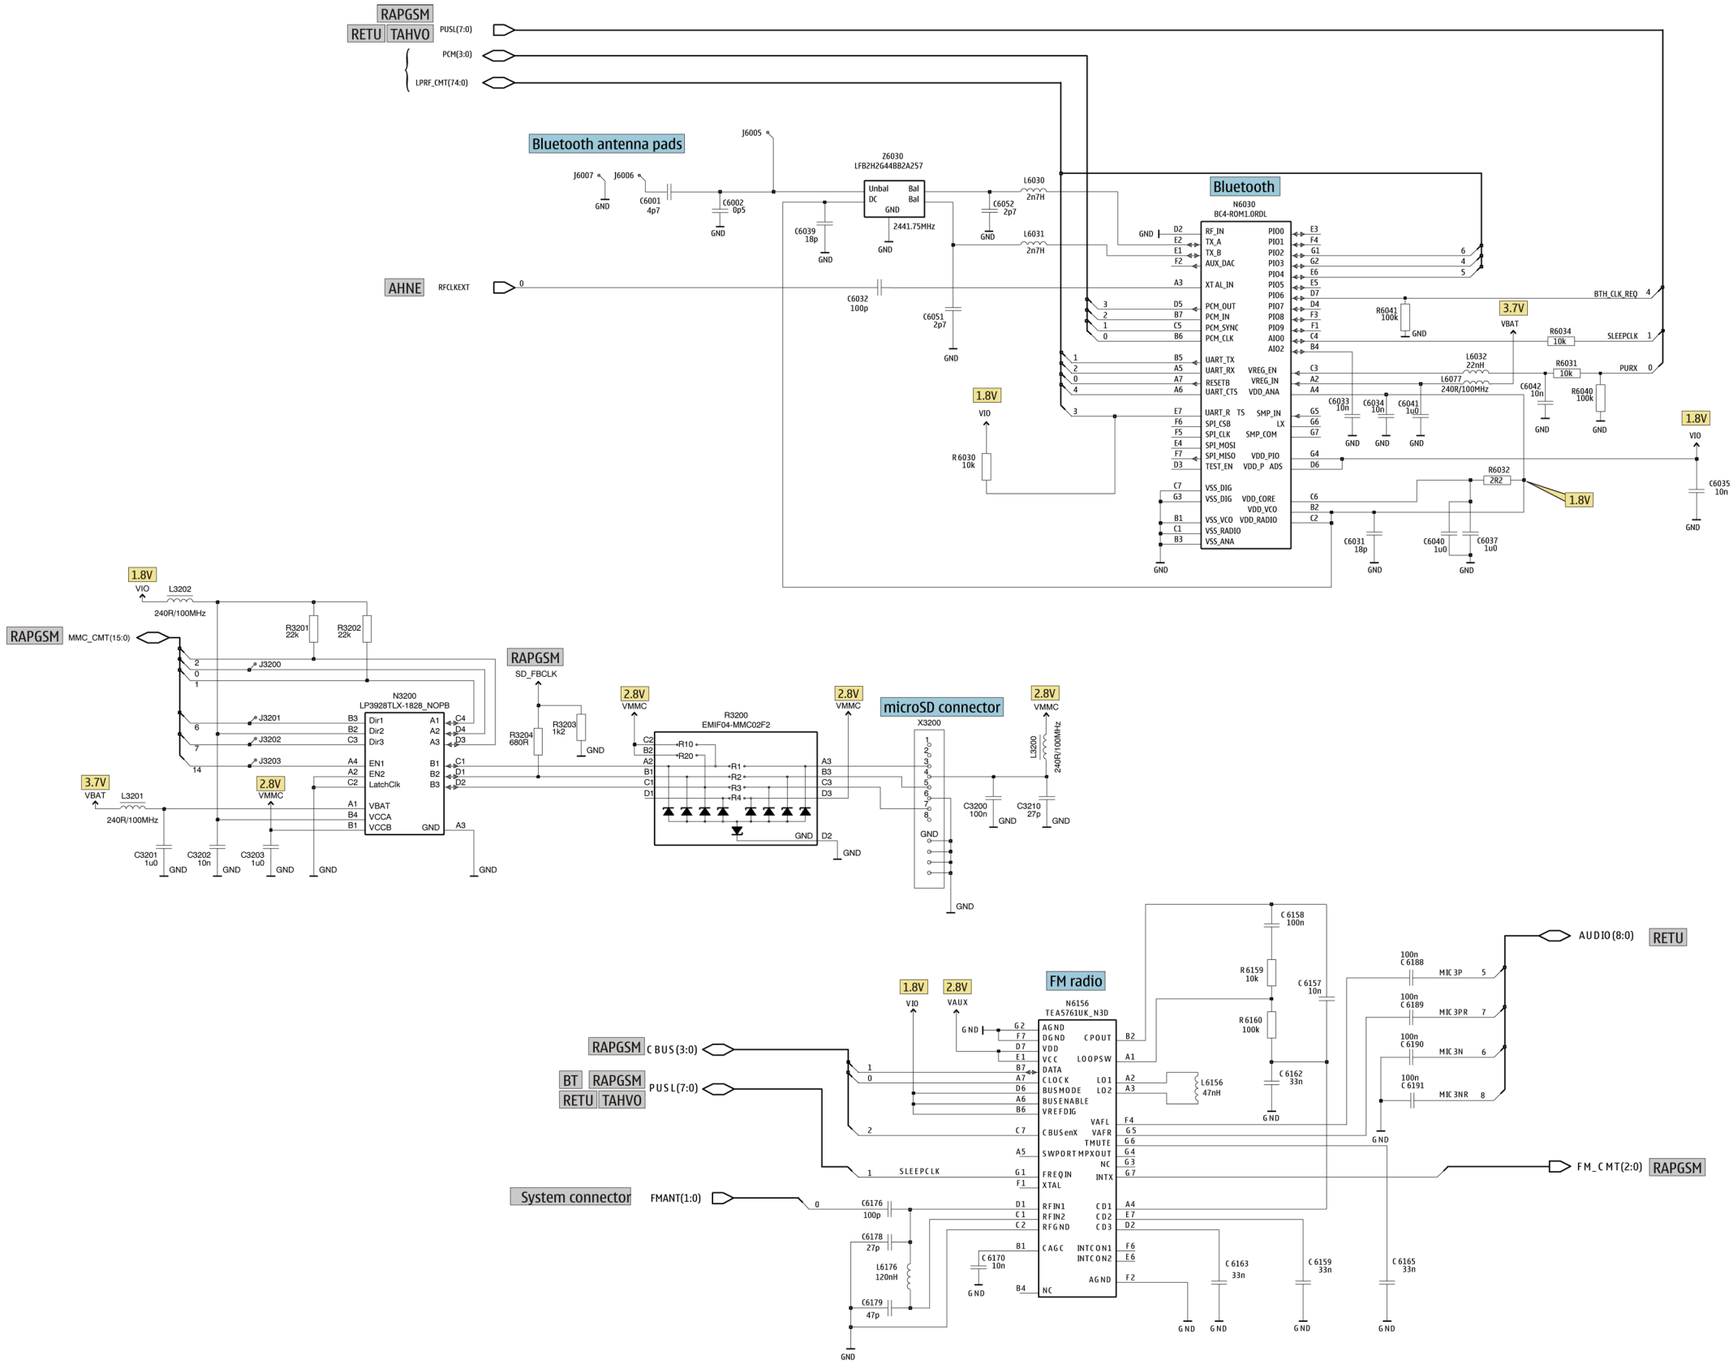

Copyright © 2006 Nokia. All rights reserved.

RF part

Band	Channel	RX	VCO/RX	VC/RX	TX	VCO/TX	VC/TX
GSM 900	37	942.4MHz	3769.6MHz	~2.73V	897.4MHz	3589.6MHz	~1.99V
GSM 1800	700	1842.8MHz	3685.6MHz	~2.39V	1747.8MHz	3495.6MHz	~1.60V
GSM 1900	661	1960.0MHz	3920.0MHz	~3.31V	1880.0MHz	3760.0MHz	~1.99V

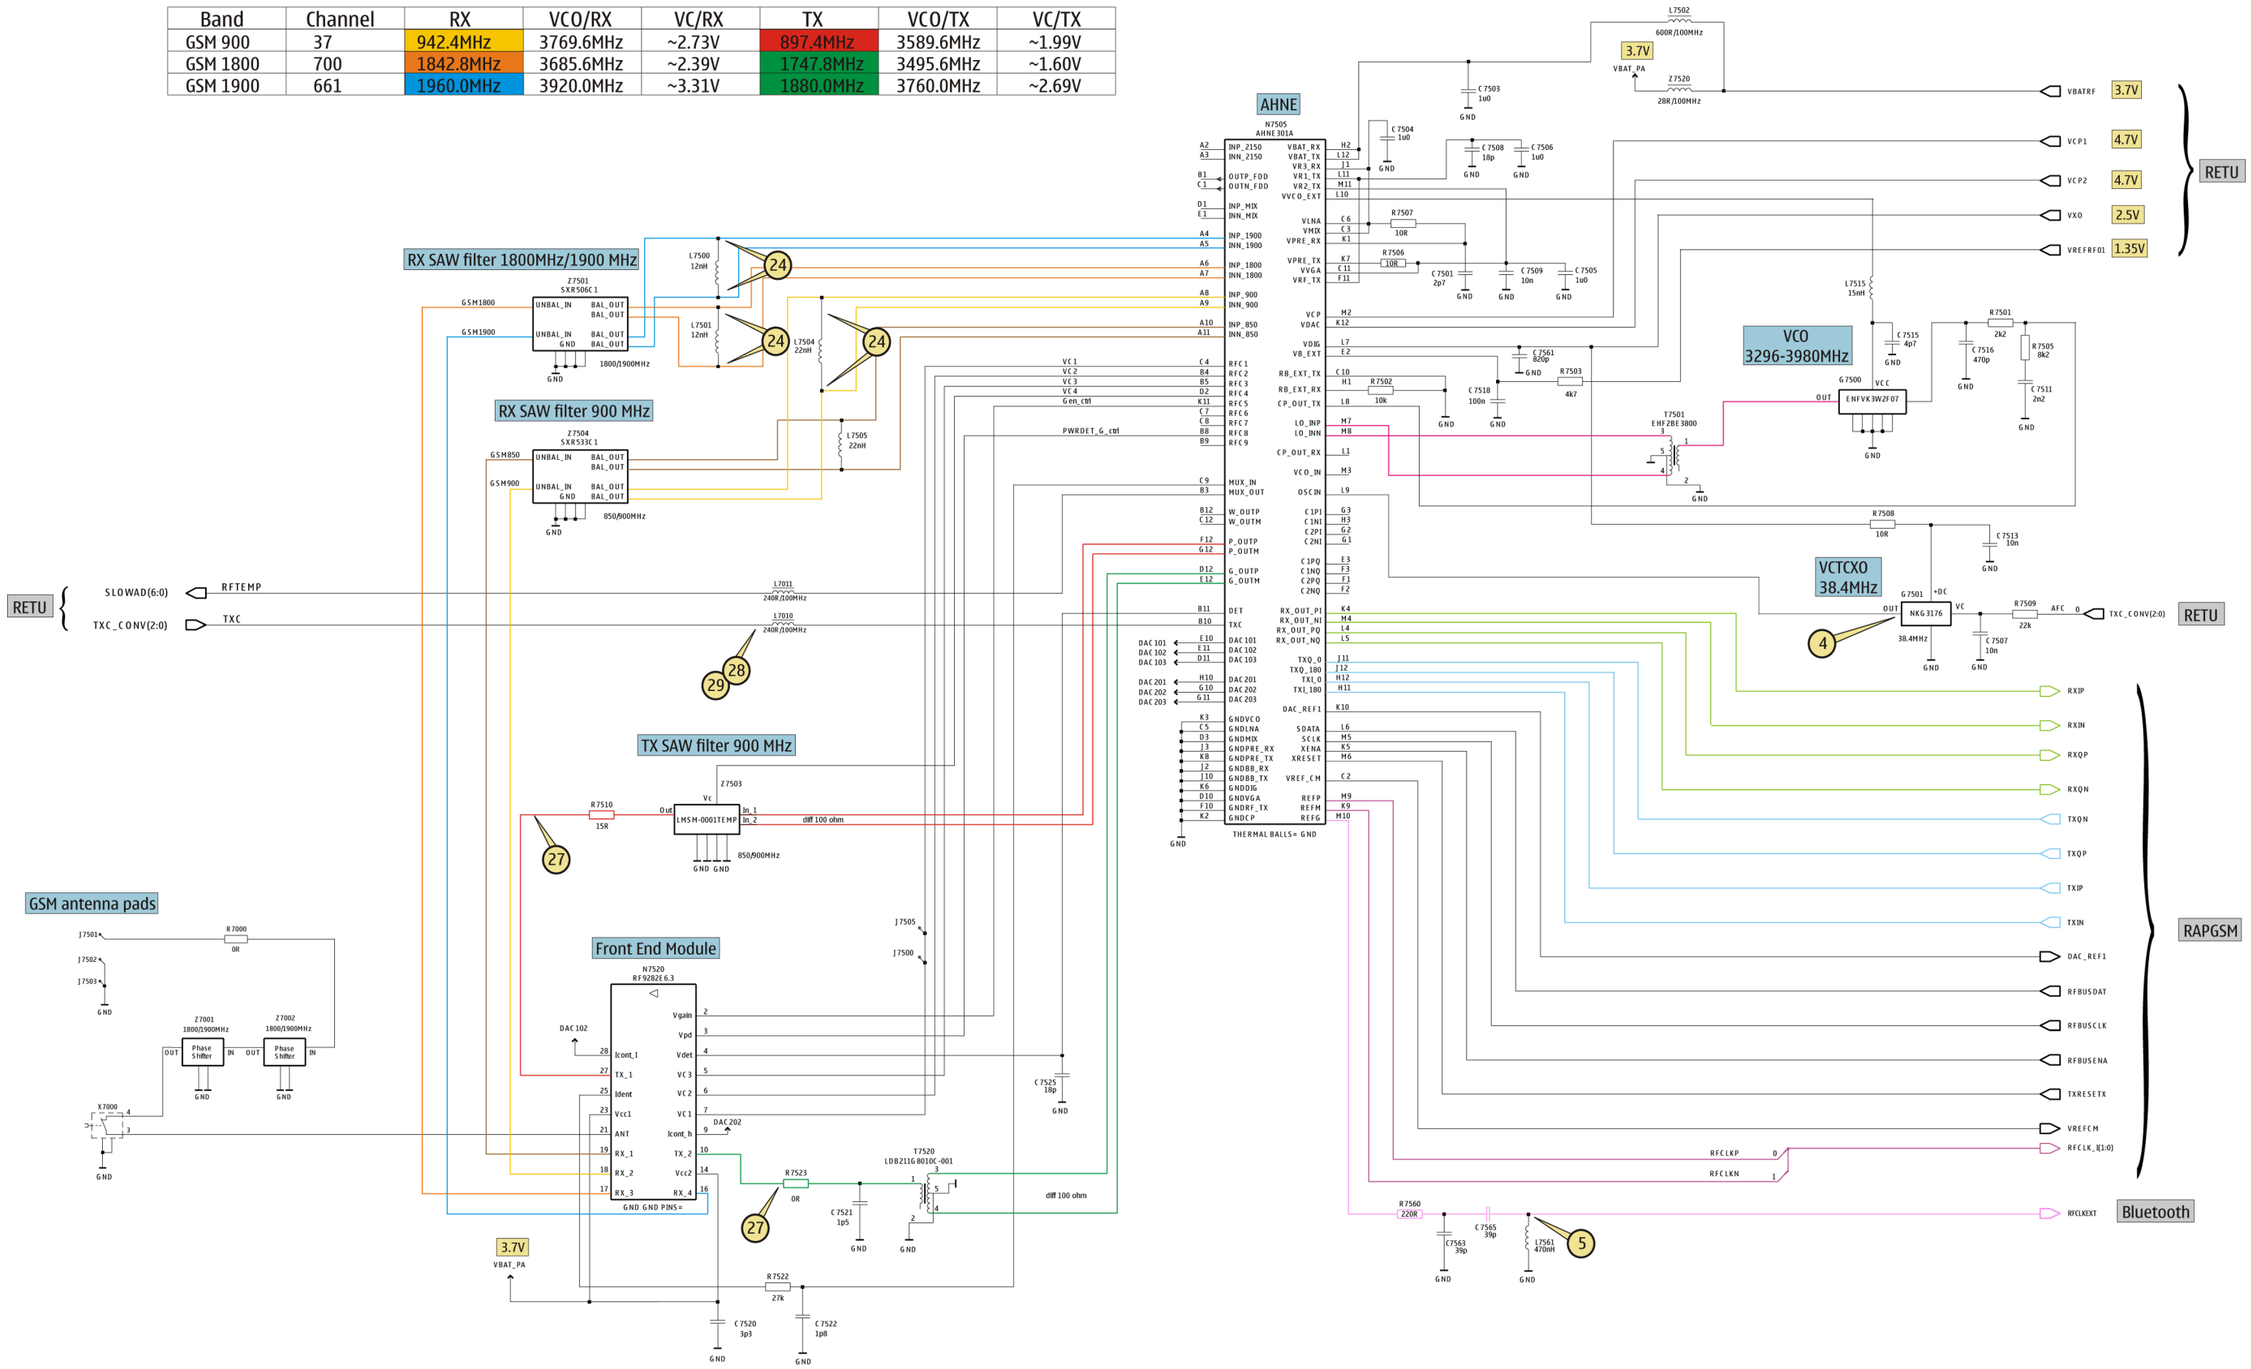

Copyright © 2006 Nokia. All rights reserved.

Signal overview

1) 32 kHz at C2209

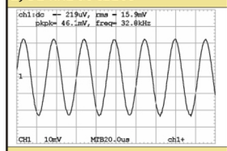

2) RFCLK at J2851-J2852

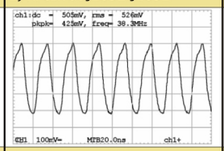

3) SLEEPCLK at J2217

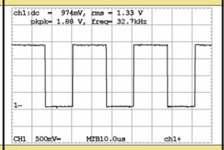

4) VCTCXO 38.4MHz at G7501

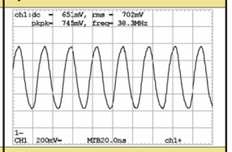

5) RFCLKEXT at L7561

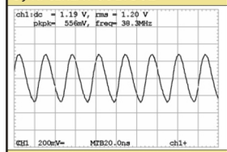

6) CBUSCLK at J2206

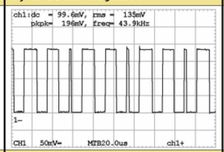

7) CBUSDA at J2207

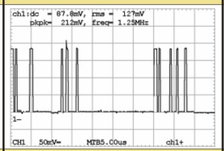

8) CBUSENX at J2209

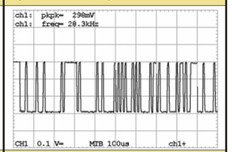

9) RFBUSCLK at J2833

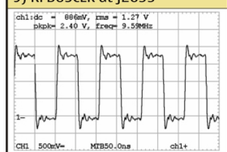

10) RFBUSDA at J2834

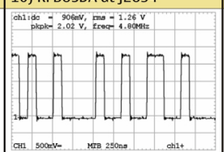

11) RFBUSSENX at J2835

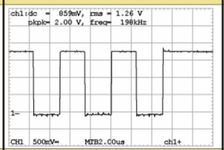

12) SDRCLK at J3001

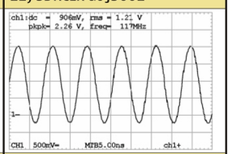

13) FLSCLK at J3004

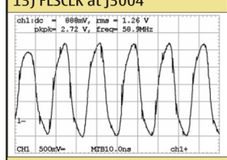

14) AUDIOCLK at J2200

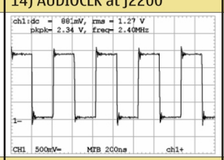

15) SMPSCLK at J2308

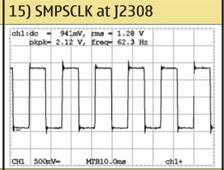

16) SIMCLK at J2213

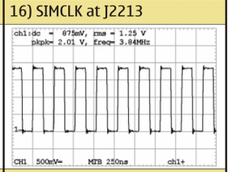

17) SIMDA at J2214

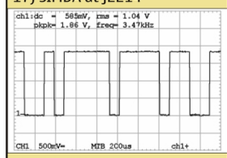

18) SIMIO at J2215

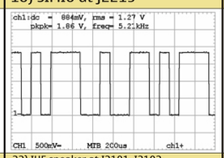

19) VSIM at C2701

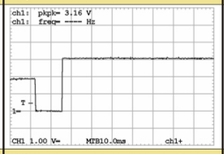

20) CAMCLK at J3302

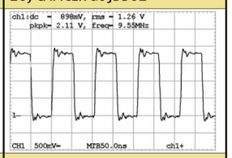

21) CAMENABLE at J3301

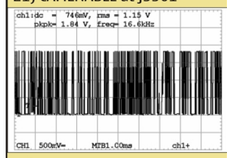

22) IHF speaker at J2101, J2102, J2105, J2106

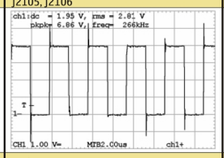

23) RXIQ GSM900 at J2828-J2831

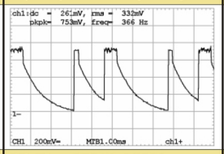

24) RX at L7500, L7501, L7504

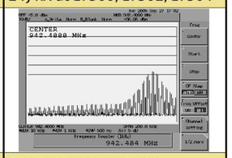

25) TXCCLK at J2210

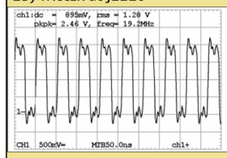

26) TXCDA at J2212

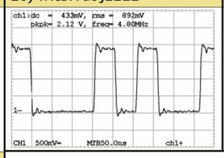

27) TX at R7510, R7523

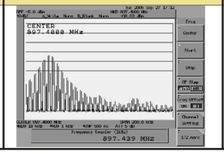

28) TXC PL19 at L7010

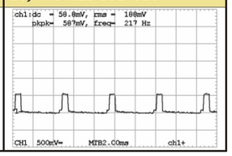

29) TXC PL5 at L7010

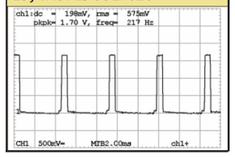

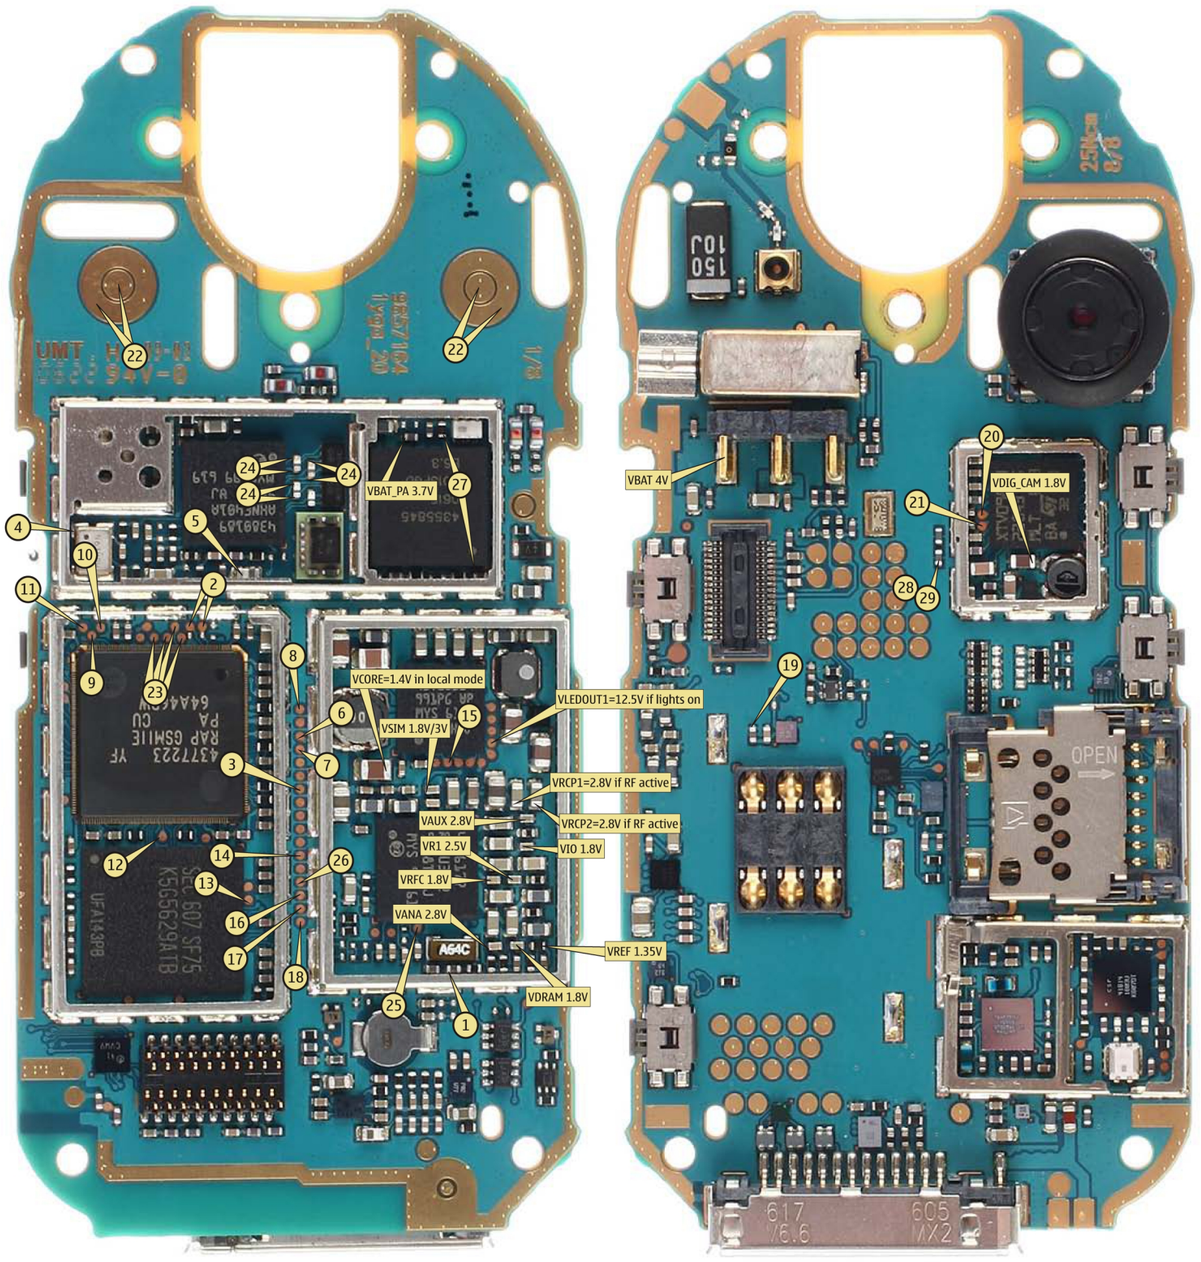

Copyright © 2006 Nokia. All rights reserved.

Component finder

B		C2213	M8	C2816	M5	C7505	I3	J2306	F7	T6002	N2	N6030	O2	R3300	H3
B2100	Q7	C2214	M8	C2818	M3	C7506	I3	J2307	F6	T6003	P2	N6156	Q4	R3301	H3
B2102	E3	C2215	M8	C2819	M4	C7507	I3	J2308	L7	T6004	N2	N7505	H4	R3306	H3
B2103	E8	C2216	L8	C2820	J3	C7508	I4	J2309	K8	T6005	O3	N7520	H7	R3307	H3
B2200	N7	C2217	N8	C2821	J3	C7509	H3	J2310	K8	**L**		**R**		R3312	O5
C		C2218	N7	C2830	J4	C7511	H3	J2311	L8	L2000	P3	R2000	P5	R3313	O5
C2000	P4	C2219	N8	C2831	J4	C7513	I3	J2312	K8	L2001	Q6	R2001	P6	R3314	M2
C2001	P4	C2220	L7	C3000	N2	C7515	G3	J2313	L8	L2002	Q7	R2002	P7	R6030	N3
C2002	P6	C2221	L9	C3001	N2	C7516	H3	J2314	K8	L2003	Q7	R2003	P7	R6031	O2
C2003	P6	C2222	L8	C3002	N2	C7518	I4	J2315	K8	L2004	Q6	R2004	P7	R6032	N2
C2004	P6	C2223	L6	C3003	M5	C7520	G7	J2316	L7	L2100	K6	R2005	P7	R6034	O3
C2005	P6	C2224	N6	C3004	M5	C7521	G7	J2400	I6	L2102	F6	R2006	P7	R6040	O2
C2006	P6	C2225	N8	C3005	N5	C7522	I7	J2401	I6	L2103	F5	R2007	Q6	R6041	K4
C2007	P7	C2226	M8	C3006	N5	C7523	G7	J2402	I6	L2104	K9	R2008	P6	R6156	O3
C2008	P7	C2227	L7	C3007	N5	C7524	I6	J2403	I5	L2105	K9	R2009	P6	R6159	N4
C2009	P7	C2228	M8	C3008	M5	C7525	I8	J2404	J6	L2106	L9	R2010	P5	R6160	N4
C2010	P7	C2229	L7	C3009	N5	C7560	H2	J2405	J5	L2107	L8	R2017	Q8	R6161	P4
C2011	P7	C2230	N8	C3100	K6	C7561	H3	J2406	J6	L2108	G8	R2070	H6	R7000	C8
C2012	P7	C2231	L6	C3200	M5	C7562	I5	J2407	J5	L2109	G9	R2100	P7	R7501	H3
C2013	P7	C2232	L8	C3201	L6	C7563	I4	J2408	I6	L2111	L9	R2101	Q8	R7502	G4
C2014	P7	C2273	L6	C3202	L5	C7564	G3	J2409	J6	L2112	G6	R2102	O7	R7503	I4
C2015	P6	C2274	L7	C3203	L6	C7565	I4	J2410	J6	L2113	G6	R2103	O7	R7505	H3
C2016	P5	C2275	L6	C3210	M5	C7566	H3	J2411	I5	L2202	M9	R2104	K6	R7506	H4
C2017	Q4	C2281	M8	C3300	I4	**D**		J2413	J5	L2203	M9	R2105	J6	R7507	G4
C2018	P5	C2300	J6	C3301	F4	D2200	M7	J2414	J6	L2204	N8	R2106	G6	R7508	H3
C2019	P6	C2301	J6	C3302	G4	D2800	K3	J2415	J5	L2205	N9	R2107	G5	R7509	I3
C2020	O8	C2302	L6	C3303	I4	D3000	N3	J2416	J6	L2206	M8	R2114	G8	R7510	I7
C2070	E8	C2303	J8	C3304	H4	D3300	H4	J2417	I5	L2272	L7	R2115	G9	R7522	I7
C2071	H7	C2304	L7	C3305	I4	**F**		J2418	I6	L2273	L6	R2200	N9	R7523	G7
C2072	O6	C2305	J9	C3306	I4	F2000	P3	J2419	I6	L2301	J6	R2201	N8	R7560	I5
C2073	H8	C2306	I9	C3307	I4	**G**		J2420	J8	L2302	K6	R2202	M6	**S**	
C2074	G8	C2307	J7	C3308	H4	G2200	O6	J2803	K2	L2304	J8	R2203	N6	S2401	H2
C2075	H7	C2309	J6	C3309	G4	G7500	G3	J2804	K2	L2305	J8	R2204	N6	S2402	J2
C2076	H7	C2312	J7	C3310	I4	G7501	I2	J2828	J4	L2306	I8	R2205	N6	S2403	I9
C2077	H6	C2313	J7	C3311	I4	**J**		J2829	J4	L2400	H6	R2206	N6	S2404	O9
C2078	E8	C2314	K8	C3313	I4	J2000	Q3	J2830	J3	L2401	H6	R2207	N6	**T**	
C2079	H8	C2315	K9	C3314	H4	J2001	P7	J2831	J3	L2402	Q4	R2208	N6	T7501	H3
C2100	P8	C2400	K7	C6001	P3	J2003	P6	J2833	J2	L2403	Q5	R2209	N6	T7520	G8
C2101	P7	C2401	J7	C6002	P3	J2004	P8	J2834	J3	L2404	O5	R2212	M6	**V**	
C2102	P8	C2402	P5	C6031	P2	J2005	P5	J2835	J2	L3200	L5	R2213	N8	V2000	P4
C2103	O7	C2403	J8	C6032	N3	J2006	P7	J2851	J4	L3201	L6	R2214	N8	V2001	O6
C2104	O7	C2404	I7	C6033	N3	J2010	R3	J2852	J4	L3202	L5	R2216	N8	V2302	I8
C2105	H6	C2405	I7	C6034	O3	J2011	O6	J3000	O4	L3301	H4	R2307	H8	V2401	P9
C2106	G6	C2406	I7	C6035	N2	J2060	O7	J3001	M3	L3303	I3	R2401	O5	V2402	O9
C2107	G8	C2407	I7	C6036	N3	J2100	O8	J3002	L2	L6030	O2	R2404	J9	**X**	
C2108	K9	C2408	H7	C6037	N2	J2101	E3	J3003	O3	L6031	O2	R2405	J3	X2000	Q3
C2109	K9	C2409	Q3	C6039	O3	J2102	E3	J3004	M5	L6032	O2	R2406	J9	X2001	Q6
C2110	K9	C2410	Q4	C6040	N2	J2103	Q7	J3005	M5	L6077	P3	R2407	P9	X2060	H6
C2111	F5	C2413	H6	C6041	P3	J2104	Q7	J3006	M4	L6156	O4	R2408	P9	X2070	G7
C2112	K8	C2414	I7	C6042	O2	J2105	E8	J3112	O6	L6176	P5	R2409	N9	X2400	P4
C2113	K9	C2415	Q4	C6051	O2	J2106	E8	J3113	P7	L7000	C8	R2410	J8	X2402	I8
C2114	K9	C2416	Q5	C6052	O3	J2200	M5	J3114	P8	L7001	C8	R2411	J3	X2700	M7
C2117	N8	C2418	K3	C6157	N4	J2201	L5	J3115	O7	L7010	I5	R2412	J3	X2705	K8
C2118	M8	C2419	J3	C6158	N4	J2202	L5	J3116	P7	L7011	I5	R2413	J3	X2706	N8
C2119	N8	C2420	J4	C6159	P3	J2203	L5	J3117	P7	L7500	H5	R2414	J4	X2707	M5
C2120	N8	C2700	K7	C6162	N4	J2204	N6	J3200	K5	L7501	H5	R2415	K4	X2708	O5
C2124	M9	C2701	K7	C6163	O5	J2205	N7	J3201	K6	L7502	I4	R2417	P6	X3200	L3
C2126	N9	C2800	L5	C6164	O3	J2206	K5	J3202	L5	L7503	I7	R2421	K8	X3300	F3
C2127	M8	C2801	J4	C6165	P3	J2207	K5	J3203	K6	L7504	H5	R2700	K7	X7000	E7
C2200	M6	C2802	K5	C6167	O5	J2209	K5	J3300	I3	L7505	H5	R2701	K7	**Z**	
C2201	M8	C2803	L5	C6170	O5	J2210	N7	J3301	H4	L7515	G3	R2801	K5	Z2000	Q5
C2202	N9	C2804	J5	C6176	P4	J2212	M5	J3302	H4	L7561	I5	R2803	L5	Z2001	Q6
C2203	N7	C2805	M2	C6178	O5	J2213	M5	J6005	P3	**M**		R2804	L5	Z2003	Q5
C2204	N7	C2807	J5	C6179	O5	J2214	N5	J6006	P2	M2100	F7	R3000	M2	Z2400	O3
C2205	N6	C2808	J5	C6188	P4	J2215	N5	J6007	P2	**N**		R3002	K5	Z6030	P2
C2206	N7	C2809	K5	C6189	P4	J2216	L5	J7500	H8	N2000	O8	R3003	M3	Z7001	D7
C2207	N8	C2810	L5	C6190	N4	J2217	L5	J7501	C8	N2001	P8	R3004	M4	Z7002	D7
C2208	N7	C2811	M2	C6191	N3	J2218	K5	J7502	C8	N2101	M9	R3200	L5	Z7501	G6
C2209	N7	C2812	K5	C7501	G4	J2219	L5	J7503	B8	N2300	K7	R3201	K5	Z7503	I6
C2210	L8	C2813	J2	C7502	I4	J2220	M5	J7505	H8	N2301	K9	R3202	K6	Z7504	H6
C2211	L8	C2814	J5	C7503	I3	J2221	M5	T6000	N2	N3200	L6	R3203	M5	Z7520	G6
C2212	L7	C2815	L5	C7504	G4	J2300	L7	T6001	P2	N3300	I4	R3204	M5		

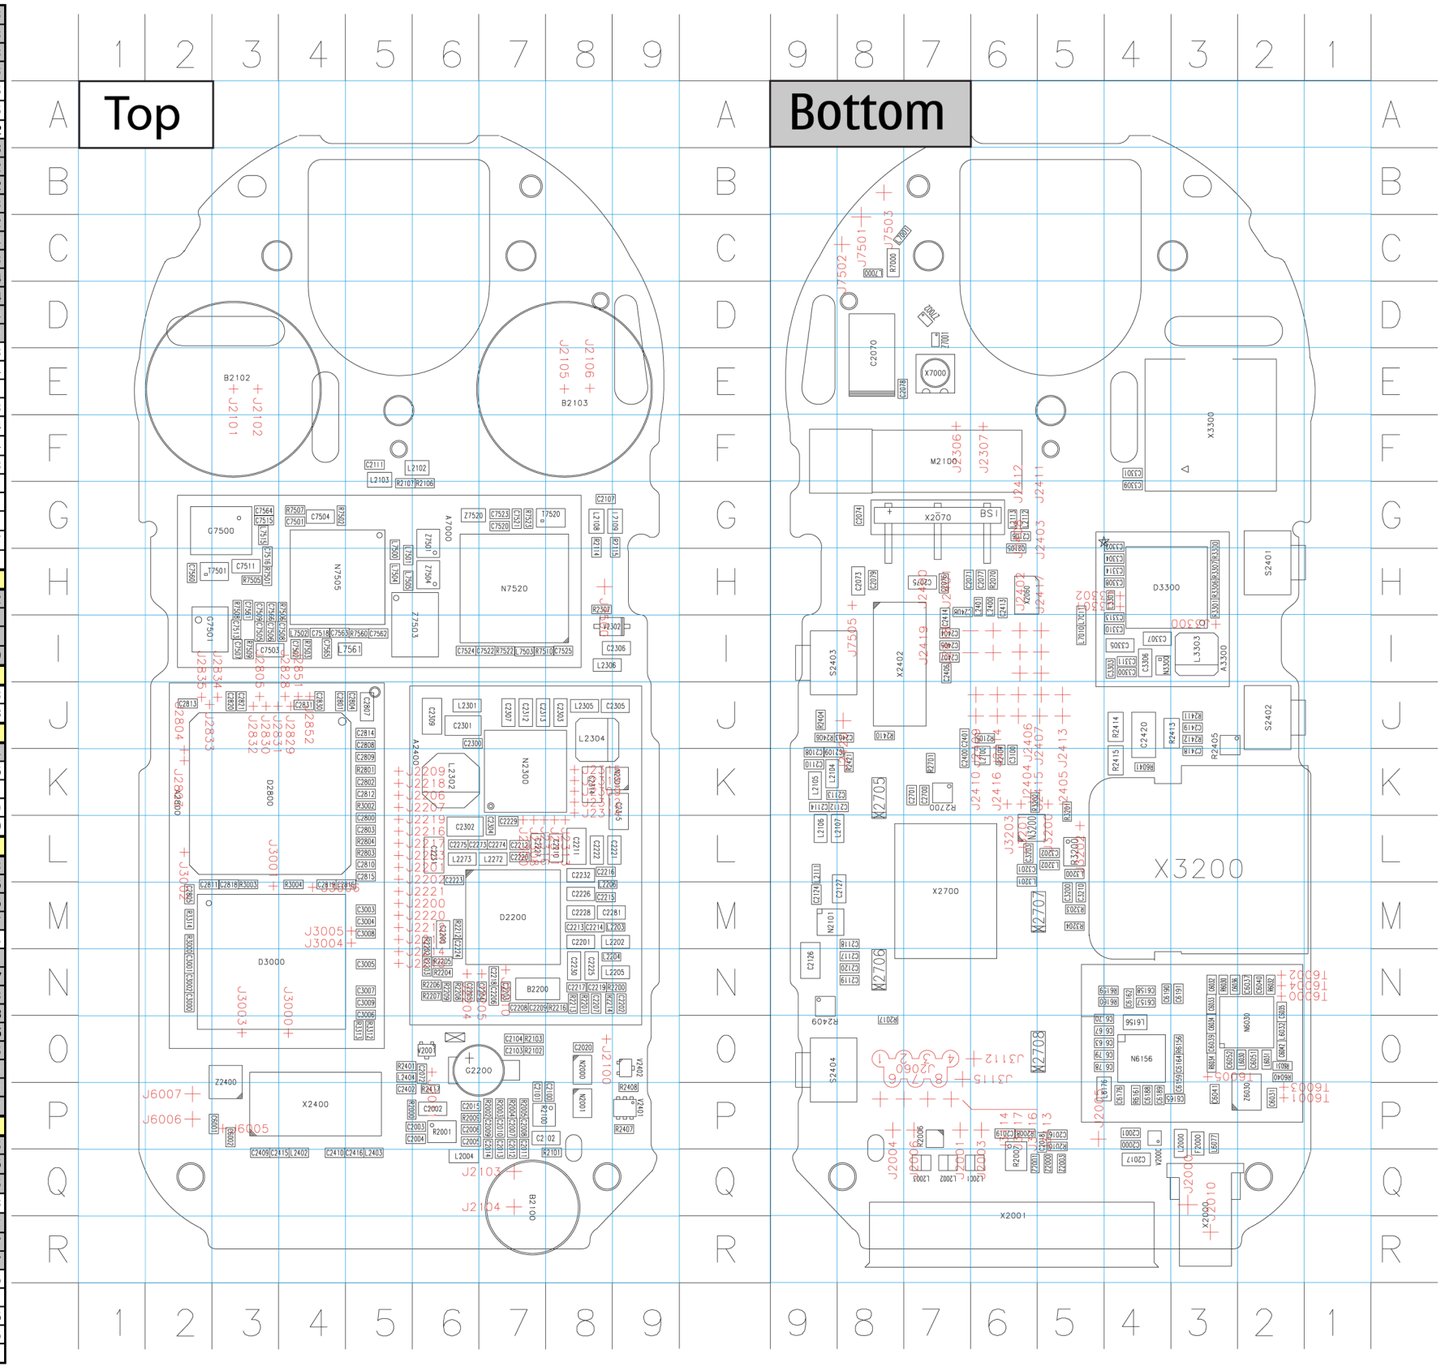

Copyright © 2006 Nokia. All rights reserved.

Glossary

Copyright © 2006 Nokia. All rights reserved.

(This page left intentionally blank.)

Copyright © 2006 Nokia. All rights reserved.

A/D-converter	Analog-to-digital converter
ACI	Accessory Control Interface
ADC	Analog-to-digital converter
ADSP	Application DPS (expected to run high level tasks)
AGC	Automatic gain control (maintains volume)
ALS	Ambient light sensor
AMSL	After Market Service Leader
ARM	Advanced RISC Machines
ARPU	Average revenue per user (per month or per year)
ASIC	Application Specific Integrated Circuit
ASIP	Application Specific Interface Protector
B2B	Board to board, connector between PWB and UI board
BB	Baseband
BC02	Bluetooth module made by CSR
BIQUAD	Bi-quadratic ,type of filter function)
BSI	Battery Size Indicator
BT	Bluetooth
CBus	MCU controlled serial bus connected to UPP_WD2,UEME and Zocus
CCP	Compact Camera Port
CDSP	Cellular DSP (expected to run at low levels)
CLDC	Connected limited device configuration
CMOS	Complimentary metal-oxide semiconductor circuit (low power consumption)
COF	Chip on Foil
COG	Chip on Glass
CPU	Central Processing Unit
CSR	cambridge silicon radio
CSTN	Color Super Twisted Nematic
CTSI	Clock Timing Sleep and interrupt block of Tiku
CW	Continuous wave
D/A-converter	Digital-to-analouge converter
DAC	Digital-to-analouge converter
DBI	Digital Battery Interface
DBus	DSP controlled serial bus connected between UPP_WD2 and Helgo
DCT-4	Digital Core Technology
DMA	Direct memory access
DP	Data Package

Copyright © 2006 Nokia. All rights reserved.

DPLL	Digital Phase Locked Loop
DSP	Digital Signal Processor
DtoS	Differential to Single ended
EDGE	Enhanced data rates for global/GSM evaluation
EGSM	Extended GSM
EM	Energy management
EMC	Electromagnetic compability
EMI	Electromagnetic interference
ESD	Electrostatic discharge
FCI	Functional cover interface
FPS	Flash Programming Tool
FR	Full rate
FSTN	Film compensated super twisted nematic
GND	Ground, conductive mass
GPIB	General-purpose interface bus
GPRS	General Packet Radio Service
GSM	Group Special Mobile/Global System for Mobile communication
HF	Hands free
HFCM	Handsfree Common
HS	Handset
HSCSD	High speed circuit switched data (data transmission connection faster than GSM)
HW	Hardware
I/O	Input/Output
IBAT	Battery current
IC	Integrated circuit
ICHAR	Charger current
IF	Interface
IHF	Integrated hands free
IMEI	International Mobile Equipment Identity
IR	Infrared
IrDA	Infrared Data Association
ISA	Intelligent software architecture
JPEG/JPG	Joint Photographic Experts Group
LCD	Liquid Crystal Display
LDO	Low Drop Out
LED	Light-emitting diode

Copyright © 2006 Nokia. All rights reserved.

LPRF	Low Power Radio Frequency
MCU	Micro Controller Unit (microprocessor)
MCU	Multiport control unit
MIC, mic	Microphone
MIDP	Mobile Information Device Profile
MIN	Mobile identification number
MIPS	Million instructions per second
MMC	Multimedia card
MMS	Multimedia messaging service
NTC	Negative temperature coefficient, temperature sensitive resistor used as a temperature sensor
OMA	Object management architechture
OMAP	Operations, maintenance, and administartion part
Opamp	Operational Amplifier
PA	Power amplifier
PDA	Pocket Data Application
PDA	Personal digital assistant
PDRAM	Program/Data RAM (on chip in Tiku)
Phoenix	Software tool of DCT4.x
PIM	Personal Information Management
PLL	Phase locked loop
PM	(Phone) Permanent memory
PUP	General Purpose IO (PIO), USARTS and Pulse Width Modulators
PURX	Power-up reset
PWB	Printed Wiring Board
PWM	Pulse width modulation
RC-filter	Resistance-Capacitance filter
RF	Radio Frequency
RF PopPort TM	Reduced function PopPortTM interface
RFBUS	Serial control Bus For RF
RSK	Right Soft Key
RS-MMC	Reduced size Multi Media Card
RSSI	Receiving signal strength indicator
RST	Reset Switch
RTC	Real Time Clock (provides date and time)
RX	Radio Receiver

Copyright © 2006 Nokia. All rights reserved.

SARAM	Single Access RAM
SAW filter	Surface Acoustic Wave filter
SDRAM	Synchronous Dynamic Random Access Memory
SID	Security ID
SIM	Subscriber Identity Module
SMPS	Switched Mode Power Supply
SNR	Signal-to-noice ratio
SPR	Standard Product requirements
SRAM	Static random access memory
STI	Serial Trace Interface
SW	Software
SWIM	Subscriber/Wallet Identification Module
TCXO	Temperature controlled Oscillator
Tiku	Finnish for Chip, Successor of the UPP, Official Tiku3G
TX	Radio Transmitter
UART	Universal asynchronous receiver/transmitter
UEME	Universal Energy Management chip (Enhanced version)
UEMEK	See UEME
UI	User Interface
UPP	Universal Phone Processor
UPP_WD2	Communicator version of DCT4 system ASIC
USB	Universal Serial Bus
VBAT	Battery voltage
VCHAR	Charger voltage
VCO	Voltage controlled oscillator
VCTCXO	Voltage Controlled Temperature Compensated Crystal Oscillator
VCXO	Voltage Controlled Crystal Oscillator
Vp-p	Peak-to-peak voltage
VSIM	SIM voltage
WAP	Wireless application protocol
WD	Watchdog
XHTML	Extensible hypertext markup language
Zocus	Current sensor, (used to monitor the current flow to and from the battery)

Copyright © 2006 Nokia. All rights reserved.